



How to setup L2TP over IPsec on the DFL-series


Topology:

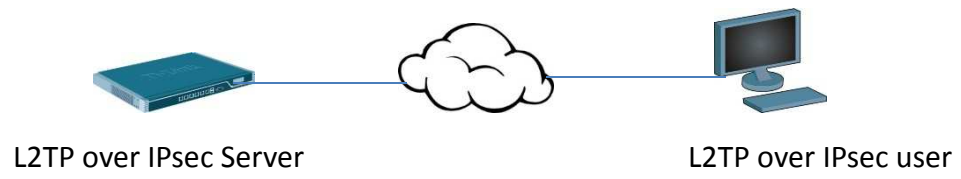

(1) Add 2 address object "l2tp-server" and "l2tp-pool".

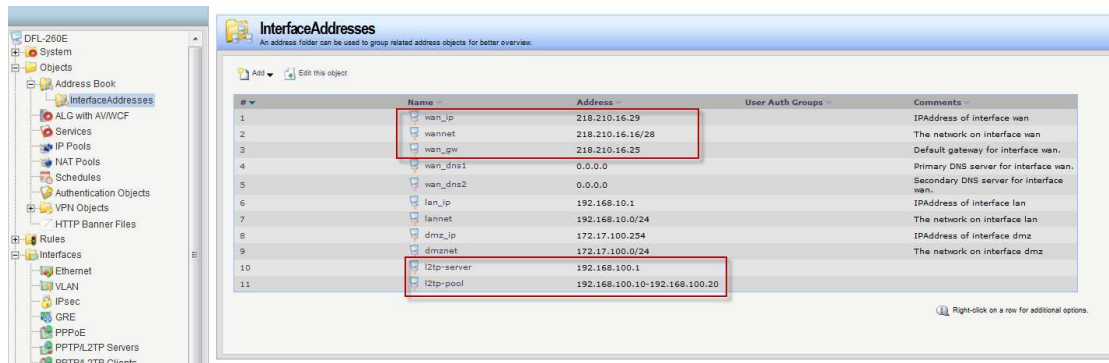

(2) Add a new pre-share key.

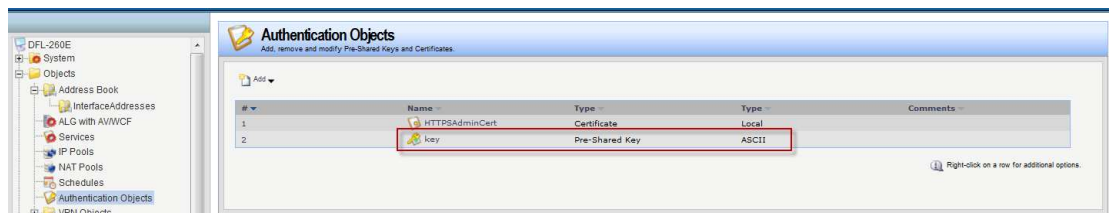





(3) Add a new IPsec interface.

Local network "wan-IP"

Remote network "all-nets"

Mode "transport"

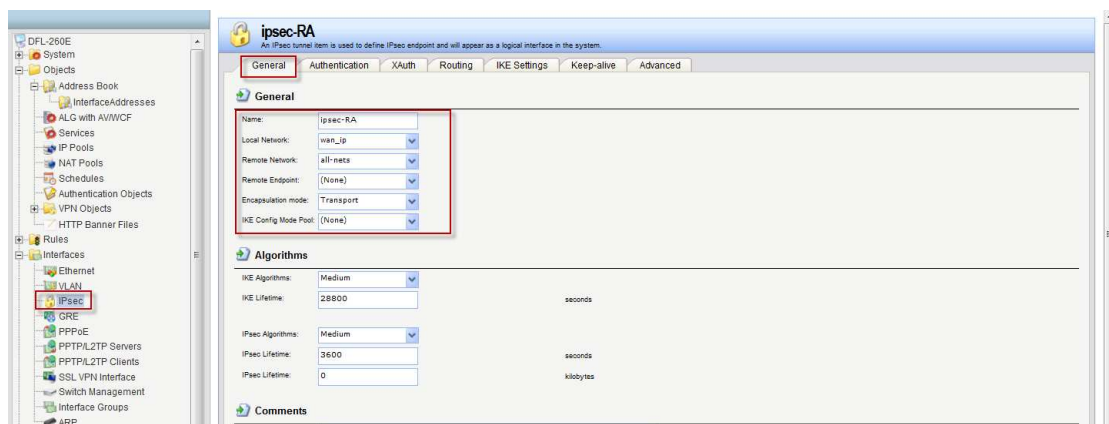

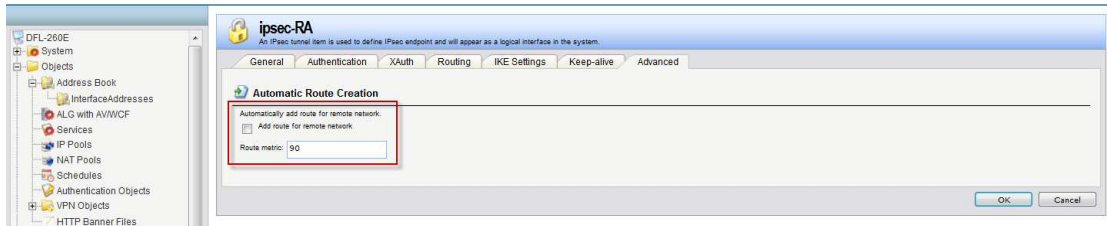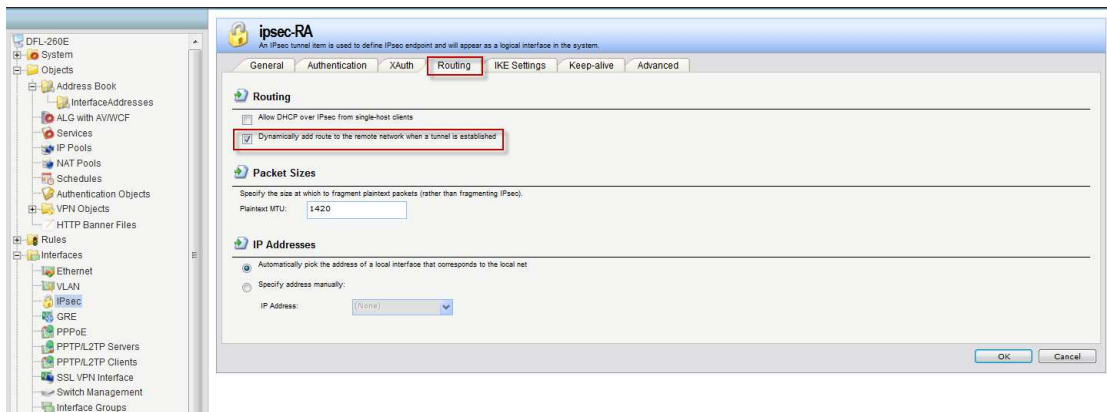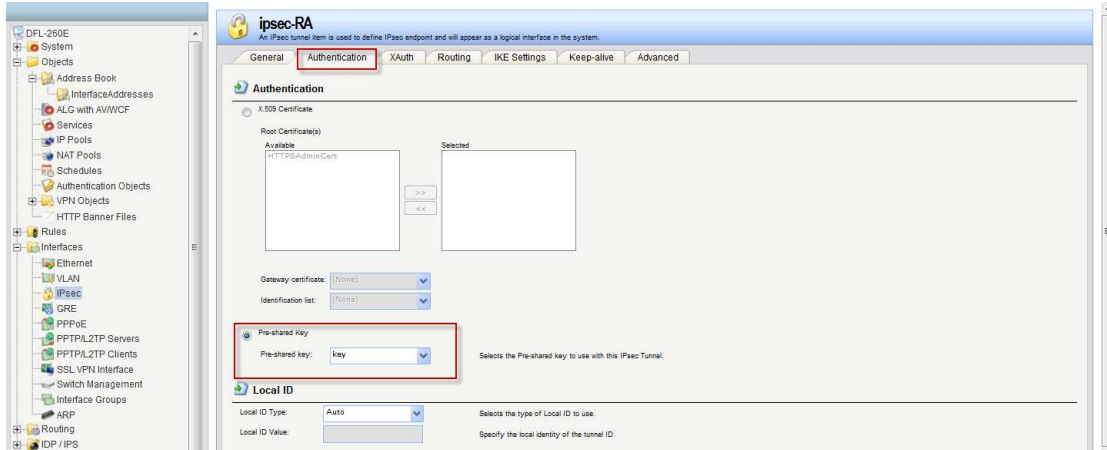


(4) Add a new LTP server interface.



Inner IP address: "L2TP-server"

Tunnel protocol: "L2TP"

Outer interface: "IPsec-RA"


Server IP: "WAN_IP"

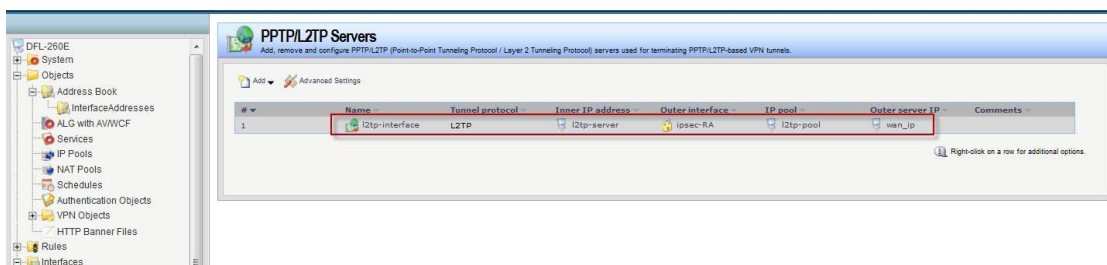

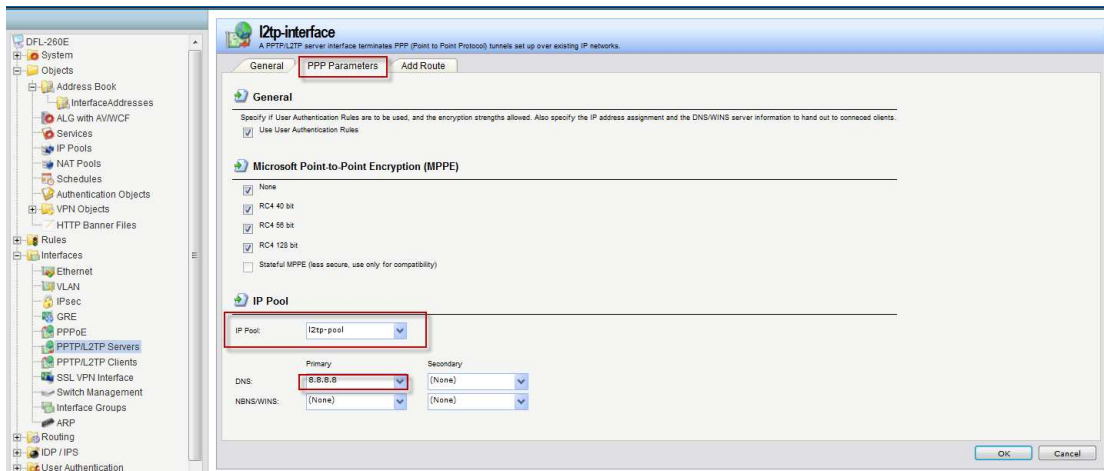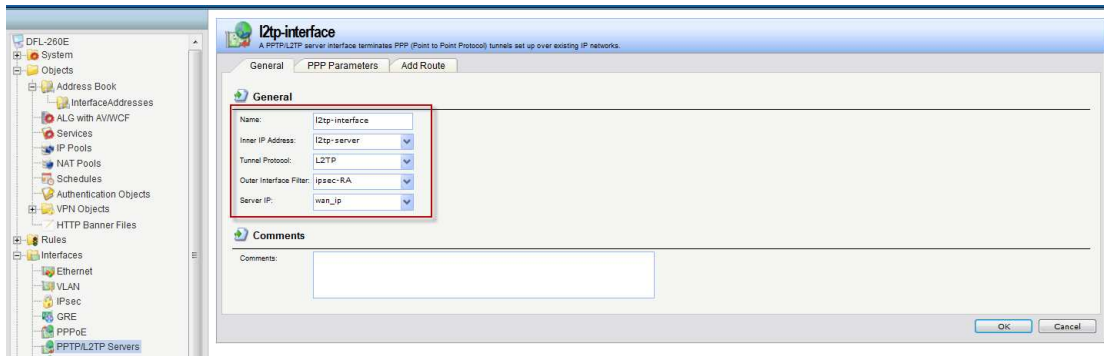


(5)



Add a new interface group for “L2TP-interface” and “LAN”.

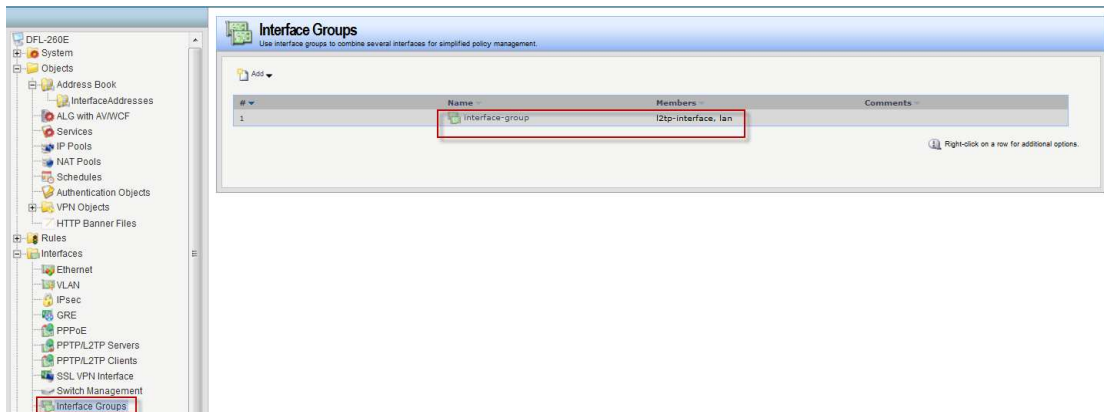


(5) Add a new IP rule for L2TP user.

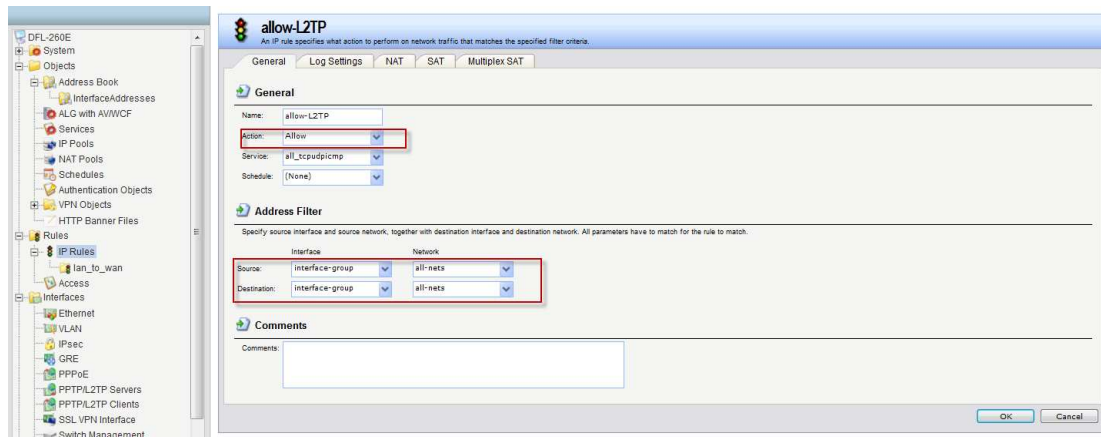

(6) Add new L2TP user account.

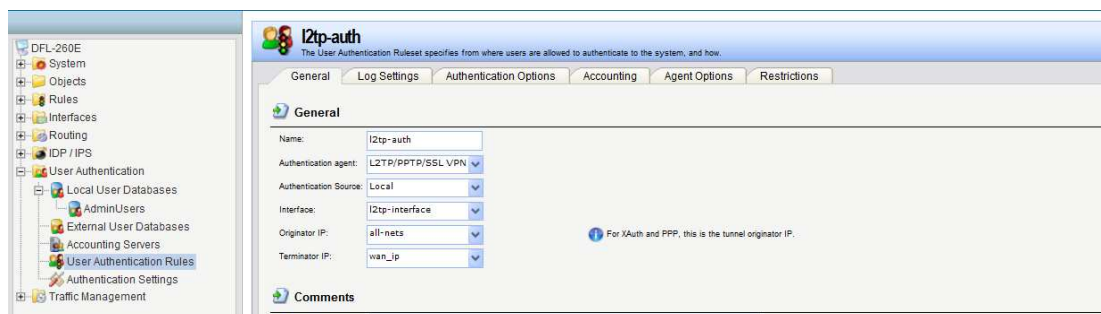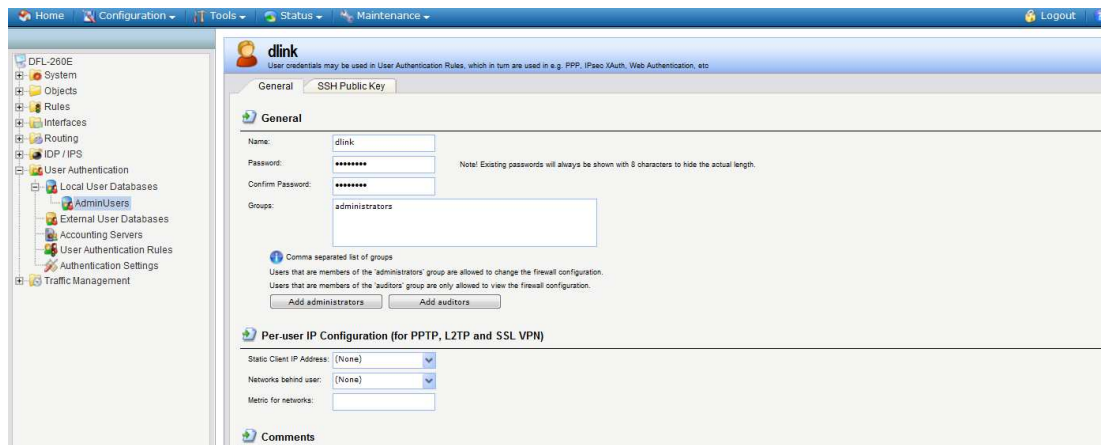

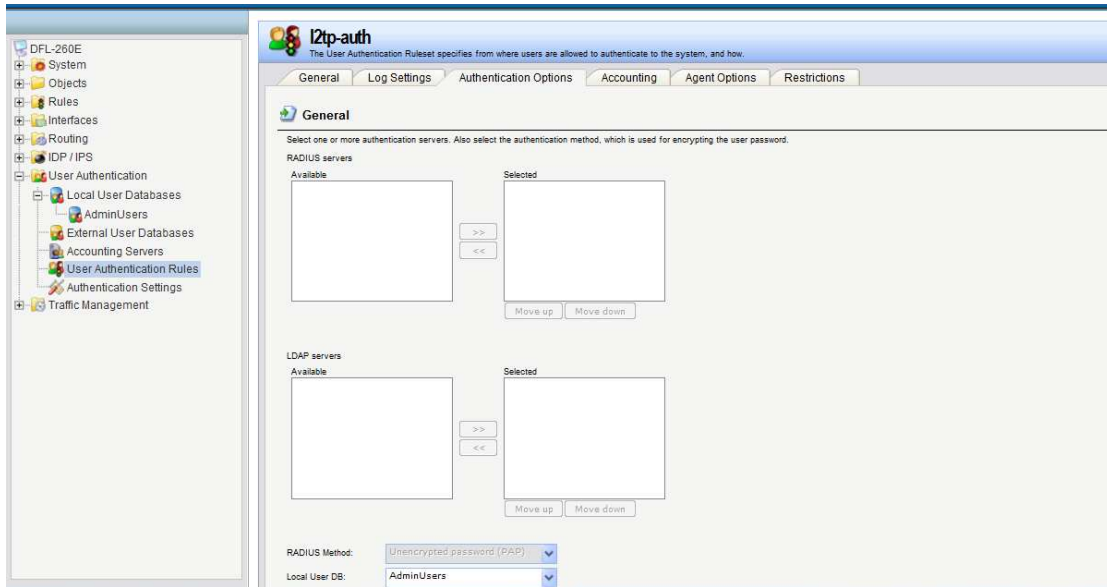

END