

**Disable WebGUI**

#STEP1. Show the current settings of Remote Management:  
DFL-210:/> show RemoteManagement RemoteMgmtHTTP

Name	Interface	Network
RemoteMgmtHTTP_1	any	all-nets

#STEP2. Disable the listed entry, and issue the command of "save".

DFL-210:/> set RemoteManagement RemoteMgmtHTTP RemoteMgmtHTTP\_1 -disable  
DFL-210:/> save  
.....(omit system message, DFL is reconfiguring)  
#STEP3. Issue the command of "activate" for committing the previous change.  
DFL-210:/>activate

**Enable WebGUI**

#STEP1. Enable the listed entry, and issue the command of "save".

DFL-210:/> set RemoteManagement RemoteMgmtHTTP RemoteMgmtHTTP\_1 -enable  
DFL-210:/> save  
.....(omit system message, DFL is reconfiguring)  
#STEP2. Issue the command of "activate" for committing the previous change.  
DFL-210:/>activate