How to access the USB storage in DSR series

To access the USB storage in DSR, we did the following testing

[Topology]:


PC1------Kingston USB


PC1: Windows Vista

Firmware: 1.03B12.

[Configuration]:


Select the **Enable sharing** function.

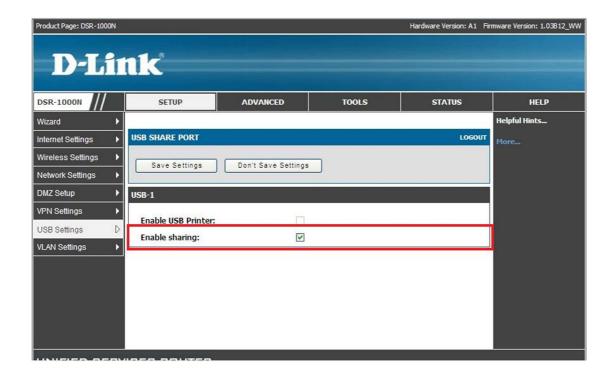

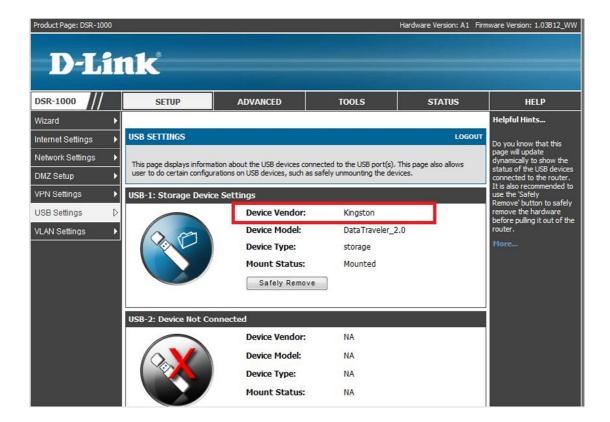


[Testing procedure]:

1. Type the Run from the Startup menu .

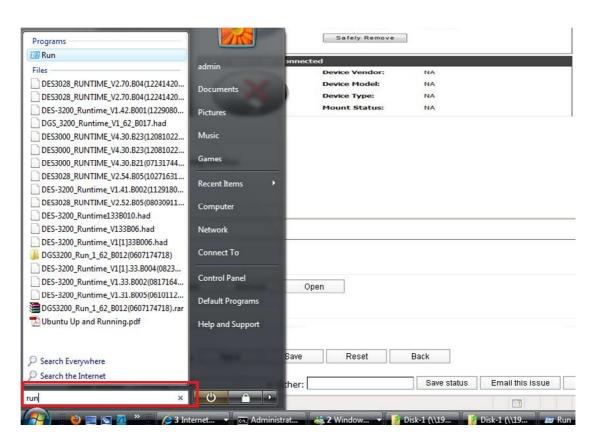

2. You can see the Disk 1 folder as follows

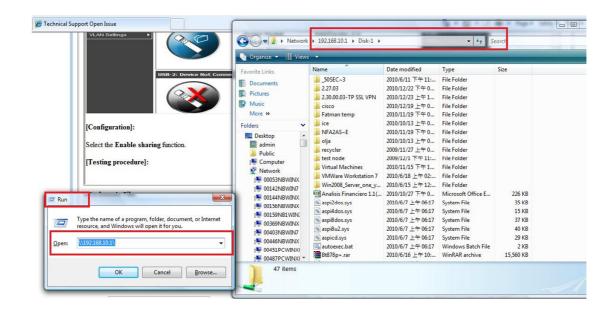

In addition, this method **is NOT** working in **Windows XP** currently firmware and regarding testing result