## How to set port forwarding on DSR\_1000


## [Topology]:

**Server**(192.168.10.10)--(192.168.10.1)**DSR-1000N**(118.166.226.112)—**PC(124.8.81.2 21)** 


## [Firmware]:


Firmware:1.0.3B09

## [Configuration]:

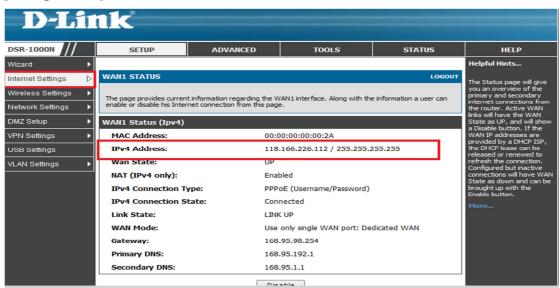

Under ADVANCED->Firewall Settings-> Firewall Rules, Click Add.

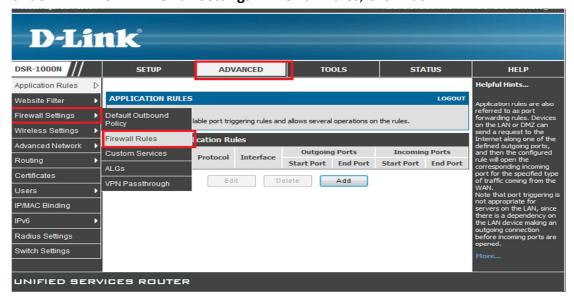

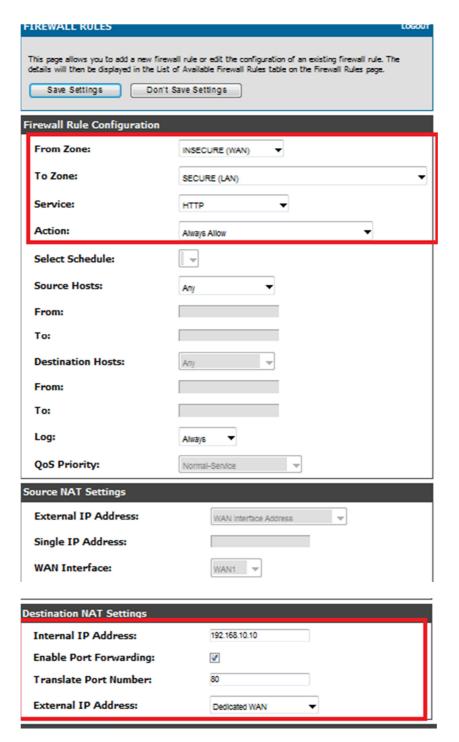

[Testing result]:

