

how to use AP Provisioning on DWS-3160 or 4026?

Topology:


DWS-3160A,B Firmware : 4.2.0.7 DWS-4026 Firmware : 4.3.0.1 DWL-6600AP Firmware : 4.2.0.9

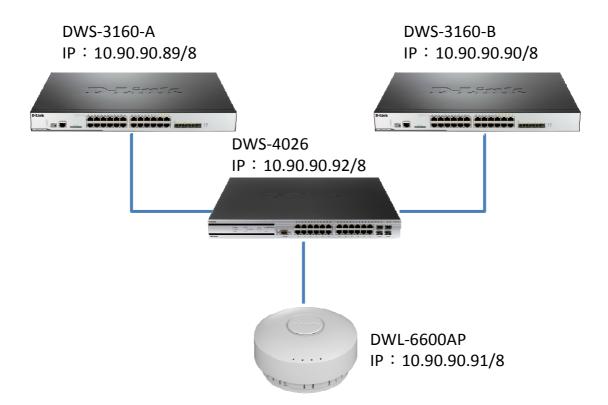


Step 1. Go to peer switch and make DWS-3160A and DWS-3160B to be cluster on DWS-3160A(master).

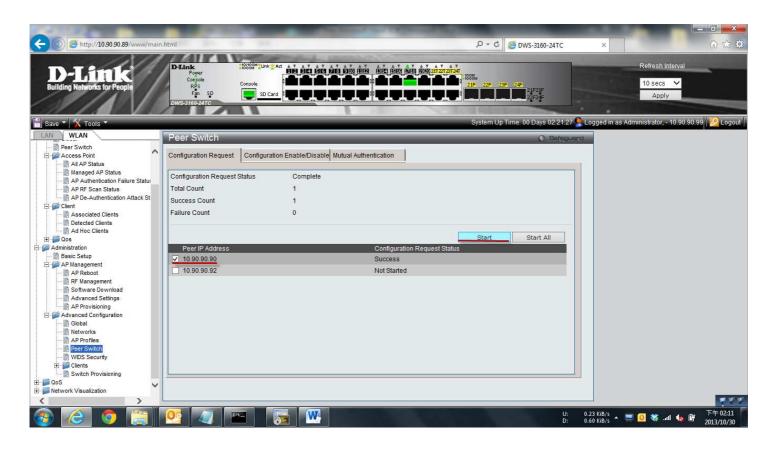


Step 2. Set up AP to be managed by DWS-3160A.

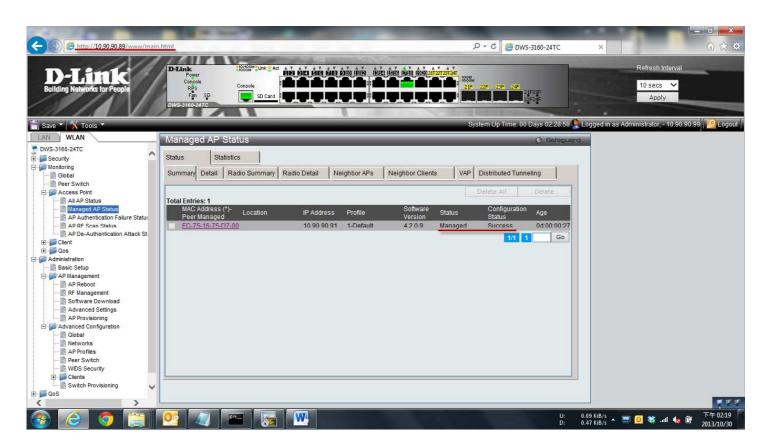


Step 3. Set up AP to be managed by DWS-3160B.

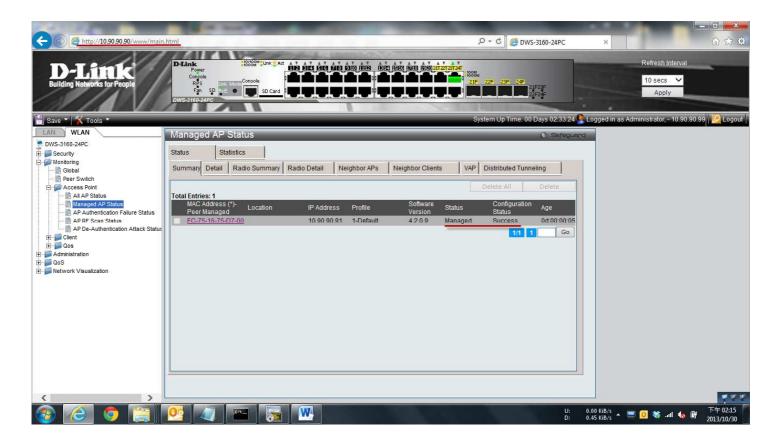


Step 4. Go to Provisioning and click the AP MAC address.

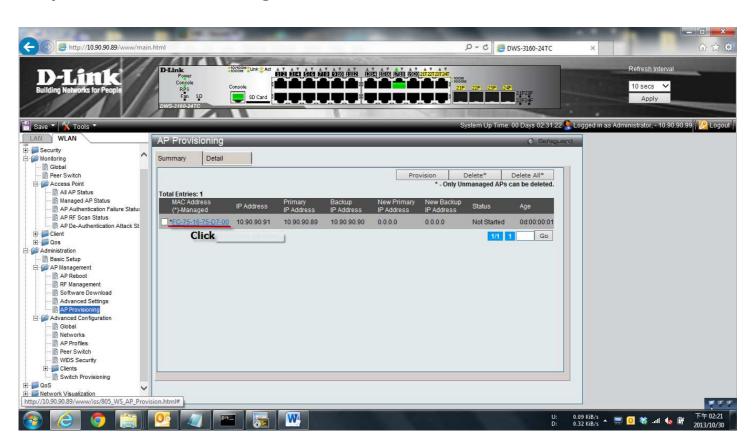

Step 5. Setup the New Primary IP address to be 10.90.90.89 and New Backup IP address to be 10.90.90.90.

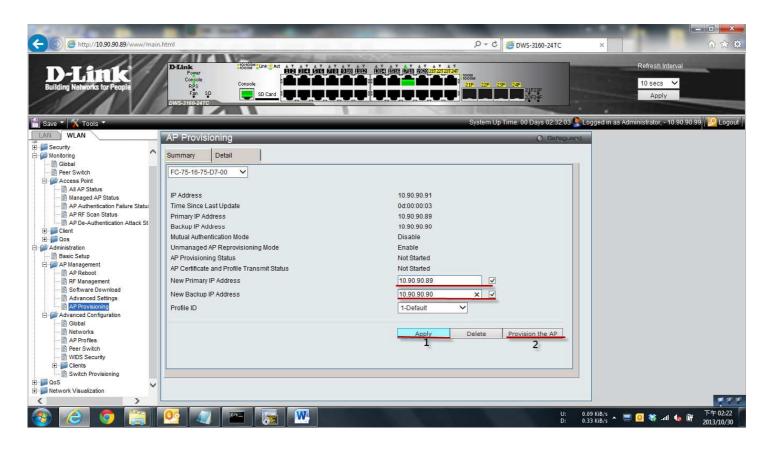

Step 6. Go to AP Reboot page and reboot the AP.

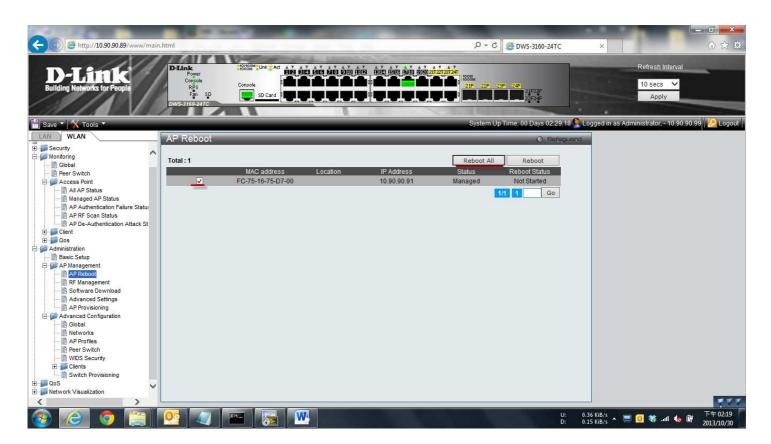


Result: After reboot the AP, AP will be managed on DWS-3160A

Because we set up the DWS-3106A to be primary switch.



But if the DWS-3160-A is link down, the AP will be managed on DWS-3160B, Since we set up the DWS-3160B to be backup switch.

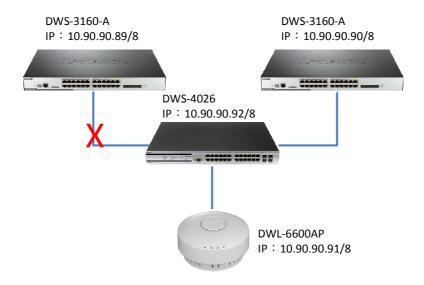



Jarvis

PS. Even we set up the switch IP address 1 to be 10.90.90.90(DWS-3160A) and switch IP address 2 to be 10.90.90.90.89(DWS-3160B).

After reboot AP, the AP still follow the AP Provisioning setting(DWS-3160A->DWS-3160B)

