

# How to set up the initiator connection in DSN

## [Topology]:


WindowsXP(192.168.10.200)-----Ethernet Port 0 (192.168.10.2)DSN-1100  
Ethernet Port 1 (192.168.11.2)DSN-1100  
Management\_IP(192.168.1.1)DSN-1100

## [Configuration]:


1.Go to the following webpage:

<http://www.microsoft.com/downloads/details.aspx?familyid=12cb3c1a-15d6-4585-b385-befd1319f825&displaylang=en> and download the


Initiator-2.08-build3825-x86fre.exe .

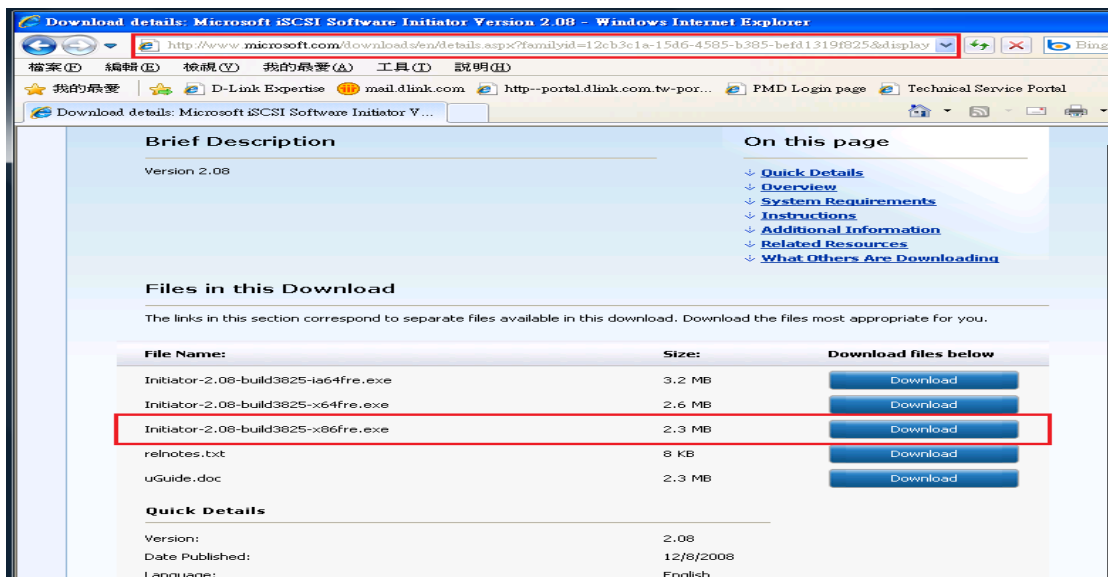


2. Double click the Initiator-2.08-build3825-x86fre.exe, and the Software Update Installation Wizard will be pop-up. Click the Next.

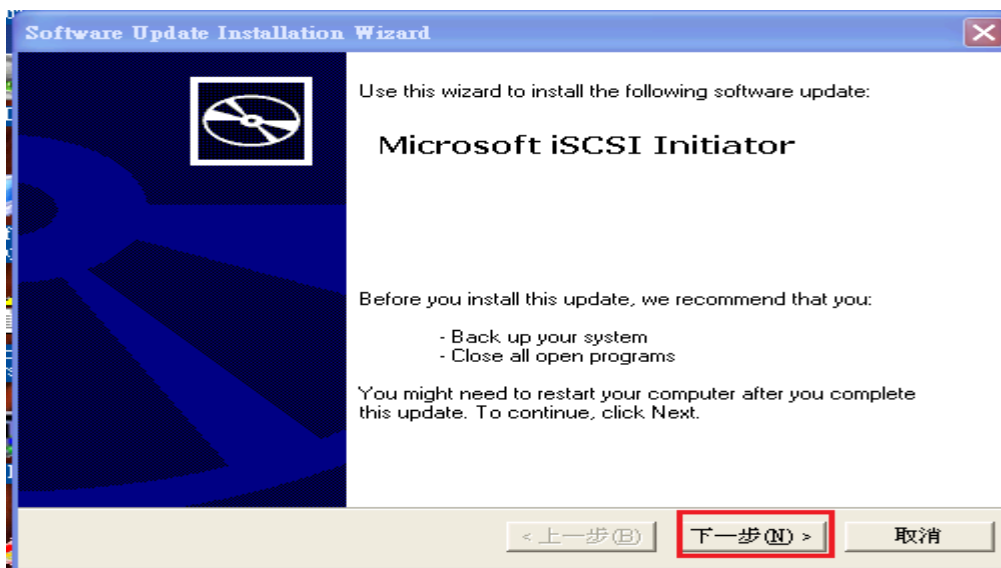


3. Select Initiator Service and Software Initiator and then click the Next.

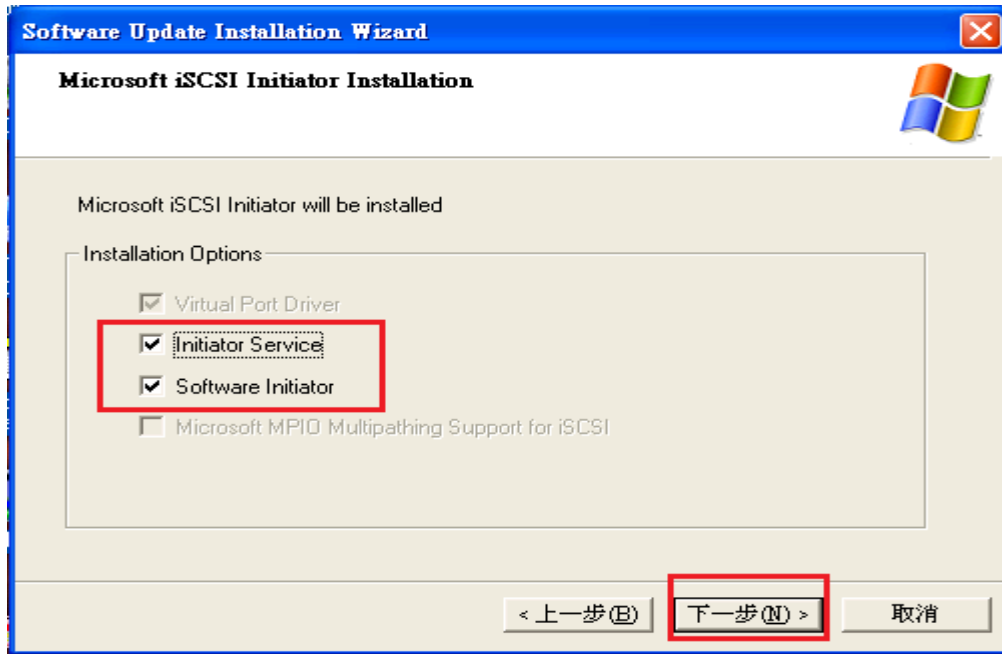


4. Select **I Agree** and click the **Next**.

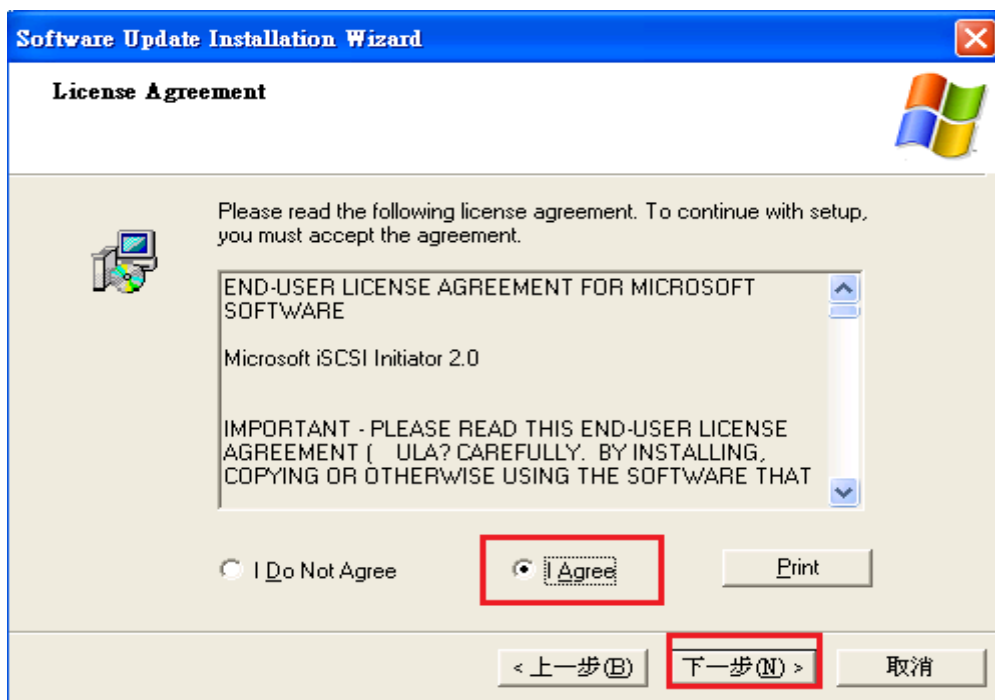


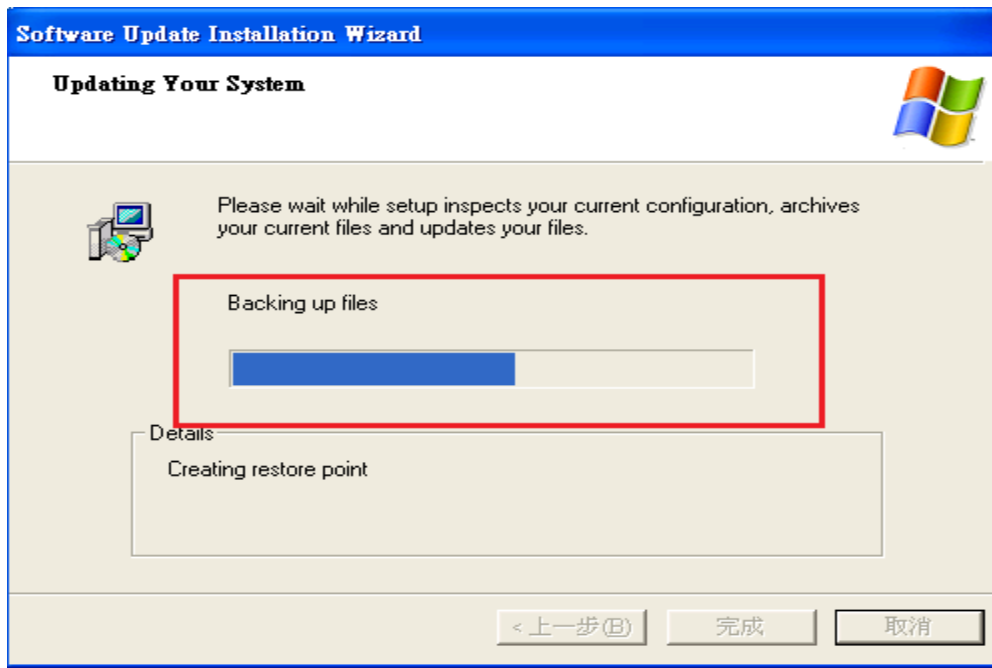



5. Click the **Finish** .

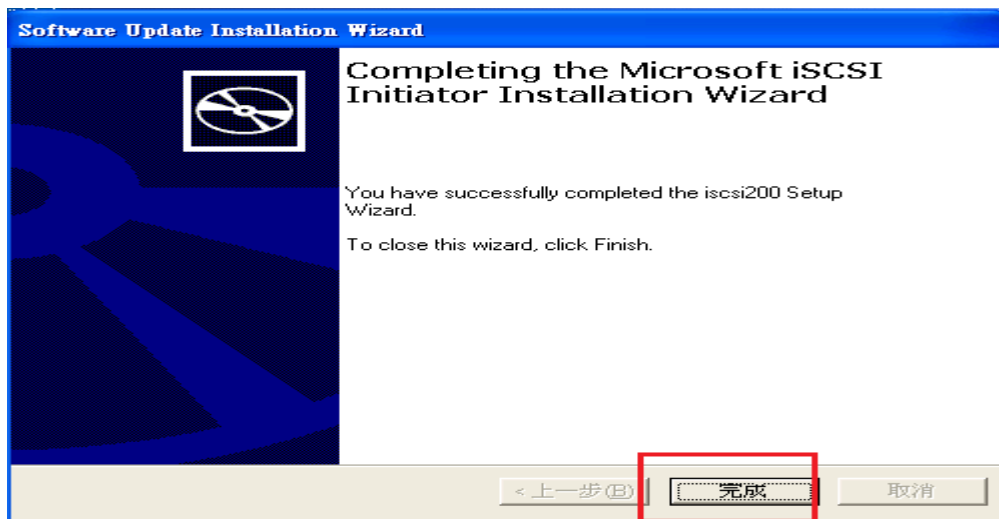

6. Click **Microsoft iSCSI Initiator** from the start menu.

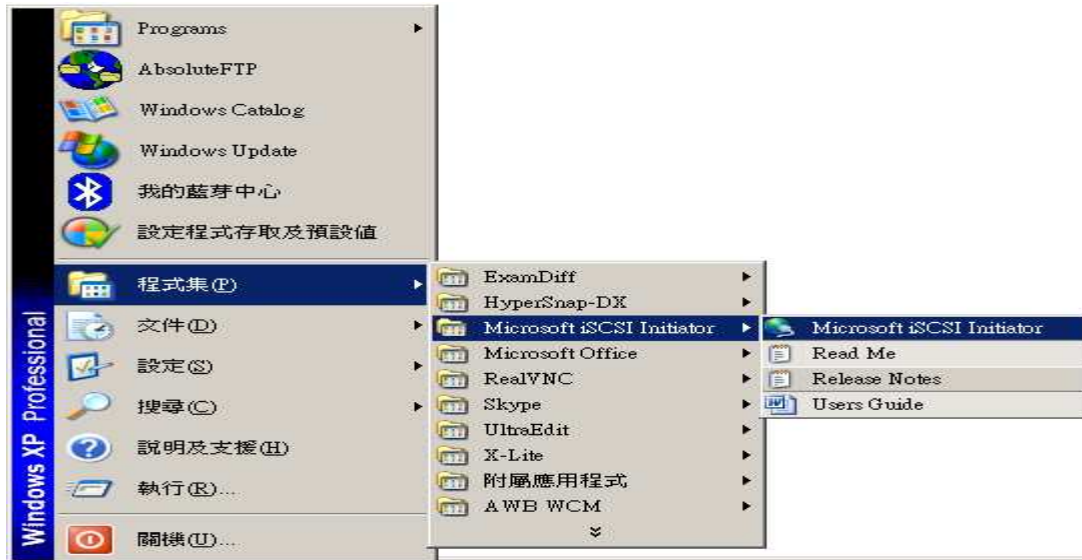

7. Change the **initiator Node Name** by clicking **Change** under the **General** table.

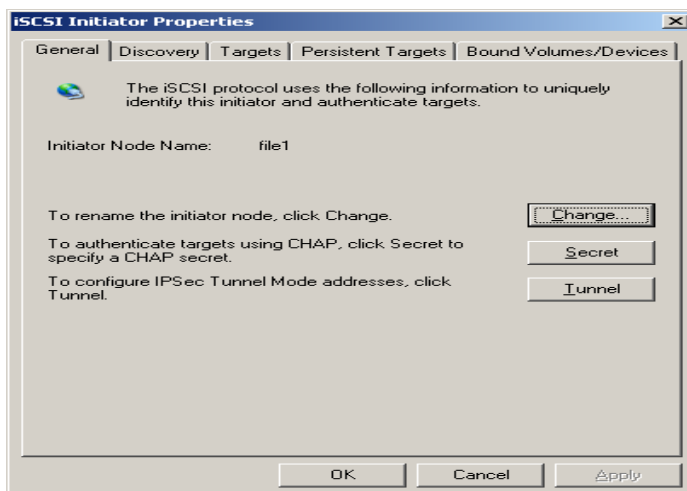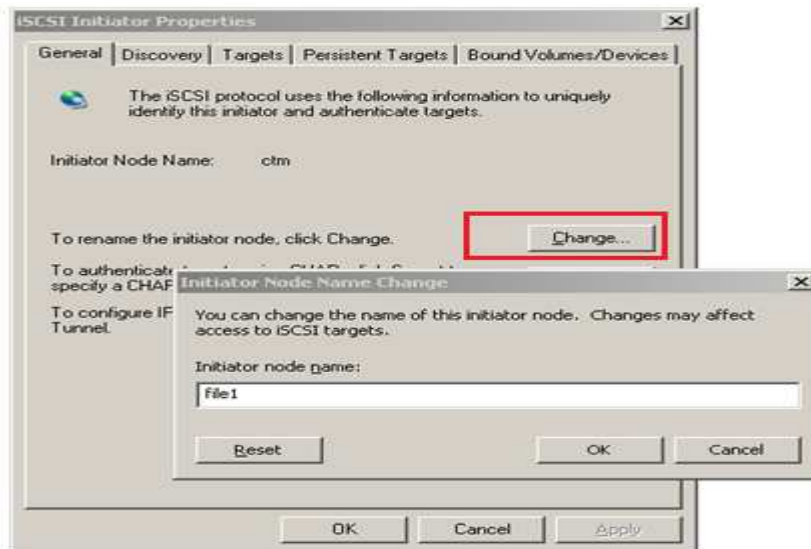

8. Add the **Target IP** under the **Discovery** tab.

