

## How do I configure the SNMP trap and Syslog on DES-7200(DGS-3610)?

### 1.> Network topology:

PC(D-View6)10.90.90.200---(P1/1)DES-7200(10.90.90.90)


*Note: If you use D-View6 as the syslog server, you have to install the D-View6 patch B22, otherwise, the syslog might not display correctly.*

### 2.> DES-7200 configuration:

```
interface VLAN 1
ip address 10.90.90.90 255.0.0.0
snmp-server community public RO
snmp-server community private RW
snmp-server enable traps
snmp-server host 10.90.90.200 public
logging server 10.90.90.200
```

### 3.> D-View6 setting

a.> Use Setup Wizard

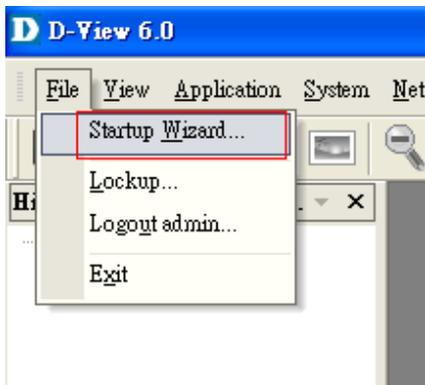


b.> Click Next




c.> Give a Domain name 'test'

Click 'Create'

Click 'Next'

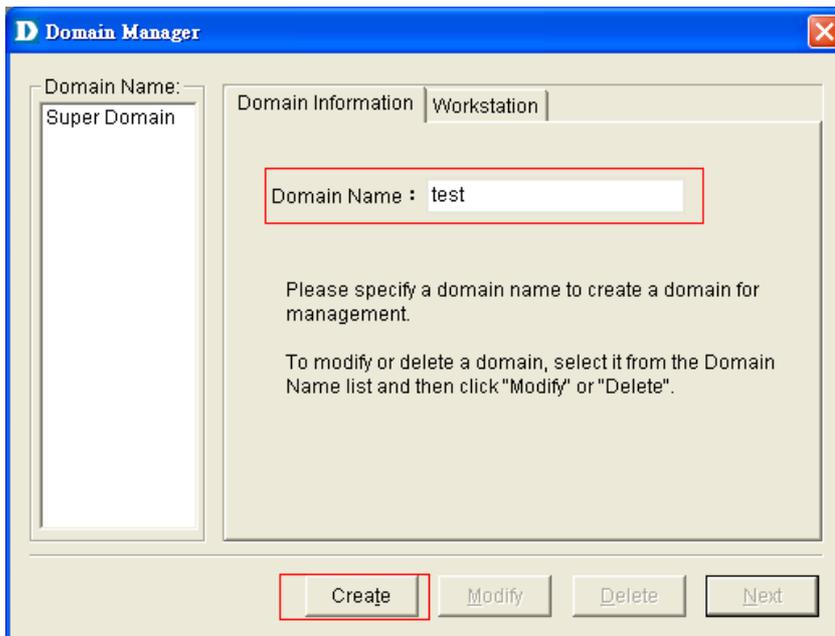


d.> Enter a name of NETMAP, click *Next*

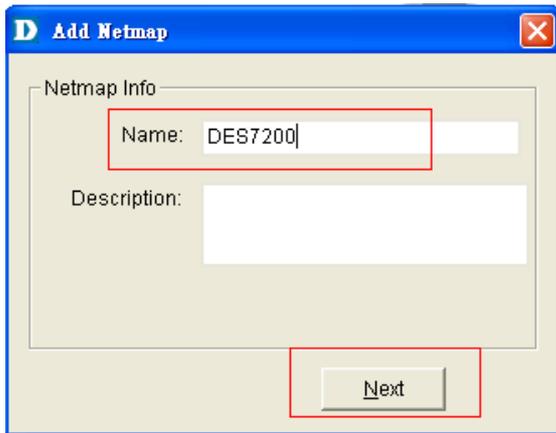


e.> Choose **Designated Network**

Give a name of Topology


Click **Next**

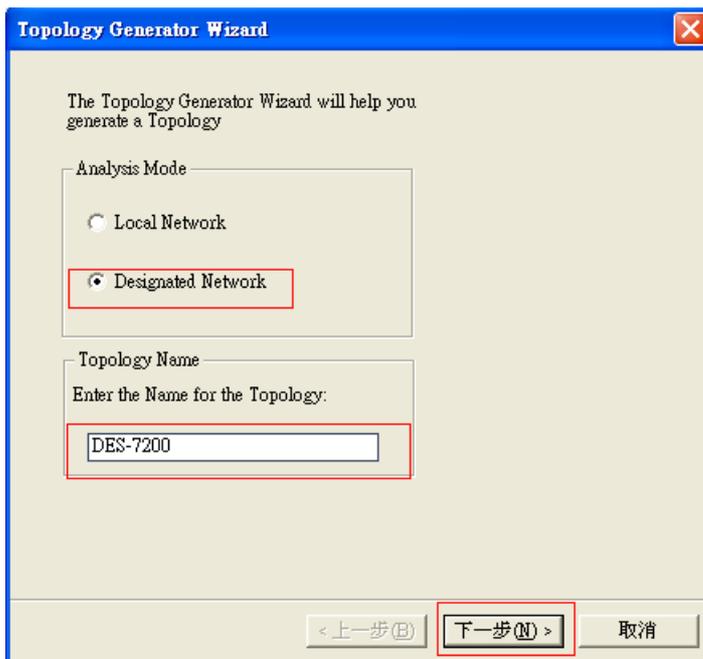

f.> Issue switch's information & SNMP community string. Click Finish

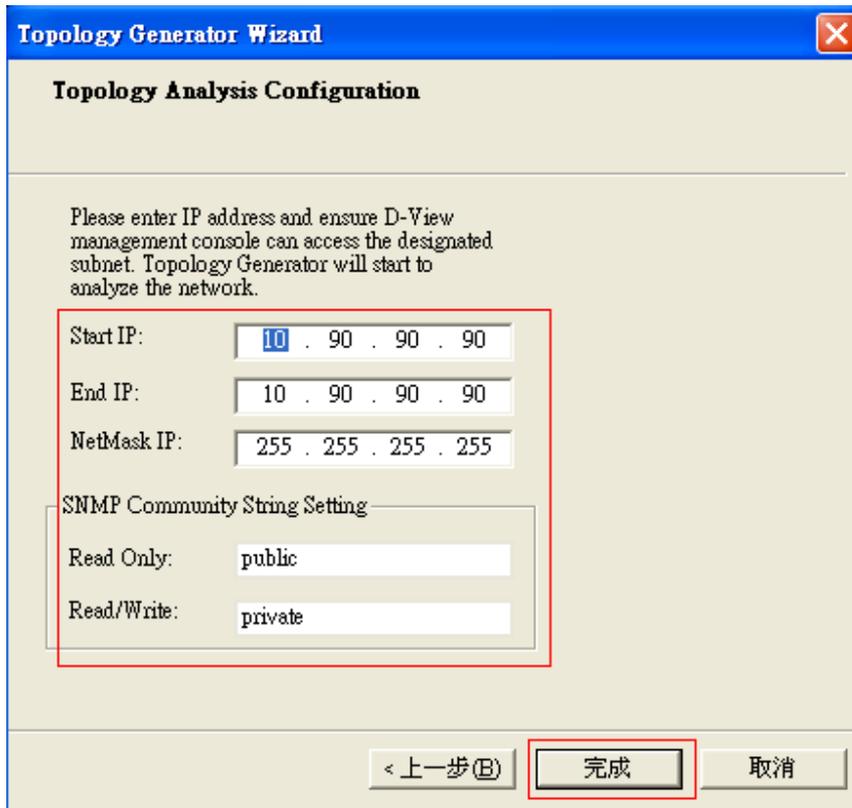

g.> Click Export

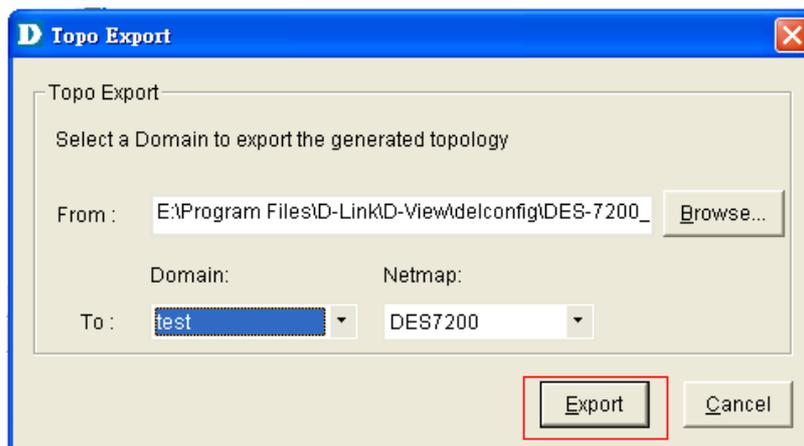

h.> Double click Net-10.0.0.0

Double click the DES7200's icon