


# How to upload SSH user public-key


1. Enable SSH and create an user account on DES-3028.

```
DES-3028G Fast Ethernet Switch Command Line Interface
Firmware: Build 2.54.B06
Copyright(C) 2008 D-Link Corporation. All rights reserved.
UserName:
Password:
DES-3028G:5#reset config
Command: reset config
Are you sure you want to proceed with system reset?(y/n) y
Success.
DES-3028G:5#enable ssh
Command: enable ssh
Success.
DES-3028G:5#create account admin admin
Command: create account admin admin
Enter a case-sensitive new password:***
Enter the new password again for confirmation:***
Success.
DES-3028G:5#
```

2. In SecureCRT, please select the “Tools” tab and click the option of “Create Public Key”.

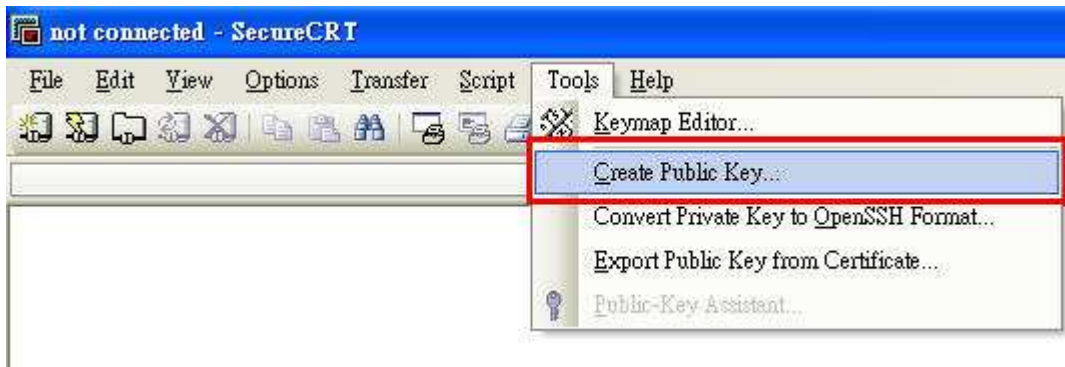


3. The window of “Key Generation Wizard” will show.  
Please click NEXT to continue the wizard.

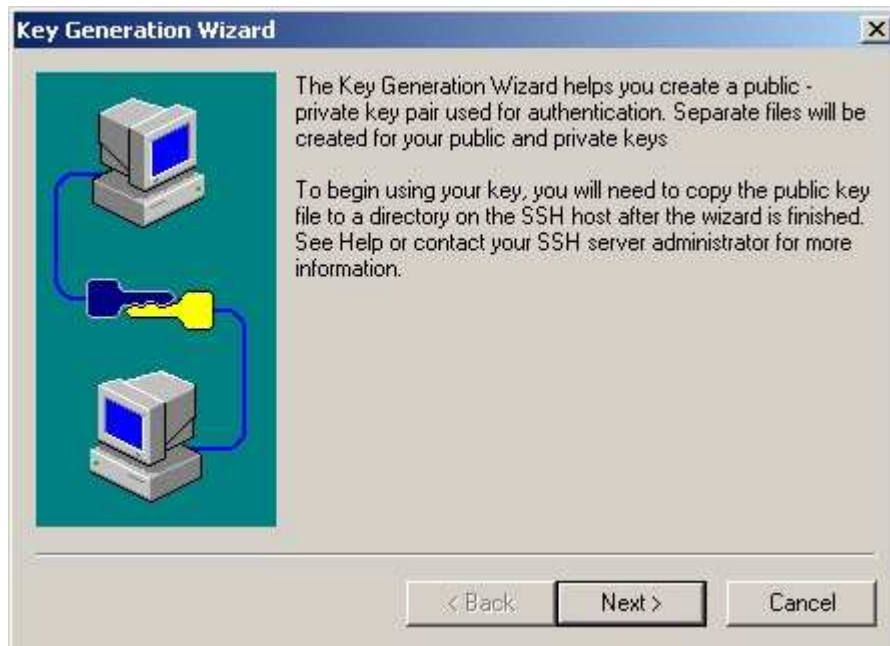


**4. Enter a passphrase and click the NEXT button.**



**5. The next screen requires you to input the key length.  
Please use the default value.**

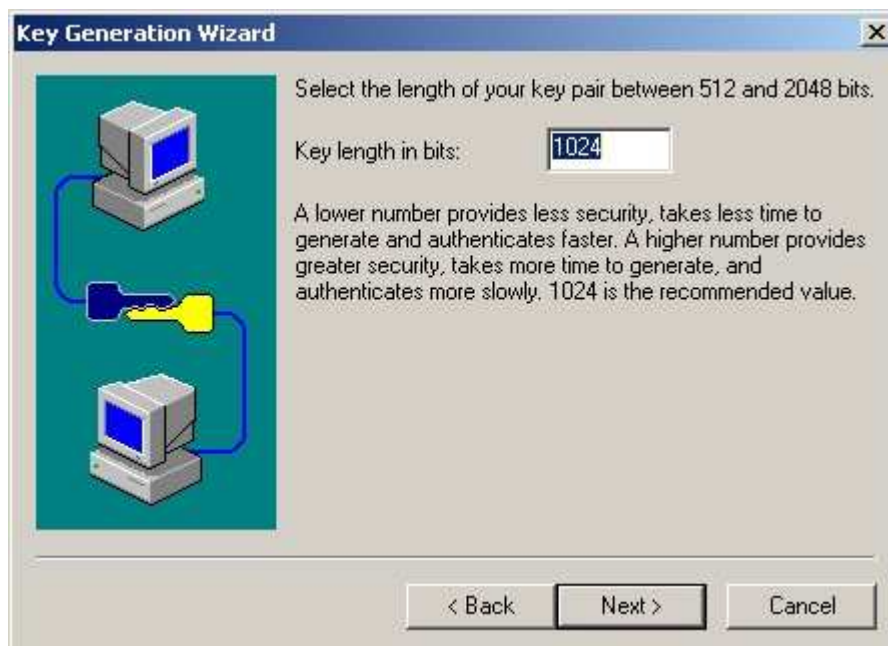

6. Click NEXT and the key generation is in the process.  
Please wait for a moment to finish this step.

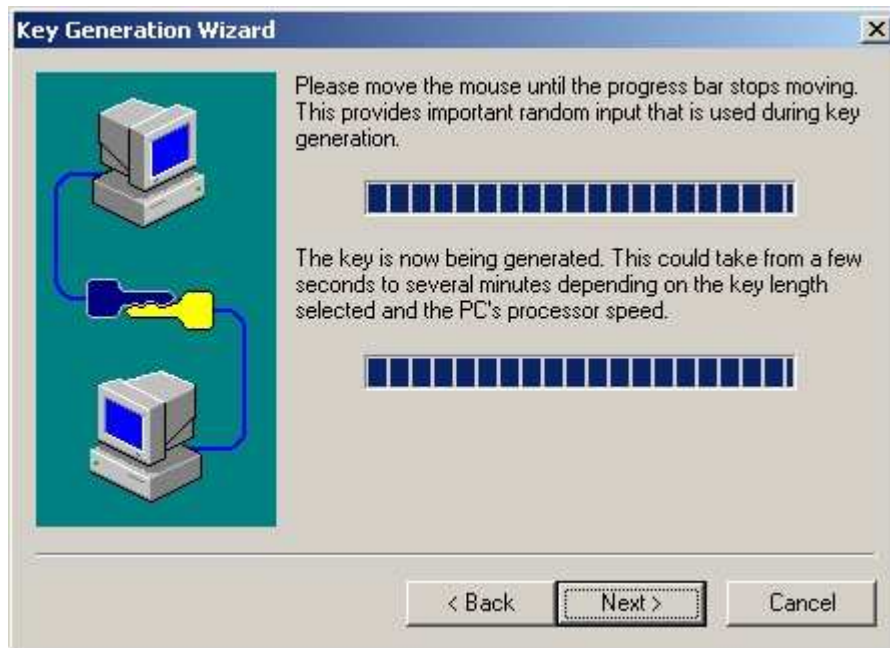

7. Click NEXT.  
You should decide the file name and the path to store the public key.



8. Click FINISH button.  
You will find a pop-up window.  
Please click on YES button.



9. Back to CLI.  
Configure the SSH user account authmode to be “publickey”.  
After that, show SSH user authmode.  
You will find the change is applied.

```
DES-3028G:5#
DES-3028G:5#show ssh user authmode
Command: show ssh user authmode

Current Accounts:
Username      AuthMode      HostName      HostIP
-----
admin         Password
-----
Total Entries : 1

DES-3028G:5#
DES-3028G:5#config ssh user admin authmode publickey
Command: config ssh user admin authmode publickey


Success.

DES-3028G:5#show ssh user authmode
Command: show ssh user authmode


Current Accounts:
Username      AuthMode      HostName      HostIP
-----
admin         Publickey
-----
Total Entries : 1

DES-3028G:5#
```

10. Select on File tab and click on the option of “Quick connect”.

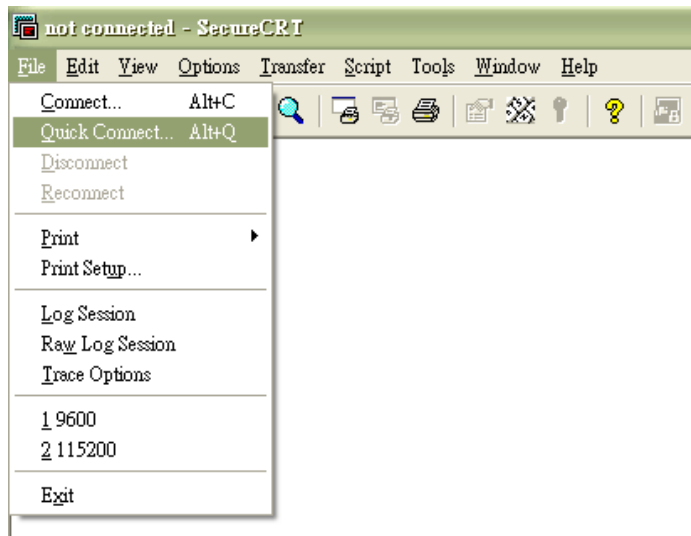


11. Please enter each item as the screenshot displayed.

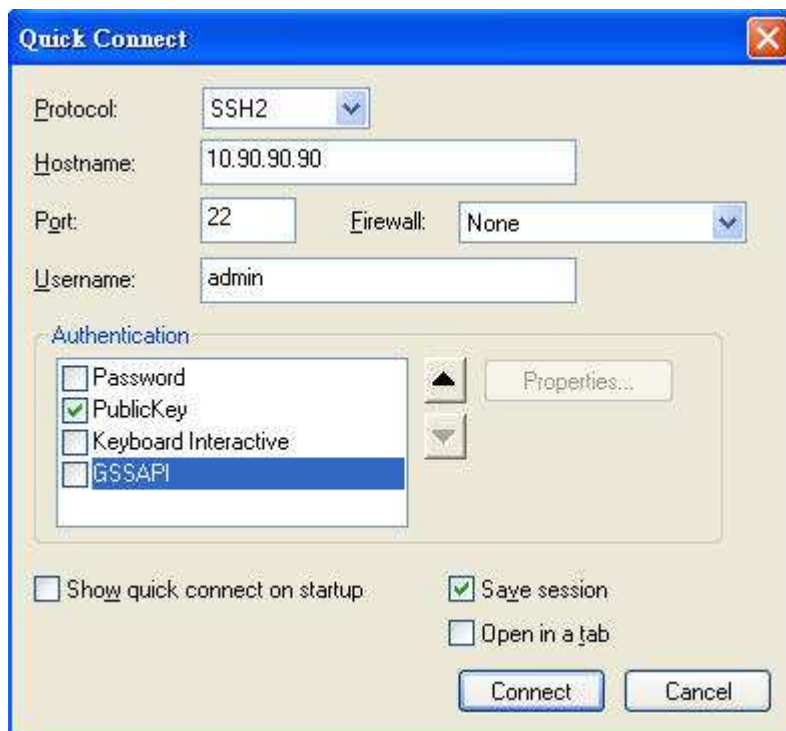

Enter the passphrase which was specified in Step4.

12. After step 11, please click CONNECT button.

You should be able to connect to DES-3028 via SSH.

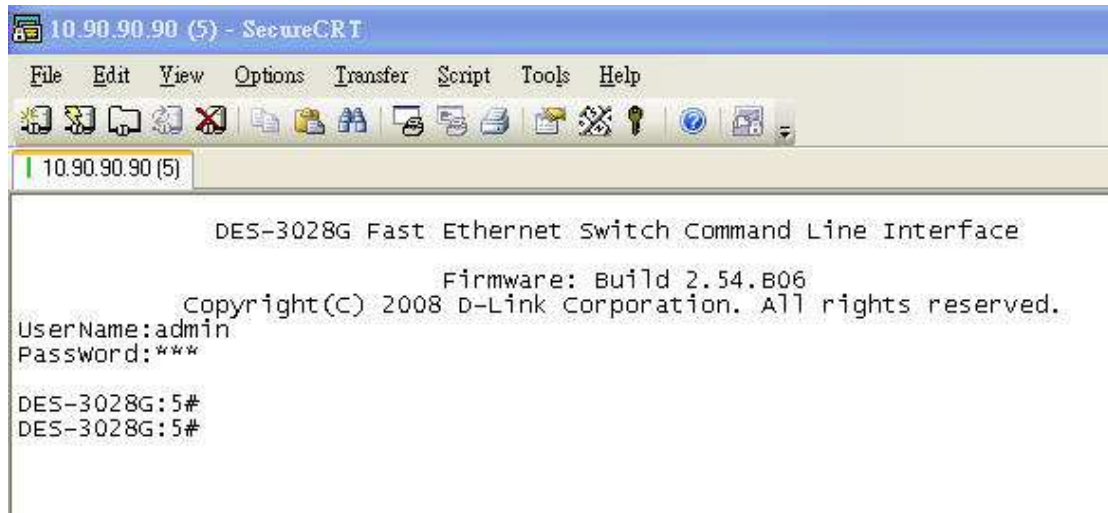

```
10.90.90.90 (5) - SecureCRT
File Edit View Options Transfer Script Tools Help
10.90.90.90 (5)
DES-3028G Fast Ethernet Switch Command Line Interface
Firmware: Build 2.54.B06
Copyright(C) 2008 D-Link Corporation. All rights reserved.
UserName:admin
Password:***
DES-3028G:5#
DES-3028G:5#
```