

Here is an example on DGS-3627, port 1 set the traffic control action shutdown when there is a storm occur, switch err-disabled port 1:

```
CLI: # show ports 1  
DGS-3627:5#show ports 1:1  
Command: show ports 1:1
```

Port	Port State	Settings Speed/Duplex/FlowCtrl	Connection Speed/Duplex/FlowCtrl	Address Learning
1:1	Enabled	Auto/Disabled	Err-Disabled	Enabled

```
SNMP: # snmpwalk -c private -v2c 192.168.1.1 1.3.6.1.4.1.171.11.70.6.2.3.1.1.7.1.1 (1=port 1)
```

```
C:\>snmpwalk -c private -v2c 192.168.1.1 1.3.6.1.4.1.171.11.70.6.2.3.1.1.7.1.1  
SNMPv2-SMI::enterprises.171.11.70.6.2.3.1.1.7.1.1 = INTEGER: 2
```

MIB OID Description:

Object name	swL2PortInfoErrDisReason
Object ID	1.3.6.1.4.1.171.11.70.6.2.3.1.1.7
Module	DGS3627-L2MGMT-MIB
Base syntax	Integer
Composed syntax	INTEGER
Access	Read-Only
Status	Current
Value list	1 : err-none(1) 2 : storm-control(2) 3 : lbd-control(3)
Parent node	swL2PortInfoEntry
First child	None
Description	This object indicates the port if disabled and why error disabled.