


How to use NET-SNMP – Limited Multicast

The Location of Limited Multicast OID Management

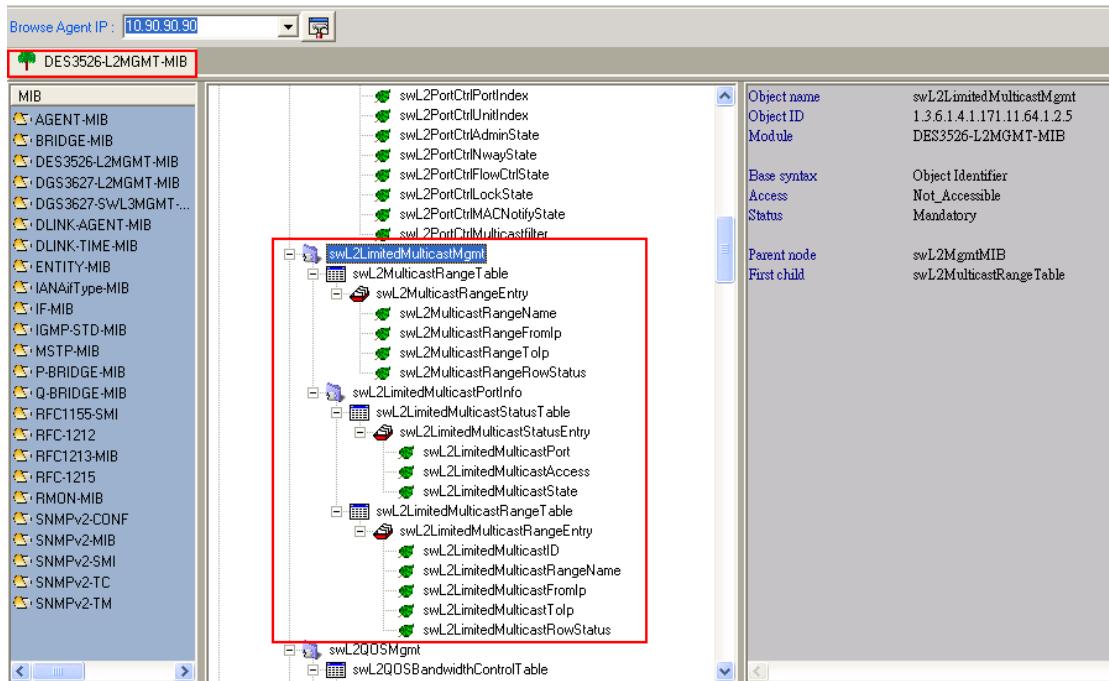

MIB File: DES3526-L2MGMT-MIB

OID: 1.3.6.1.4.1.171.11.64.1.2.5

Limited Multicast Table

Object name	swL2MulticastRangeTable
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.1
Module	DES3526-L2MGMT-MIB
Base syntax	Sequence Of swL2MulticastRangeEntry
Access	Not_Accessible
Status	Current
Sequence	1:swL2MulticastRangeName - Octet String 2:swL2MulticastRangeFromIp - IP Address 3:swL2MulticastRangeToIp - IP Address 4:swL2MulticastRangeRowStatus - Integer
Parent node	swL2LimitedMulticastMgmt
First child	swL2MulticastRangeEntry
Description	.

Show Limited Multicast Range Name

:: Command ::

```
snmpwalk -v2c -c public 192.168.0.1 1.3.6.1.4.1.171.11.64.1.2.5.1.1.1
```

Object name	swL2MulticastRangeName
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.1.1.1
Module	DES3526-L2MGMT-MIB
Base syntax	Octet String
Composed syntax	DisplayString
Access	Read-Only
Status	Current
Parent node	swL2MulticastRangeEntry
First child	None
Description	This object specifies multicast range name.

Show Limited Multicast Range From IP

:: Command ::

```
snmpwalk -v2c -c public 192.168.0.1 1.3.6.1.4.1.171.11.64.1.2.5.1.1.2
```

Object name	swL2MulticastRangeFromIp
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.1.1.2
Module	DES3526-L2MGMT-MIB
Base syntax	IP Address
Composed syntax	IpAddress
Access	Read-Create
Status	Current
Parent node	swL2MulticastRangeEntry
First child	None
Description	This object specifies begin IP address for this range.

Show Limited Multicast Range To IP

:: Command ::

```
snmpwalk -v2c -c public 192.168.0.1 1.3.6.1.4.1.171.11.64.1.2.5.1.1.3
```

Object name	swL2MulticastRangeToIp
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.1.1.3
Module	DES3526-L2MGMT-MIB
Base syntax	IP Address
Composed syntax	IpAddress
Access	Read-Create
Status	Current
Parent node	swL2MulticastRangeEntry
First child	None
Description	This object specifies end IP address for this range.

Setup Multicast Range Row Range Status

:: Command ::

```
snmpset -v2c -c public 192.168.0.1 1.3.6.1.4.1.171.11.64.1.2.5.1.1.4
```

Object name	swL2MulticastRangeRowStatus
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.1.1.4
Module	DES3526-L2MGMT-MIB
Base syntax	Integer
Composed syntax	RowStatus
Access	Read-CREATE
Status	Current
Value list	 1 : active(1) 2 : notInService(2) 3 : notReady(3) 4 : createAndGo(4) 5 : createAndWait(5) 6 : destroy(6)
Parent node	swL2MulticastRangeEntry
First child	None
Description	This object indicates the status of this entry.

Limited Multicast Status Table

Object name	swL2LimitedMulticastStatusTable
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.2.1
Module	DES3526-L2MGMT-MIB
Base syntax	Sequence Of swL2LimitedMulticastStatusEntry
Access	Not_Accessible
Status	Current
Sequence	1:swL2LimitedMulticastPort - Integer 2:swL2LimitedMulticastAccess - Integer 3:swL2LimitedMulticastState - Integer
Parent node	swL2LimitedMulticastPortInfo
First child	swL2LimitedMulticastStatusEntry
Description	.

Show Limited Multicast Port

:: Command ::

```
snmpwalk -v2c -c public 192.168.0.1 1.3.6.1.4.1.171.11.64.1.2.5.2.1.1.1
```

Object name	swL2LimitedMulticastPort
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.2.1.1.1
Module	DES3526-L2MGMT-MIB
Base syntax	Integer
Composed syntax	INTEGER
Access	Read-Only
Status	Current
Value list	1 : 1.65535
Parent node	swL2LimitedMulticastStatusEntry
First child	None
Description	This object indicates the port .

Set Limited Multicast Access Type

:: Command ::

```
snmpset -v2c -c public 192.168.0.1 1.3.6.1.4.1.171.11.64.1.2.5.2.1.1.2
```

Object name	swL2LimitedMulticastAccess
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.2.1.1.2
Module	DES3526-L2MGMT-MIB
Base syntax	Integer
Composed syntax	INTEGER
Access	Read- Write
Status	Current
Value list	1 : none(1) 2 : permit(2) 3 : deny(3)
Parent node	swL2LimitedMulticastStatusEntry
First child	None
Description	This object indicates the access type.

Set Limited Multicast State

:: Command ::

```
snmpset -v2c -c public 192.168.0.1 1.3.6.1.4.1.171.11.64.1.2.5.2.1.1.3
```

Object name	swL2LimitedMulticastState
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.2.1.1.3
Module	DES3526-L2MGMT-MIB
Base syntax	Integer
Composed syntax	INTEGER
Access	Read-Write
Status	Current
Value list	1 : other(1) 2 : disabled(2) 3 : enabled(3)
Parent node	swL2LimitedMulticastStatusEntry
First child	None
Description	This object indicates the state for this port.

Limited Multicast Range Table

Object name	swL2LimitedMulticastRangeTable
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.2.2
Module	DES3526-L2MGMT-MIB
Base syntax	Sequence Of swL2LimitedMulticastRangeEntry
Access	Not_Accessible
Status	Current
Sequence	1:swL2LimitedMulticastID - Integer 2:swL2LimitedMulticastRangeName - Octet String 3:swL2LimitedMulticastFromIp - IP Address 4:swL2LimitedMulticastToIp - IP Address 5:swL2LimitedMulticastRowStatus - Integer
Parent node	swL2LimitedMulticastPortInfo
First child	swL2LimitedMulticastRangeEntry
Description	.

Show Multicast Range ID

:: Command ::

```
snmpwalk -v2c -c public 192.168.0.1 1.3.6.1.4.1.171.11.64.1.2.5.2.2.1.1
```

Object name	swL2LimitedMulticastID
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.2.2.1.1
Module	DES3526-L2MGMT-MIB
Base syntax	Integer
Composed syntax	INTEGER
Access	Read-Only
Status	Current
Value list	1 : 1.65535
Parent node	swL2LimitedMulticastRangeEntry
First child	None
Description	This object indicates the range ID .

Show Multicast Range Name

:: Command ::

```
snmpwalk -v2c -c public 192.168.0.1 1.3.6.1.4.1.171.11.64.1.2.5.2.2.1.2
```

Object name	swL2LimitedMulticastRangeName
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.2.2.1.2
Module	DES3526-L2MGMT-MIB
Base syntax	Octet String
Composed syntax	DisplayString
Access	Read-Create
Status	Current
Parent node	swL2LimitedMulticastRangeEntry
First child	None
Description	

Show Limited multicast From IP

:: Command ::

```
snmpwalk -v2c -c public 192.168.0.1 1.3.6.1.4.1.171.11.64.1.2.5.2.2.1.3
```

Object name	swL2LimitedMulticastFromIp
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.2.2.1.3
Module	DES3526-L2MGMT-MIB
Base syntax	IP Address
Composed syntax	IpAddress
Access	Read-Only
Status	Current
Parent node	swL2LimitedMulticastRangeEntry
First child	None
Description	This object specifies begin IP address of the range on this port.

Show Limited multicast To IP

:: Command ::

```
snmpwalk -v2c -c public 192.168.0.1 1.3.6.1.4.1.171.11.64.1.2.5.2.2.1.4
```

Object name	swL2LimitedMulticastToIp
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.2.2.1.4
Module	DES3526-L2MGMT-MIB
Base syntax	IP Address
Composed syntax	IpAddress
Access	Read-Only
Status	Current
Parent node	swL2LimitedMulticastRangeEntry
First child	None
Description	This object specifies end IP address of the range on this port.

Show Limited Multicast Row Status

:: Command ::

```
snmpwalk -v2c -c public 192.168.0.1  1.3.6.1.4.1.171.11.64.1.2.5.2.2.1.5
```

Object name	swL2LimitedMulticastRowStatus
Object ID	1.3.6.1.4.1.171.11.64.1.2.5.2.2.1.5
Module	DES3526-L2MGMT-MIB
Base syntax	Integer
Composed syntax	RowStatus
Access	Read-CREATE
Status	Current
Value list	1 : active(1) 2 : notInService(2) 3 : notReady(3) 4 : createAndGo(4) 5 : createAndWait(5) 6 : destroy(6)
Parent node	swL2LimitedMulticastRangeEntry
First child	None
Description	This object indicates the status of this entry.

[Procedures via NETSNMP]

Step1. Create multicast_range name “test” from 225.1.1.1 to 225.1.1.10.

The screenshot shows a Windows XP command prompt window titled 'C:\WINDOWS\system32\cmd.exe'. The window displays the following text:

```
Microsoft Windows XP [版本 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\Administrator>cd\

C:\>snmpset -v2c -c private 10.90.90.90 1.3.6.1.4.1.171.11.64.1.2.5.1.1.2.4.116.
101.115.116 a 225.1.1.1 1.3.6.1.4.1.171.11.64.1.2.5.1.1.3.4.116.101.115.116 a 22
5.1.1.10 1.3.6.1.4.1.171.11.64.1.2.5.1.1.4.4.116.101.115.116 i 4
SNMPv2-SMI::enterprises.171.11.64.1.2.5.1.1.2.4.116.101.115.116 = IpAddress: 225
.1.1.1
SNMPv2-SMI::enterprises.171.11.64.1.2.5.1.1.3.4.116.101.115.116 = IpAddress: 225
.1.1.10
SNMPv2-SMI::enterprises.171.11.64.1.2.5.1.1.4.4.116.101.115.116 = INTEGER: 4

C:\>
DES-3526:admin#show multicast_range
Command: show multicast_range

Multicast range is empty!

DES-3526:admin#
DES-3526:admin#
DES-3526:admin#show multicast_range
Command: show multicast_range

No.    Name          From           To
-----+-----+-----+-----+
1      test          225.1.1.1    225.1.1.10
-----+-----+-----+-----+
Total Entries : 1

DES-3526:admin#
```

A red box highlights the row in the table where the 'Name' is 'test' and the 'From' and 'To' values are '225.1.1.1' and '225.1.1.10' respectively.

Step2. Add Limited_Mulicast range profile named “test” to port 1.

Step3. Enable Limited_Multicast state on port 1.

Step4. Configure Limited_Multicast access on port 1 to be “Permit”.

```
DES-3526 Fast Ethernet Switch Command Line Interface
Firmware: Build 6.00.B36
Copyright(C) 2008 D-Link Corporation. All rights reserved.

username:
password:

DES-3526:admin#
DES-3526:admin#
DES-3526:admin#show limited_multicast_addr ports 1
Command: show limited_multicast_addr ports 1

Port : 1
State : Disabled
Access : Deny

No. Name From To
-----
```



```
DES-3526:admin#show limited_multicast_addr ports 1
Command: show limited_multicast_addr ports 1

Port 1
State Enabled
Access Permit

No. Name From To
1 test 225.1.1.1 225.1.1.10
```



```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [版本 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\Administrator>cd\

C:\>snmpset -v2c -c private 10.90.90.90 1.3.6.1.4.1.171.11.64.1.2.5.2.1.1.2.1 i
2 1.3.6.1.4.1.171.11.64.1.2.5.2.1.1.3.1 i 3 1.3.6.1.4.1.171.11.64.1.2.5.2.2.1.2.
1 x 0x74657374 1.3.6.1.4.1.171.11.64.1.2.5.2.2.1.5.1 i 4
SNMPv2-SMI::enterprises.171.11.64.1.2.5.2.1.1.2.1 = INTEGER: 2
SNMPv2-SMI::enterprises.171.11.64.1.2.5.2.1.1.3.1 = INTEGER: 3
SNMPv2-SMI::enterprises.171.11.64.1.2.5.2.2.1.2.1 = STRING: "test"
SNMPv2-SMI::enterprises.171.11.64.1.2.5.2.2.1.5.1 = INTEGER: 4

C:\>
```