

How to download / upload firmware/configuration from TFTP server on DGS-3000-26TC via SNMP

MIB : Genmgmt.mib

agentBscFileSystemEntry : 1.3.6.1.4.1.171.12.1.2.18.1.1

Object name	agentBscFileSystemEntry
Object ID	1.3.6.1.4.1.171.12.1.2.18.1.1
Module	AGENT-GENERAL-MIB
Base syntax	Sequence
Access	Not_Accessible
Status	Current
Index	1.agentBscFileSystemIndex
Parent node	agentBscFileSystemTable
First child	agentBscFileSystemIndex
Description	A File System basic configuration entry that contains objects describing a particular MIB supported by this agent.

agentBscFileSystemIndex : 1.3.6.1.4.1.171.12.1.2.18.1.1.1

Object name	agentBscFileSystemIndex
Object ID	1.3.6.1.4.1.171.12.1.2.18.1.1.1
Module	AGENT-GENERAL-MIB
Base syntax	Integer
Composed syntax	Integer32
Access	Read-Only
Status	Current
Parent node	agentBscFileSystemEntry
First child	None
Description	The table index for the file entry. This object describes the file type. runtime-code (1), log-file (2), cfg-file (3), attack-log-file (7)

agentBscFileSystemServerAddr : 1.3.6.1.4.1.171.12.1.2.18.1.1.3

Object name	agentBscFileSystemServerAddr
Object ID	1.3.6.1.4.1.171.12.1.2.18.1.1.3
Module	AGENT-GENERAL-MIB
Base syntax	IP Address
Composed syntax	IpAddress
Access	Read-Write
Status	Current
Parent node	agentBscFileSystemEntry
First child	None
Description	The IP address where the file to be downloaded is located, or the IP address where the file will be uploaded to.

agentBscFileSystemServerFileName : 1.3.6.1.4.1.171.12.1.2.18.1.1.5

```
Object name      agentBscFileSystemServerFileName
Object ID        1.3.6.1.4.1.171.12.1.2.18.1.1.5
Module          AGENT-GENERAL-MIB

Base syntax      Octet String
Composed syntax DisplayString
Access           Read-Write
Status            Current
Value list       1 : 0..64

Parent node      agentBscFileSystemEntry
First child     None
Description      The name of the file to be downloaded from or uploaded to the TFTP server.
If agentBscFileSystemDeviceFileName is not set, the switch will default to using
the bootup file as the runtime image for the switch.
```

agentBscFileSystemLoadType : 1.3.6.1.4.1.171.12.1.2.18.1.1.8

```
Object name      agentBscFileSystemLoadType
Object ID        1.3.6.1.4.1.171.12.1.2.18.1.1.8
Module          AGENT-GENERAL-MIB

Base syntax      Integer
Composed syntax INTEGER
Access           Read-Write
Status            Current
Value list       1 : other(1)
                 2 : upload(2)
                 3 : download(3)

Parent node      agentBscFileSystemEntry
First child     None
Description      This object allows the user to select a download or upload function for the file.

Note:
For systems that do not support changes to this object, setting a value for
this object will cause the system to return a bad-value error message.
```

agentBscFileSystemCtrl : 1.3.6.1.4.1.171.12.1.2.18.1.1.12

```
Object name      agentBscFileSystemCtrl
Object ID        1.3.6.1.4.1.171.12.1.2.18.1.1.12
Module          AGENT-GENERAL-MIB

Base syntax      Integer
Composed syntax INTEGER
Access           Read-Write
Status            Current
Value list       1 : other(1)
                 2 : inactive(2)
                 3 : start(3)

Parent node      agentBscFileSystemEntry
First child     None
Description      This object allows the user to download runtime software. The settings
will take effect when the system restarts. See Note (1) below

Note 1:
For systems which do not support value changes to this object,
setting these values will cause the system to return a bad-value error message

start (3) - activate firmware.
```

(1)

download cfg from TFTP(10.90.90.101) server to DUT(10.90.90.90) :

```
snmpset -v2c -c private 10.90.90.90 1.3.6.1.4.1.171.12.1.2.18.1.1.3.3 a 10.90.90.101  
1.3.6.1.4.1.171.12.1.2.18.1.1.5.3 s dgs3000.cfg 1.3.6.1.4.1.171.12.1.2.18.1.1.8.3 i 3  
1.3.6.1.4.1.171.12.1.2.18.1.1.12.3 i 3
```

Set tftp address	SNMP Command
	1.3.6.1.4.1.171.12.1.2.18.1.1.3.x a (tftp address)
	x=1 run-timecode, x=2 log-file, x=3 cfg-file, x=7 attack-log-file
Set file name	1.3.6.1.4.1.171.12.1.2.18.1.1.5.x s (file name)
	x=1 run-timecode, x=2 log-file, x=3 cfg-file, x=7 attack-log-file
Set loadtype	1.3.6.1.4.1.171.12.1.2.18.1.1.8.x i y
	x=1 run-timecode, x=2 log-file, x=3 cfg-file, x=7 attack-log-file
	y=1 other, y=2 upload, y=3 download
Set SystemCtrl	1.3.6.1.4.1.171.12.1.2.18.1.1.12.x i y
	x=1 run-timecode, x=2 log-file, x=3 cfg-file, x=7 attack-log-file
	y=1 other, y=2 inactive, y=3 start

(2)

download F/W from TFTP(10.90.90.101) server to DUT(10.90.90.90) :

```
snmpset -v2c -c private 10.90.90.90 1.3.6.1.4.1.171.12.1.2.18.1.1.3.1 a 10.90.90.101  
1.3.6.1.4.1.171.12.1.2.18.1.1.5.1 s DGS-3000.had 1.3.6.1.4.1.171.12.1.2.18.1.1.8.1 i 3  
1.3.6.1.4.1.171.12.1.2.18.1.1.12.1 i 3
```

Set tftp address	SNMP Command
	1.3.6.1.4.1.171.12.1.2.18.1.1.3.x a (tftp address)
	x=1 run-timecode, x=2 log-file, x=3 cfg-file, x=7 attack-log-file
Set file name	1.3.6.1.4.1.171.12.1.2.18.1.1.5.x s (file name)
	x=1 run-timecode, x=2 log-file, x=3 cfg-file, x=7 attack-log-file
Set loadtype	1.3.6.1.4.1.171.12.1.2.18.1.1.8.x i y
	x=1 run-timecode, x=2 log-file, x=3 cfg-file, x=7 attack-log-file
	y=1 other, y=2 upload, y=3 download
Set SystemCtrl	1.3.6.1.4.1.171.12.1.2.18.1.1.12.x i y
	x=1 run-timecode, x=2 log-file, x=3 cfg-file, x=7 attack-log-file
	y=1 other, y=2 inactive, y=3 start