

## How to upload/download firmware/configuration on DGS-1210-10P/AX

### ● Download and Upload firmware:

|                                      |   |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
|--------------------------------------|---|-------------|-----------------------|-----------|------------------------------|--------|-----------------|-------------|------------|-----------------|-----------|--------|------------|--------|---------|-------------|------------------|-------------|------|-------------|--|
| Command                              | <p><b>CLI command:</b></p> <p><b>download</b> firmware <b>10.90.90.100 DGS-1210-10P_A2_FW_v2.02.002.hex</b></p> <p><b>SNMP command:</b></p> <pre>snmpset -v 2c -c private 10.90.90.90 1.3.6.1.4.1.171.10.76.12.3.1.0 a <b>10.90.90.100</b> 1.3.6.1.4.1.171.10.76.12.3.2.0 s <b>DGS-1210-10P_A2_FW_v2.02.002.hex</b> 1.3.6.1.4.1.171.10.76.12.3.3.0 i <b>1</b></pre> <p><b>CLI command:</b></p> <p><b>upload</b> firmware <b>10.90.90.100 123.hex</b></p> <p><b>SNMP command:</b></p> <pre>snmpset -v 2c -c private 10.90.90.90 1.3.6.1.4.1.171.10.76.12.3.1.0 a <b>10.90.90.100</b> 1.3.6.1.4.1.171.10.76.12.3.2.0 s <b>123.hex</b> 1.3.6.1.4.1.171.10.76.12.3.3.0 i <b>2</b></pre>   |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Example                              | <p><b>Download firmware:</b></p> <pre>C:\Users\AaronPan&gt;snmpset -v 2c -c private 10.90.90.90 1.3.6.1.4.1.171.10.76.12.3.1.0 a 10 .90.90.100 1.3.6.1.4.1.171.10.76.12.3.2.0 s DGS-1210-10P_A2_FW_v2.02.002.hex 1.3.6.1.4.1.1 71.10.76.12.3.3.0 i 1 SNMPv2-SMI::enterprises.171.10.76.12.3.1.0 = IpAddress: 10.90.90.100 SNMPv2-SMI::enterprises.171.10.76.12.3.2.0 = STRING: "DGS-1210-10P_A2_FW_v2.02.002.hex" SNMPv2-SMI::enterprises.171.10.76.12.3.3.0 = INTEGER: 1</pre> <p><b>Upload firmware:</b></p> <pre>C:\Users\AaronPan&gt;snmpset -v 2c -c private 10.90.90.90 1.3.6.1.4.1.171.10.76.12.3.1.0 a 10 .90.90.100 1.3.6.1.4.1.171.10.76.12.3.2.0 s 123.hex 1.3.6.1.4.1.171.10.76.12.3.3.0 i 2 SNMPv2-SMI::enterprises.171.10.76.12.3.1.0 = IpAddress: 10.90.90.100 SNMPv2-SMI::enterprises.171.10.76.12.3.2.0 = STRING: "123.hex" SNMPv2-SMI::enterprises.171.10.76.12.3.3.0 = INTEGER: 2</pre> <p>  Apr 22, 2013 14:41:16   10.90.90.90   6221776   Rcv of 123.hex done. 6221776 bytes in 80 secs.(75 KB/sec)</p> |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Explanation                          | <b>a 10.90.90.200 = TFTP Server IP address</b>  |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
|                                      | <b>i 1 = tftpFwTftpOperation, 1 means action “download”.</b>  |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
|                                      | <b>i 2 = tftpFwTftpOperation, 2 means action “upload”</b>   |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
|                                      | <b>s DGS-1210-10P_A2_FW_v2.02.002.hex = the firmware name</b>   |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| <b>s 123.hex = the firmware name</b> |   |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| SNMP OID                             | <p><b>DGS-1210-10P-AX → companyTftpGroup</b></p> <p>tftpFwServerIpAddress 1.3.6.1.4.1.171.10.76.12.3.1</p> <table border="1" data-bbox="298 1695 1285 2104"> <tr> <td>Object name</td><td>tftpFwServerIpAddress</td></tr> <tr> <td>Object ID</td><td>1.3.6.1.4.1.171.10.76.12.3.1</td></tr> <tr> <td>Module</td><td>DGS-1210-10P_Ax</td></tr> <tr> <td>Base syntax</td><td>IP Address</td></tr> <tr> <td>Composed syntax</td><td>IpAddress</td></tr> <tr> <td>Access</td><td>Read-Write</td></tr> <tr> <td>Status</td><td>Current</td></tr> <tr> <td>Parent node</td><td>companyTftpGroup</td></tr> <tr> <td>First child</td><td>None</td></tr> <tr> <td>Description</td><td>The TFTP server's IP address is used to upload or download firmware.</td></tr> </table>  | Object name | tftpFwServerIpAddress | Object ID | 1.3.6.1.4.1.171.10.76.12.3.1 | Module | DGS-1210-10P_Ax | Base syntax | IP Address | Composed syntax | IpAddress | Access | Read-Write | Status | Current | Parent node | companyTftpGroup | First child | None | Description | The TFTP server's IP address is used to upload or download firmware. |
| Object name                          | tftpFwServerIpAddress   |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Object ID                            | 1.3.6.1.4.1.171.10.76.12.3.1  |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Module                               | DGS-1210-10P_Ax   |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Base syntax                          | IP Address  |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Composed syntax                      | IpAddress   |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Access                               | Read-Write  |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Status                               | Current   |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Parent node                          | companyTftpGroup  |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| First child                          | None  |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Description                          | The TFTP server's IP address is used to upload or download firmware.  |             |                       |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |

**tftpFwImageFileName** 1.3.6.1.4.1.171.10.76.12.3.2

|                 |  |
|-----------------|--|
| Object name     | tftpFwImageFileName                      |
| Object ID       | 1.3.6.1.4.1.171.10.76.12.3.2             |
| Module          | DGS-1210-10P_Ax                          |
| Base syntax     | Octet String                             |
| Composed syntax | DisplayString                            |
| Access          | Read-Write                               |
| Status          | Current                                  |
| Value list      | 1 : 1..64                                |
| Parent node     | companyTftpGroup                         |
| First child     | None                                     |
| Description     | Configure firmware filename to download. |

**tftpFwTftpOperation** 1.3.6.1.4.1.171.10.76.12.3.3

|                 |  |
|-----------------|--|
| Object name     | tftpFwTftpOperation  |
| Object ID       | 1.3.6.1.4.1.171.10.76.12.3.3   |
| Module          | DGS-1210-10P_Ax  |
| Base syntax     | Integer  |
| Composed syntax | INTEGER  |
| Access          | Read-Write   |
| Status          | Current  |
| Value list      | 1 : none(0)<br>2 : download(1)<br>3 : upload(2)  |
| Parent node     | companyTftpGroup   |
| First child     | None   |
| Description     | The tftp operates to perform downloading the firmware image to the unit. This object is used in conjunction with configBootTftpServerIp and configBootImageFileName. |

## ● Download/upload configuration:

|                    |   |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
|--------------------|---|-------------|------------------------|-----------|------------------------------|--------|-----------------|-------------|------------|-----------------|-----------|--------|------------|--------|---------|-------------|------------------|-------------|------|-------------|--|
| <b>Command</b>     | <p><b>CLI command:</b></p> <p>download configuration <b>10.90.90.100 config.bin</b> startup</p> <p><b>SNMP command:</b></p> <p>snmpset -v2c -c private 10.90.90.90 1.3.6.1.4.1.171.10.76.12.3.5.0 a <b>10.90.90.100</b> 1.3.6.1.4.1.171.10.76.12.3.6.0 s <b>config.bin</b> 1.3.6.1.4.1.171.10.76.12.3.7.0 <b>i 1</b></p> <p><b>CLI command:</b></p> <p>upload cfg_toTFTP <b>10.90.90.100 config.bin</b> config_id 1</p> <p><b>SNMP command:</b></p> <p>snmpset -v2c -c private 10.90.90.90 1.3.6.1.4.1.171.10.76.12.3.5.0 a <b>10.90.90.100</b> 1.3.6.1.4.1.171.10.76.12.3.6.0 s <b>config.bin</b> 1.3.6.1.4.1.171.10.76.12.3.7.0 <b>i 2</b></p>  |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| <b>Example</b>     | <p><b>Download configuration:</b></p> <pre>C:\Users\AaronPan&gt;snmpset -v2c -c private 10.90.90.90 1.3.6.1.4.1.171.10.76.12.3.5.0 a 10.90.90.100 1.3.6.1.4.1.171.10.76.12.3.6.0 s config.bin 1.3.6.1.4.1.171.10.76.12.3.7.0 i 1 SNMPv2-SMI::enterprises.171.10.76.12.3.5.0 = IpAddress: 10.90.90.100 SNMPv2-SMI::enterprises.171.10.76.12.3.6.0 = STRING: "config.bin" SNMPv2-SMI::enterprises.171.10.76.12.3.7.0 = INTEGER: 1</pre> <p><b>Upload configuration:</b></p> <pre>C:\Users\AaronPan&gt;snmpset -v2c -c private 10.90.90.90 1.3.6.1.4.1.171.10.76.12.3.5.0 a 10.90.90.100 1.3.6.1.4.1.171.10.76.12.3.6.0 s config.bin 1.3.6.1.4.1.171.10.76.12.3.7.0 i 2 SNMPv2-SMI::enterprises.171.10.76.12.3.5.0 = IpAddress: 10.90.90.100 SNMPv2-SMI::enterprises.171.10.76.12.3.6.0 = STRING: "config.bin" SNMPv2-SMI::enterprises.171.10.76.12.3.7.0 = INTEGER: 2</pre> |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| <b>Explanation</b> | <b>a 10.90.90.100 = TFTP Server IP address</b>  |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
|                    | <b>i 1 = tftpConfigTftpOperation, 1 means action “download”.</b>  |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
|                    | <b>i 2 = tftpConfigTftpOperation, 2 means action “upload”</b>   |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
|                    | <b>s config.bin = configuration name</b>  |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| <b>SNMP OID</b>    | <p><b>DGS-1210-10P-AX → companyTftpGroup</b></p> <p>tftpCfgServerIpAddress 1.3.6.1.4.1.171.10.76.12.3.5</p> <table border="1" data-bbox="298 1500 1302 1918"> <tbody> <tr> <td>Object name</td><td>tftpCfgServerIpAddress</td></tr> <tr> <td>Object ID</td><td>1.3.6.1.4.1.171.10.76.12.3.5</td></tr> <tr> <td>Module</td><td>DGS-1210-10P_Ax</td></tr> <tr> <td>Base syntax</td><td>IP Address</td></tr> <tr> <td>Composed syntax</td><td>IpAddress</td></tr> <tr> <td>Access</td><td>Read-Write</td></tr> <tr> <td>Status</td><td>Current</td></tr> <tr> <td>Parent node</td><td>companyTftpGroup</td></tr> <tr> <td>First child</td><td>None</td></tr> <tr> <td>Description</td><td>The TFTP server's IP address is used to upload or download configuration file.</td></tr> </tbody> </table>   | Object name | tftpCfgServerIpAddress | Object ID | 1.3.6.1.4.1.171.10.76.12.3.5 | Module | DGS-1210-10P_Ax | Base syntax | IP Address | Composed syntax | IpAddress | Access | Read-Write | Status | Current | Parent node | companyTftpGroup | First child | None | Description | The TFTP server's IP address is used to upload or download configuration file. |
| Object name        | tftpCfgServerIpAddress  |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Object ID          | 1.3.6.1.4.1.171.10.76.12.3.5  |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Module             | DGS-1210-10P_Ax   |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Base syntax        | IP Address  |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Composed syntax    | IpAddress   |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Access             | Read-Write  |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Status             | Current   |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Parent node        | companyTftpGroup  |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| First child        | None  |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |
| Description        | The TFTP server's IP address is used to upload or download configuration file.  |             |                        |           |                              |        |                 |             |            |                 |           |        |            |        |         |             |                  |             |      |             |  |

### tftpConfigFileName 1.3.6.1.4.1.171.10.76.12.3.6

|                 |  |
|-----------------|--|
| Object name     | tftpConfigFileName   |
| Object ID       | 1.3.6.1.4.1.171.10.76.12.3.6   |
| Module          | DGS-1210-10P_Ax  |
| Base syntax     | Octet String   |
| Composed syntax | DisplayString  |
| Access          | Read-Write   |
| Status          | Current  |
| Value list      | 1 : 1..64  |
| Parent node     | companyTftpGroup   |
| First child     | None   |
| Description     | The configuration filename is used to store or retrieve config from the tftp server. |

### tftpConfigTftpOperation 1.3.6.1.4.1.171.10.76.12.3.7

|                 |  |
|-----------------|--|
| Object name     | tftpConfigTftpOperation  |
| Object ID       | 1.3.6.1.4.1.171.10.76.12.3.7   |
| Module          | DGS-1210-10P_Ax  |
| Base syntax     | Integer  |
| Composed syntax | INTEGER  |
| Access          | Read-Write   |
| Status          | Current  |
| Value list      | 1 : download(1)<br>2 : upload(2)<br>3 : progressing(3)   |
| Parent node     | companyTftpGroup   |
| First child     | None   |
| Description     | The tftp operates to perform either downloading the configuration file to the unit or uploading the current configuration file to the tftp server. This object is used in conjunction with configTftpServerIpAddress and configTftpServerFileName. |

### tftpConfigTftpOperationStatus 1.3.6.1.4.1.171.10.76.12.3.8

|                 |   |
|-----------------|---|
| Object name     | tftpConfigTftpOperationStatus   |
| Object ID       | 1.3.6.1.4.1.171.10.76.12.3.8  |
| Module          | DGS-1210-10P_Ax   |
| Base syntax     | Integer   |
| Composed syntax | INTEGER   |
| Access          | Read-Only   |
| Status          | Current   |
| Value list      | 1 : none(0)<br>2 : success(1)<br>3 : fail(2)<br>4 : progressing(3)    |
| Parent node     | companyTftpGroup  |
| First child     | None  |
| Description     | The tftp operation status represent configuration file backup status. |