



User Manual

AX1500 4G CAT 6 SMART ROUTER

G416, G416/CP, G416/ISP, G416/EE, G416/IDU

Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

Manual Revisions

Hardware	Revision	Date	Description
A2	v1.00	2023/08/09	Initial release
A2	v1.01	2023/11/10	Removed Speed Test feature

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Apple®, Apple logo®, Safari®, iPhone®, and Macintosh® are trademarks of Apple Inc., registered in the U.S. and other countries. App StoreSM is a service mark of Apple Inc.

Chrome™ browser, Google Play™ and Android™ are trademarks of Google Inc.

Internet Explorer®, Windows® and the Windows logo are trademarks of the Microsoft group of companies.

Copyright © 2023 by D-Link Corporation, Inc.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation, Inc.

ErP Power Usage

This device is an Energy Related Product (ErP) with High Network Availability (HiNA), and automatically switches to a power-saving Network Standby mode within 1 minute of no packets being transmitted.

G416	Network Standby: 5.1W Switched Off: 0.168W
-------------	---

Table of Contents

Product Overview.....	1	IPv4 - Dynamic IP (DHCP).....	32
Package Contents.....	1	IPv4 - Static IP	33
System Requirements	2	IPv4 - PPPoE	34
Introduction	3	Internet - IPv6.....	36
Features.....	3	IPv6 - Auto Detection	37
Hardware Overview	4	IPv6 - Static IPv6	39
LED Indicators	4	IPv6 - Auto Configuration (SLAAC/DHCPv6)	41
Back Panel	6	IPv6 - PPPoE	43
Side View	7	IPv6 - 6rd	47
Installation	8	IPv6 - Local Connectivity Only	49
Before you Begin.....	8	Wireless.....	50
Wireless Installation Considerations.....	9	Guest Zone	56
Setup.....	10	Network.....	58
EAGLE PRO AI Setup	11	D-Link Cloud.....	60
Hardware Setup	12	Operation Mode.....	61
Setup Wizard	15	Features.....	62
Configuration.....	22	Parental Control	62
Home	23	Data Cap.....	65
Internet.....	24	SMS	66
G416	25	PIN	68
Connected Clients	26	USSD.....	69
Settings	28	QoS Engine.....	70
Wizard	28	Firewall	72
Cellular.....	29	Firewall Settings - IPv4/IPv6 Rules.....	74
Failover	30	Port Forwarding	76
Internet - IPv4.....	31	Port Forwarding - Virtual Server.....	78
		Static Routes - IPv4.....	80


Static Routes - IPv6.....	81	VPN Setup Instructions.....	119
Dynamic DNS	82	Connect or Disconnect.....	122
Quick VPN	84	Windows 8.1/8.....	123
Management.....	85	VPN Setup Instructions.....	123
Time & Schedule - Time	85	Connect or Disconnect.....	128
Time & Schedule - Schedule	86	Windows 10	129
System Log.....	87	VPN Setup Instructions.....	129
System Admin - Admin.....	89	Connect or Disconnect.....	131
System Admin - System.....	90	Android	132
User.....	91	VPN Setup Instructions.....	132
Upgrade	92	Connect or Disconnect.....	134
Statistics	93		
EAGLE PRO AI	94	Connect a Wireless Client to Your Router.....	135
Voice Control.....	98	WPS Button.....	135
Register a D-Link Cloud Service Account.....	99	Windows® 10	136
Amazon Alexa Setup	104	Windows® 8 - WPA/WPA2.....	137
Amazon Alexa Voice Commands	107	Windows® 7.....	139
Google Assistant Setup	108	Troubleshooting	141
Google Assistant Voice Commands	110	Wireless Basics	143
Quick VPN.....	111	Networking Basics.....	147
Important Information	112	Wireless Security	149
iOS Devices	113	Technical Specifications	150
VPN Setup Instructions.....	113	Regulatory Statements	152
Connect or Disconnect.....	115		
Mac OS X.....	116		
VPN Setup Instructions.....	116		
Connect or Disconnect.....	118		
Windows 7.....	119		

Product Overview

Package Contents




G416 AX1500 4G Cat 6 Smart Router

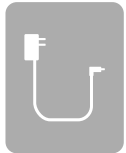

Power Adapter (12V, 1.5A)



Ethernet Cable (1m)

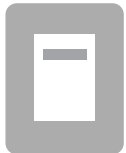

Quick Installation Guide

If any of the above items are missing or damaged, please contact your local reseller.

Note: *Using a power supply with a different voltage rating than the one included with the router will cause damage and void the warranty for this product.*

System Requirements

Network Requirements	<ul style="list-style-type: none">• An Ethernet-based cable, DSL or fiber modem• IEEE 802.11ax/ac/n/g/b/a wireless clients• 10/100/1000 Ethernet
Web-based Configuration Utility Requirements	<p>Computer with the following:</p> <ul style="list-style-type: none">• Windows®, Macintosh, or Linux-based operating system• An installed Ethernet adapter <p>Browser Requirements:</p> <ul style="list-style-type: none">• Internet Explorer 10 or later• Firefox 28 or later• Safari 6 or later• Chrome 28 or later
EAGLE PRO AI APP Requirements	<ul style="list-style-type: none">• iOS® or Android™ device (Please refer to the description of the app's page to check whether your device is compatible.)

Introduction

With a powerful network processor, the AX1500 Smart Router packs in strong processing power to help you manage your home or office network. It's a powerful, intelligent home router with AI-assisted traffic control, Wi-Fi utilization and mesh optimization, and parental controls. It also has integrated voice assistant compatibility for Amazon Alexa and Google Assistant so you can control your network with voice commands.

Features

Smooth Wireless Connectivity with Maximized Bandwidth

The innovative AI Traffic Optimizer provides weekly usage report to inform administrators about the consumption of network bandwidth along with heavy users. It also rates the overall condition of the wireless network and states the number of times the engine has optimized the network automatically based on the network conditions and usage data.

Handle More with a High-Power Processor

With the G416, you're not only enjoying buffer-free gaming and lightning-fast surfing, but also features such as optimized QoS, controlled Internet access with website filtering, and compatibility with voice assistants. All this is possible with the router's 1.4 GHz dual-core high-power processor, 128 MB of flash memory and 256 MB of RAM.

Intelligent Quality of Service Features

The Quality of Service (QoS) allows you to prioritize important traffic to ensure that real-time applications are receiving optimal bandwidth. Moreover, the inbuilt AI engine collects and analyzes traffic data and notifies administrators of clients that consume high bandwidth so that they can take prompt action.

Always Up-to-Date with the Latest Features


The G416 will automatically check daily for updates to make sure that the device always has the latest features and the most secure firmware and will install the update silently in the background. For extra peace of mind, in the event of failure during the firmware update, the router will store a backup system image in the memory before proceeding with the update.

Easy Setup and Flexible Management

Managing your Internet utilization has never been easier; just download the free EAGLE PRO AI for your mobile device and follow the on-screen step-by-step instructions to add your device. You also have the option to use a web browser to access the setup wizard for basic configuration and advanced features. Support for industry-standard Wi-Fi Protected Setup (WPS) lets you create encrypted connections to new devices by pressing a button.

Hardware Overview


LED Indicators

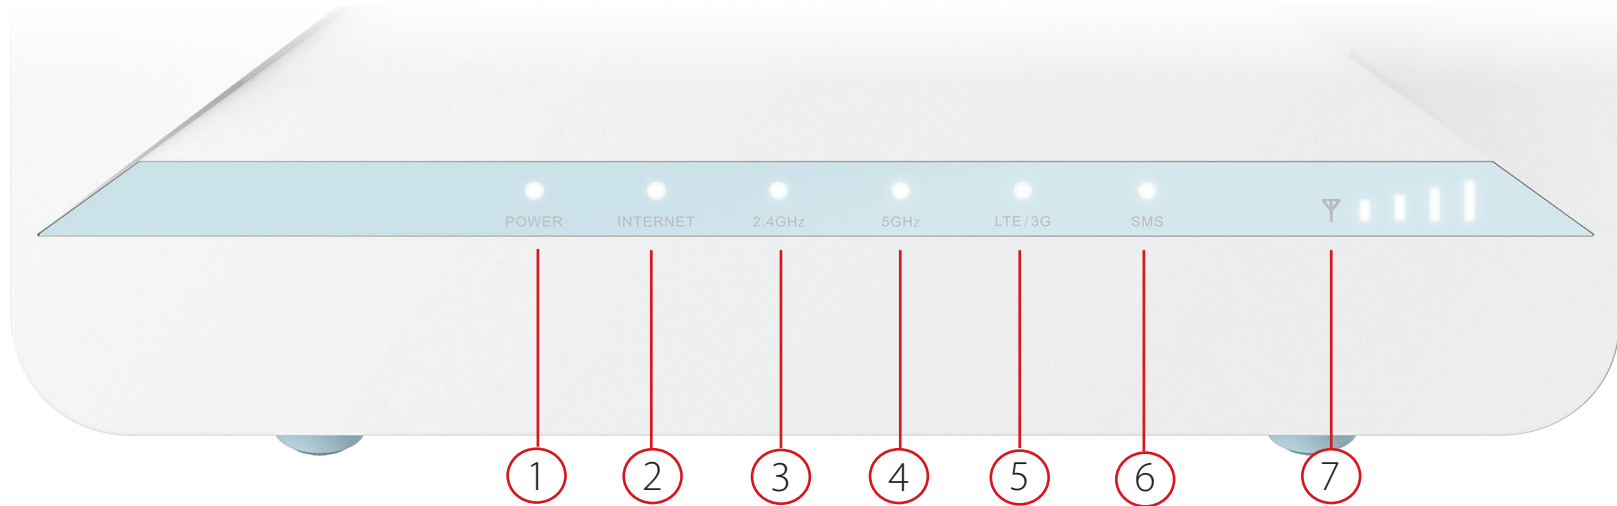

1	Power	Solid White	The device is on and the system is healthy.
2	Internet	Solid White	The Internet connection is established.
		Flashing White	The device cannot connect to the Internet.
3	Wireless (2.4 GHz)	Solid White	The 2.4 GHz wireless band is enabled.
		Flashing White	The device is transmitting data.
		Off	No internet service available.
4	Wireless (5 GHz)	Solid White	The 5 GHz wireless band is enabled.
		Flashing White	The device is transmitting data.
		Off	No internet service available.


5	LTE/3G	Solid White	The cellular signal is on 4G service.
		Solid Orange	The cellular signal is on 3G/2G service.
6	SMS	Solid White	New SMS message is received.
		Off	No new SMS message.
7	Signal Bar	Solid White	1 LED: RSSI < -100 dbm
			2 LED: RSSI < -92 dbm
			3 LED: RSSI < -84 dbm
			4 LED: RSSI > -84 dbm
		Off	No mobile signal.

Back Panel

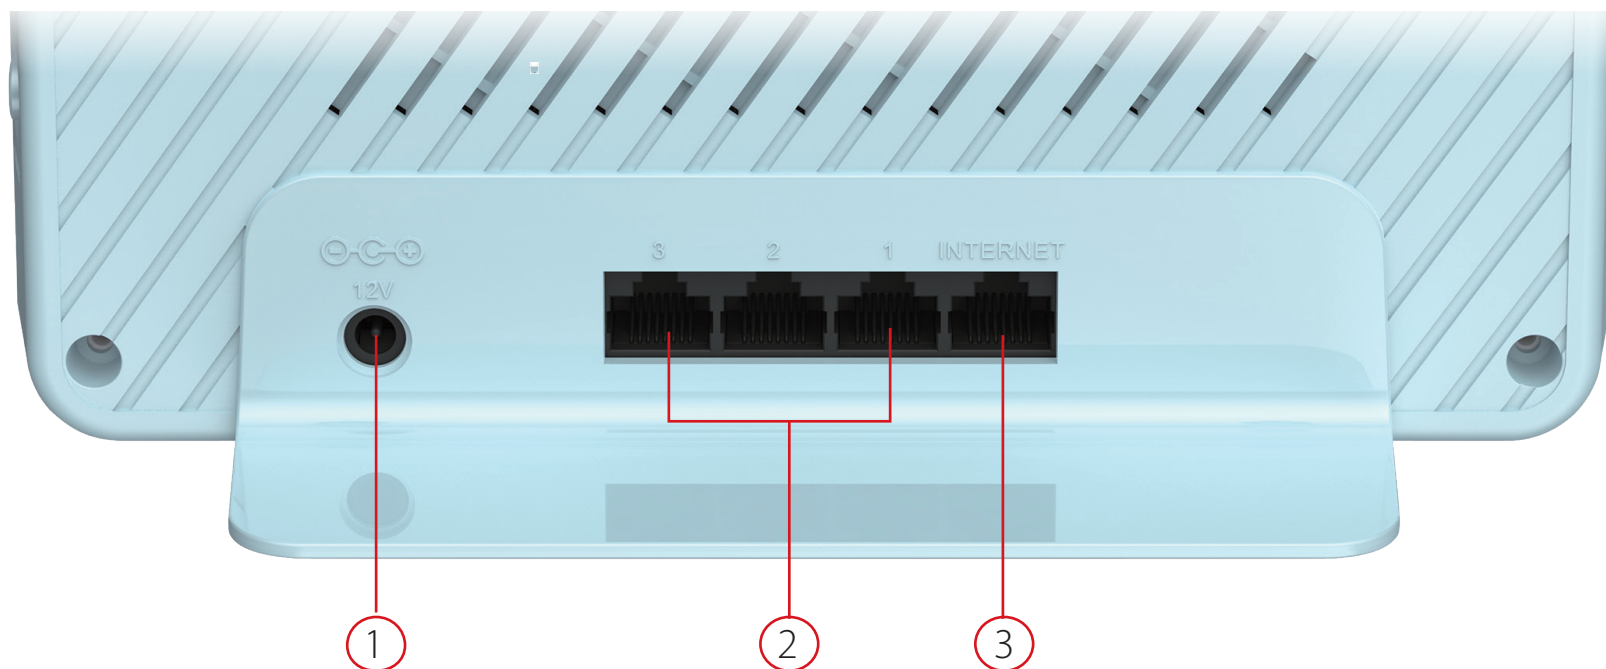

1	Power Connector	Connector for the supplied power adapter.
2	Gigabit LAN Ports (1- 3)	Connect Ethernet devices such as computers, switches, storage (NAS) devices, and game consoles.
3	Gigabit WAN Port	Use an Ethernet cable to connect your broadband modem to this port.

Side View

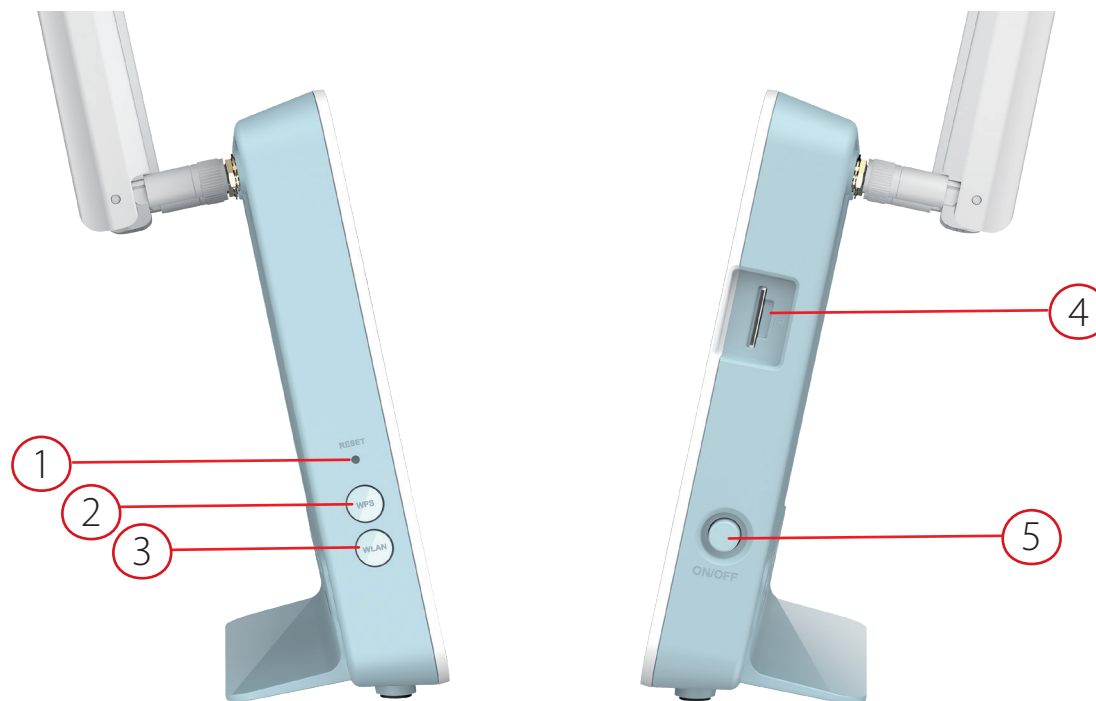

1	Reset Button	Press this button with an unfolded paperclip and hold for ten seconds to reset the device.
2	WPS Button	Press this button to initiate a new WPS connection. See WPS Button on page 134 for details.
3	WLAN	Press this button to toggle wireless LAN on or off.
4	SIM/UICC Card Slot	Accepts a standard mini-SIM card for 4G LTE connectivity.
5	Power Button	Turns the device on or off.

Installation

This section will walk you through the installation of your G416.

Before you Begin

- Placement of the router is very important. Do not place the router in an enclosed area such as a closet, cabinet, attic, or garage.
- Configure the router with the computer that was last connected directly to your Internet connection. Verify that it is connected to the Internet before connecting additional devices.
- If your ISP provides you with a modem/router combo, you will need to set it to “bridge” mode so the router can work properly. Please contact your ISP or refer to the user manual for your modem/router device.
- You can only use the Ethernet port on your modem. If you were using the USB connection before using the router, then you must turn off your modem, disconnect the USB cable and connect an Ethernet cable to the Internet port on the router, then turn the modem back on. In some cases, you may need to call your Internet Service Provider (ISP) to change connection types (USB to Ethernet).
- If connecting to a DSL modem, make sure to have your DSL service information provided by your Internet Service Provider handy. This information is likely to include your DSL account's username and password. Your ISP may also supply you with additional WAN configuration settings which might be necessary to establish a connection.
- If you are connecting a considerable amount of networking equipment, it may be a good idea to take the time to label each cable or take a picture of your existing setup before making any changes.
- If you have DSL and are connecting via PPPoE, make sure you disable or uninstall any PPPoE software such as WinPoET, BroadJump, or EnterNet 300 from your computer or you will not be able to connect to the Internet.

Wireless Installation Considerations

The D-Link wireless router lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the D-Link router and other network devices to a minimum - each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (0.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick. Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4 GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4 GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.

Setup

There are several ways you can configure your router to connect to the Internet

- **EAGLE PRO AI** - Use your compatible iOS or Android device to install and configure your router. Refer to **EAGLE PRO AI Setup** on page **11**.
- **Hardware Setup** - This section explains how to set up your G416. Refer to **Hardware Setup** on page **12**.
- **D-Link Setup Wizard** - This wizard will launch when you log in to the router using your browser for the first time. Refer to **Setup Wizard** on page **15**.
- **Manual Setup** - Log in to the router to manually configure your router. Refer to **Configuration** on page **22**

EAGLE PRO AI Setup

The EAGLE PRO AI allows you to install and configure your G416 from your compatible Android or iOS device.

Note: *The screenshots may be different depending on your mobile device's OS version. However, the process is the same.*

Step 1

Search and install the free **EAGLE PRO AI** available on the App Store or on Google Play.




Step 2

Launch the EAGLE PRO AI from the home screen of your device.

Step 3


Tap **Install New Device**. Scan the setup code on the device label on the bottom of the router. Follow the on-screen instructions to complete the setup.

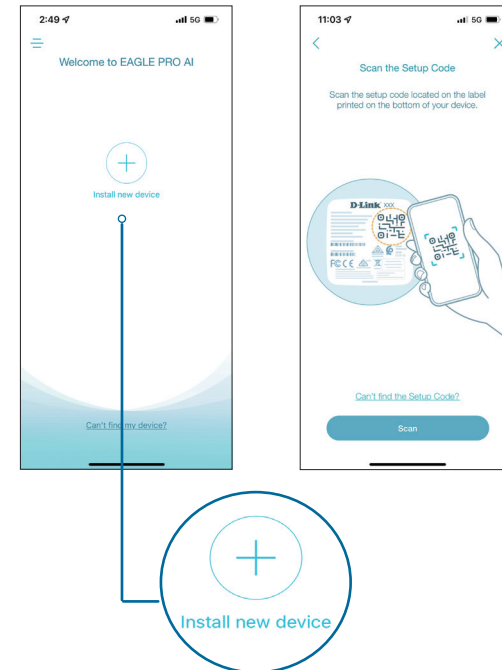

Hardware Setup


Step 1

Position your G416 near your Internet-connected modem. Place it in an open area for better wireless coverage.

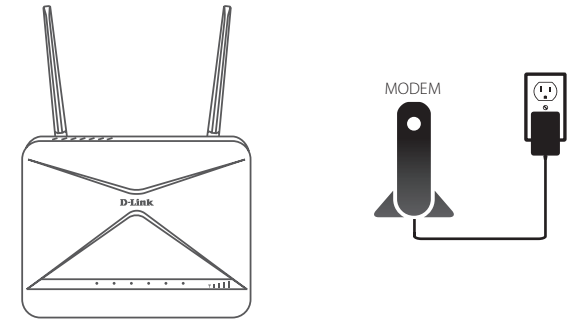


Step 2

Turn off and unplug the power to your cable or DSL broadband modem. This is required. In some cases, you may need to turn it off for up to five minutes.

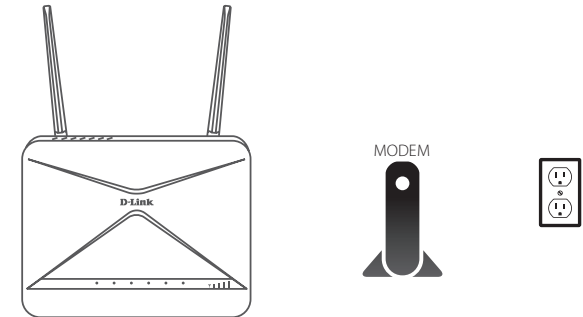


Step 3

Use the Ethernet cable to connect your modem to the port labelled **INTERNET** on the router.

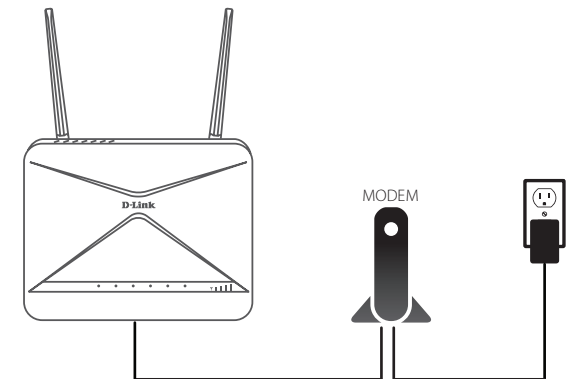


Step 4

Plug in the power and turn your modem back on and wait approximately one minute before proceeding with the procedure.

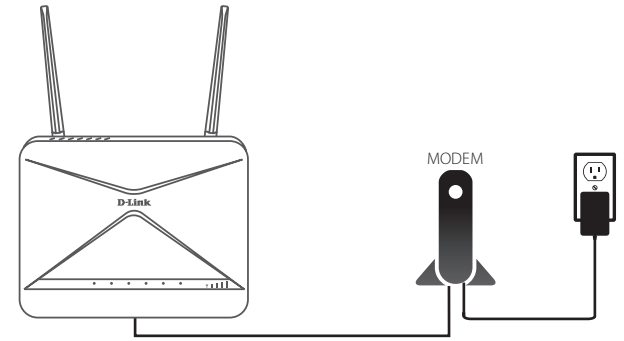


Step 5

Connect the supplied power adapter to the router and a power outlet, and wait approximately one minute until the LED indicator on the front of the device changes from orange to solid white.

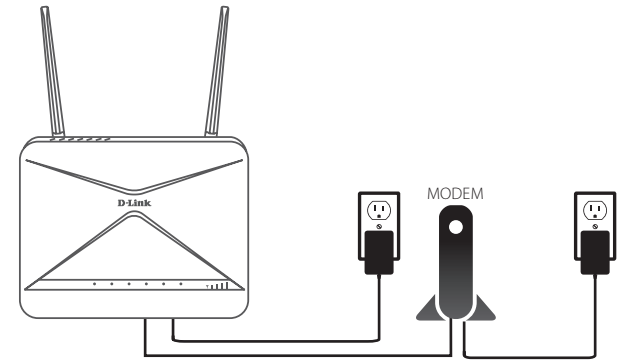


Step 6

If you are configuring the router wirelessly from a PC, connect to the Wi-Fi network name printed on the label attached to the bottom of your router. **Note:** The Wi-Fi name (SSID), Wi-Fi password, and device password are printed on the device label on the bottom of the device.

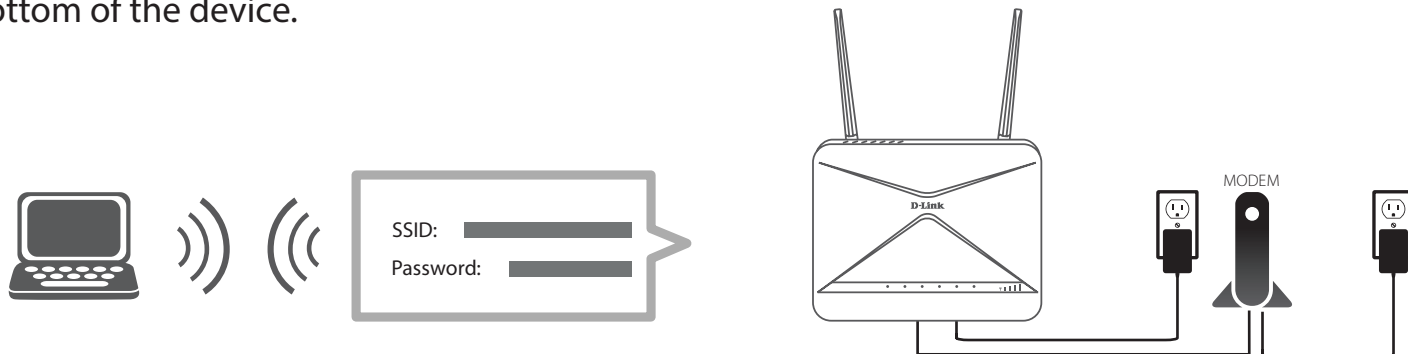

If you are configuring the router from a PC with a wired Ethernet connection, plug one end of an Ethernet cable into the port labelled 1 on the back of the router, and the other end into the Ethernet port on your computer.

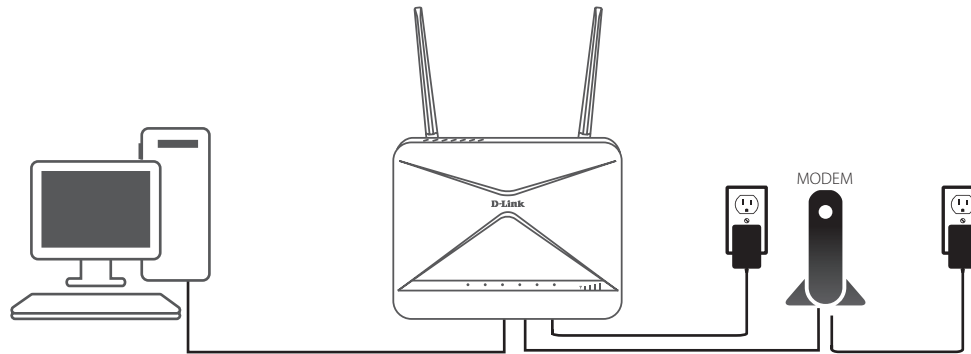

Step 7

If you are connecting to a broadband service that uses a dynamic connection (not PPPoE), you may be online already. Try opening a web browser and connecting to a website. If the website does not load, proceed to **Setup Wizard** on page **15**.


Setup Wizard

The setup wizard is designed to guide you through a step-by-step process of configuring your new G416 for Internet connection.

If this is your first time installing the router, open your web browser and enter **http://xxxx.devicesetup.net/** into the browser (xxxx represents the last 4 digits of the MAC address). Enter the **Admin Password** and click **Log In** to start the configuration process. The web address and device password are printed on the device label on the bottom of the device.




Agree to the **Terms of Use and Privacy Policy** before proceeding.

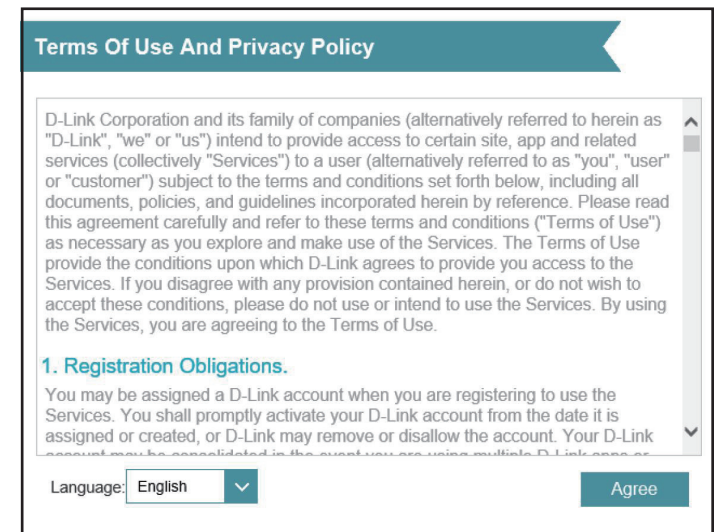


Follow the on-screen instructions to configure your new D-Link router and connect to the Internet.

Click **Next** to continue.

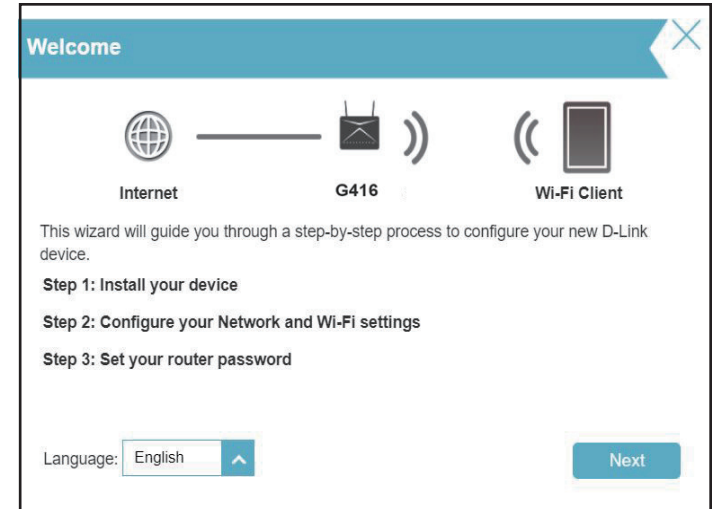


Connect the router and the modem with an Ethernet cable.

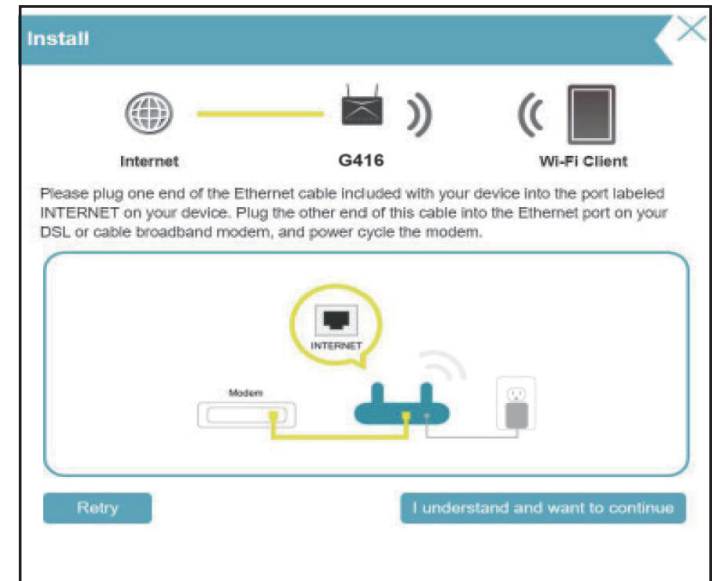

If the router does not detect a valid Internet connection, a list of connection types will be displayed. Select your Internet connection type (this information can be obtained from your Internet Service Provider).


Click **Next** to continue.

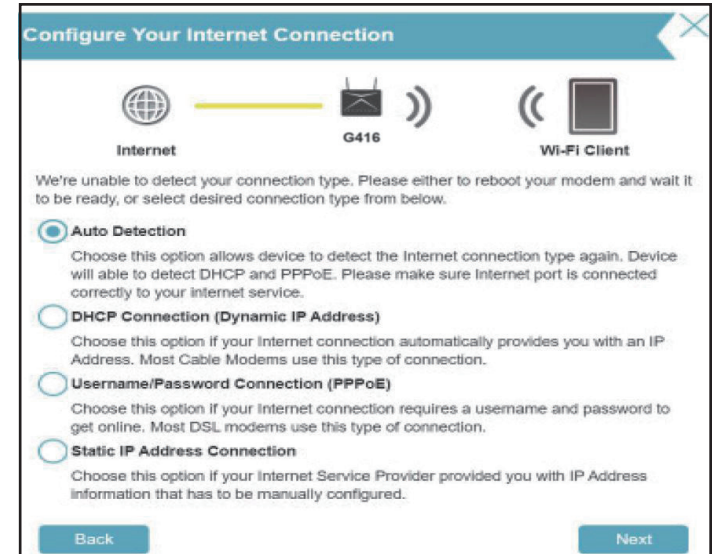

If the router detects or you select **PPPoE**, enter your PPPoE username and password. If you do not have this information, please contact your ISP.

Click **Next** to continue.

Note: *Be sure to remove all other existing PPPoE software from your computer. The software is no longer needed and will not work through a router.*

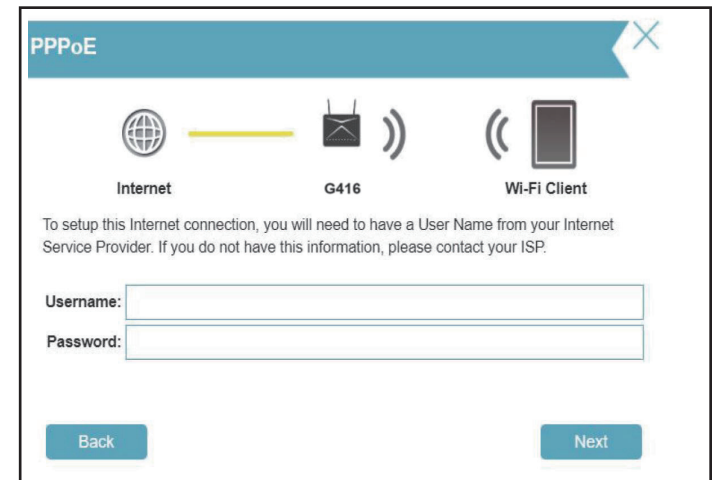

If the router detects or you select **Static**, enter the IP and DNS settings supplied by your ISP. If you do not have this information, please contact your ISP.

Click **Next** to continue.

The screenshot shows the 'Static IP' configuration screen. At the top, there is a blue header with the text 'Static IP' and a close button. Below the header, there are three icons: a globe for 'Internet', a router for 'G416', and a smartphone for 'Wi-Fi Client'. A yellow line connects the Internet and G416 icons. Below the icons, there is a paragraph of text: 'To set up this connection you will need to have a complete list of IP information by your Internet Service Provider. If you have a Static IP connection and do not have this information, please contact your ISP.' Underneath this text are five input fields: 'IP Address:', 'Subnet Mask:', 'Gateway Address:', 'Primary DNS Address:', and 'Secondary DNS Address:'. At the bottom of the screen, there are two buttons: 'Back' on the left and 'Next' on the right.

Type in a **Wi-Fi Network Name** and **Wi-Fi Password** to set up your Wi-Fi network. Your wireless clients will need this network password to be able to connect to your wireless network.

Click **Next** to continue.

Note: *The router's Smart Connect feature presents a single wireless network. When connecting clients to an extended network, they will be automatically added to the best band, either 2.4 GHz or 5 GHz. To disable the Smart Connect feature and individually configure 2.4 GHz and 5 GHz networks, refer to **Wireless** on page 50.*

The screenshot shows the 'Wi-Fi Settings' configuration screen. At the top, there is a blue header with the text 'Wi-Fi Settings' and a close button. Below the header, there are three icons: a globe for 'Internet', a router for 'G416', and a smartphone for 'Wi-Fi Client'. A yellow line connects the Internet and G416 icons. Below the icons, there is a paragraph of text: 'To setup a Wi-Fi network you will need to give your Wi-Fi network a name(SSID) and password.' Underneath this text are two input fields: 'Wi-Fi Network Name:' with the value 'DWR-1953-BFF6' and 'Wi-Fi Password:' with the value 'edhkr33466'. At the bottom of the screen, there are two buttons: 'Back' on the left and 'Next' on the right.

In order to secure the router's configuration page, please enter a password. You will be prompted for this password every time you log in to the router's web configuration utility. Password must be 8-15 characters and contains both numbers and letters.

Note: It is strongly recommended that you change the default device password.

Click **Next** to continue.

Device Admin Password

Internet — G416 — Wi-Fi Client

By default, your new D-Link device does not have a password configured for administrator access to the Web-based configuration utility. To secure your new device, please create a password below.

Device Admin Password:

Back Next

Select your time zone from the drop-down menu.

Click **Next** to continue.

Time Zone

Internet — G416 — Wi-Fi Client


Some essential features require you to set a time zone to work properly. Please select your time zone from the drop-down menu.

Time Zone:

Back Next

Keeping your router's firmware up-to-date provides you with the latest protection and new features over the air. Choose whether to keep your device up-to-date automatically or to manage the device updates by yourself.

Click **Next** to continue.

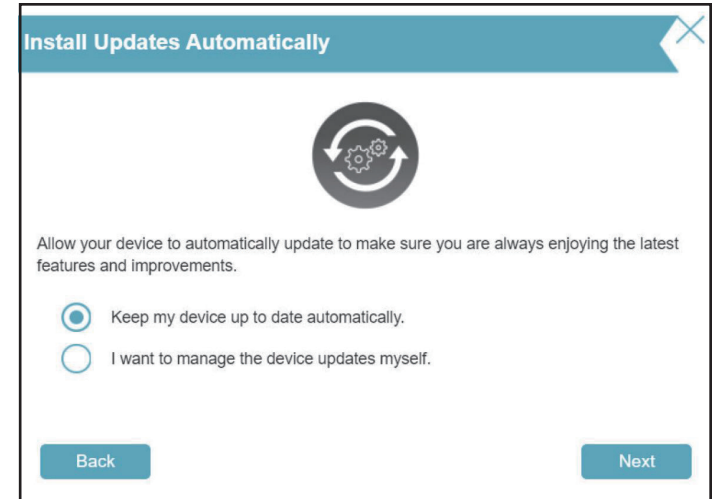

You will be presented with a summary of your settings.


Click **Next** to apply the settings or **Back** to make changes.



Please wait while the device settings are saved.
Do not turn off or unplug your router during this time.



Your new settings have been saved and your router is now configured.
Click **OK** to close the Setup Wizard.
Congratulations, your device has been successfully configured!
You can log in to the web configuration interface with the Admin Password.

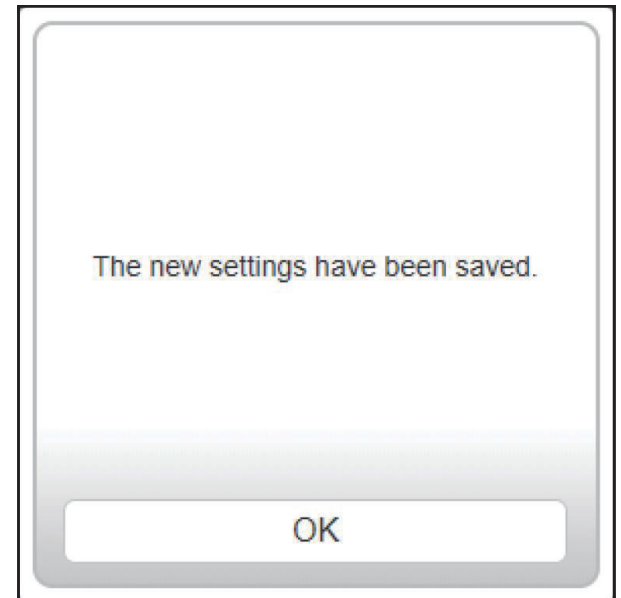

Configuration

If this is your first time installing the router, open your web browser and enter the default management address at **http://XXXX.devicesetup.net/**. (where XXXX represents the last 4 digits of the MAC address).


The Wi-Fi Name(SSID), Wi-Fi Password, and device password are printed on the Quick Installation Card and on the device label.

Note: *If you cannot remember your password for login, use a paperclip to press the recessed **Reset** button on the back of the device to restore the router to its default settings.*

The router's home page will open displaying its current connection status.

The left pane has quick access to **Settings, Features,** and **Management** functions. You can access **AI Assistant** (an AI-assisted message center for reports on Wi-Fi conditions and bandwidth utilization at the top right). Note that you need to turn on AI-assisted functions to receive messages.

Note: *The system will automatically log out after a period (180 seconds) of inactivity.*


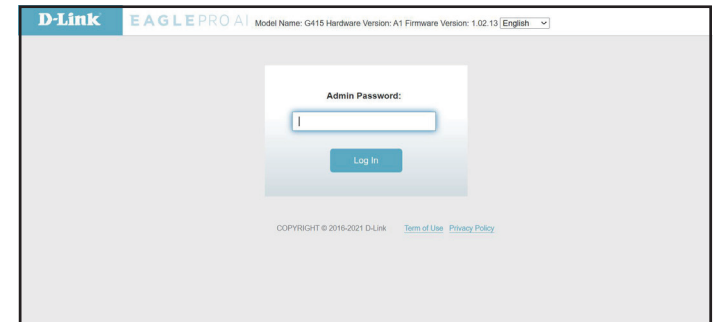


Home

The Home page displays the status of the router in the form of an interactive diagram. You can click each icon to display information about the components of the network at the bottom of the screen. The left pane allows you to quickly navigate to other pages.

The Home page displays whether the router is currently connected to the Internet.

If it is disconnected, click **Click to repair** to bring up the setup wizard, refer to the **Setup Wizard** on page **15** for more information.

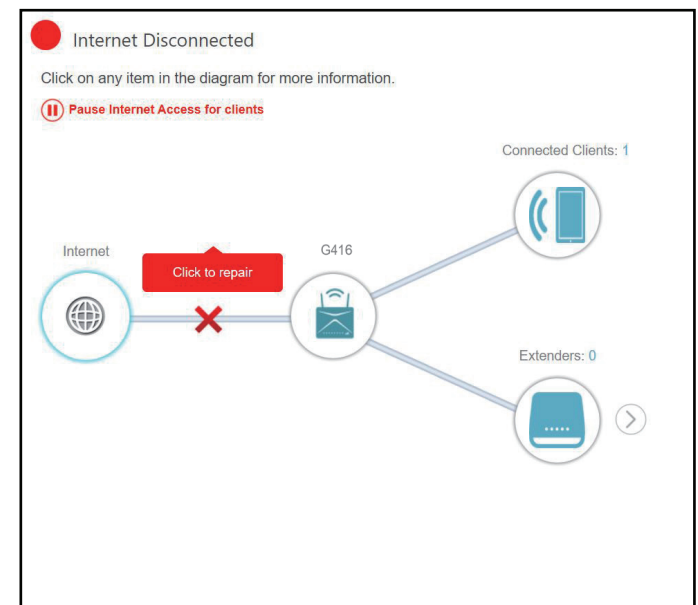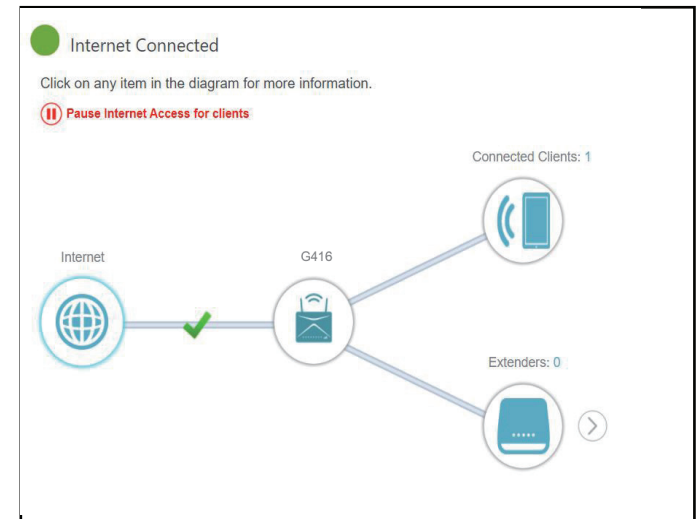

Internet

To bring up more details about your Internet connection, click on the **Internet** icon.

Click **IPv4** or **IPv6** to see details of the IPv4 connection and IPv6 connection respectively.

Click **Release IP Address** to disconnect from the Internet. To reconnect, click **Renew IP Address**.

To reconfigure the Internet settings, refer to **Internet - IPv4** on page **31**.



G416

Click on the **G416** icon to view details about the router and its wireless settings.

Here you can see the router's current Wi-Fi network name and password, as well as the router's MAC address, IPv4 address, and IPv6 address.

To reconfigure network settings, either click **Go to settings** at the bottom of the page, or click **Settings > Network** (in the left pane). Refer to **Network** on page **58** for more information.

To reconfigure wireless settings, either click **Go to settings**, on the lower right, or click **Settings > Wireless** menu (in the left pane). Refer to **Wireless** on page **50** for more information.

The screenshot displays the configuration interface for a D-Link G416 router. At the top, there is a status bar with a red warning icon and the text "Pause Internet Access for clients". Below this is a network diagram showing the router (G416) connected to the Internet, with a green checkmark indicating a successful connection. The router is also connected to two wireless devices (a smartphone and a tablet) and has "Connected Clients: 2" and "Extenders: 0" listed. The main content area is titled "G416" and is divided into two sections: "IPv4 Network" and "Wi-Fi".


Section	Parameter	Value
IPv4 Network	MAC Address	A8:63:7D:61:BD:3A
	Router IP Address	192.168.0.1
	Subnet Mask	255.255.255.0
IPv6 Network	Link-Local Address	FE80::AA63:7DFF:FE61:BD3A
	Router IPv6 Address	Not Available
	DHCP-PD	Enabled
	Assigned Prefix	Not Available
Wi-Fi	Status	Enabled
	Wi-Fi Name (SSID)	G415-BD3A
	Password	edfac46336


At the bottom right of the settings area, there is a "Go to settings" button with a right-pointing arrow.

Connected Clients

Click on the **Connected Clients** icon to obtain information about the connected clients of the router.

On this page you can see all the clients currently connected to the router along with their IP addresses and device manufacturers.

To view more information about a client or edit a client's settings such as IP reservation and parental control, click  on the client you want to edit.

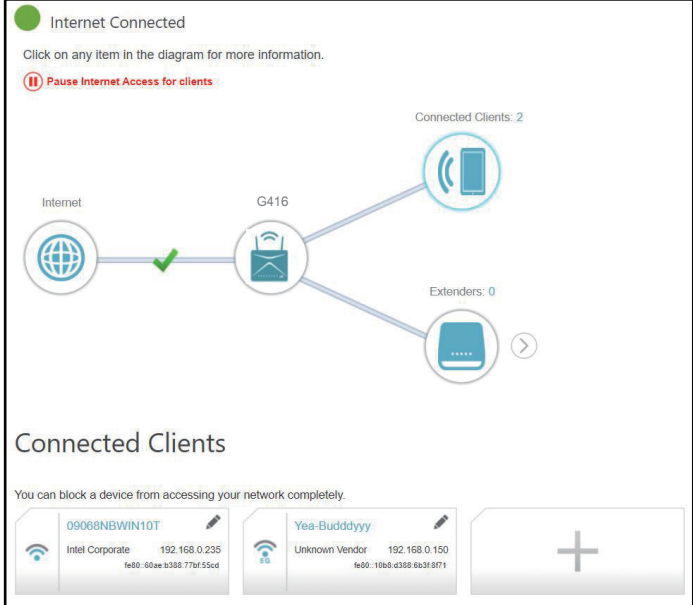

Internet Connected

Click on any item in the diagram for more information.

Pause Internet Access for clients

Internet





G416


Connected Clients: 2

Extenders: 0

Connected Clients

You can block a device from accessing your network completely.

	09068NBWIN10T	
Intel Corporate	192.168.0.235	
	fe80-60ae-b388-77ef55cd	
	Yea-Buddyyy	
Unknown Vendor	192.168.0.150	
	fe80-1068-d388-663f8771	



Edit Rule


- Name** Enter a custom name for this client.
- Vendor** Displays the vendor of the client.
- MAC Address** Displays the MAC address of the client.
- IP Address** Displays the current IP address of the client.
- Reserve IP** Click **Enable** to reserve an IP address for the client.
- IP Address (Reserved)** Specify an IP address for the router's DHCP server to assign.
- Parental Control** Enable Parental Control and select a profile to control the client's Internet access. Make sure that this device is also on the device list of the selected profile.
- Profile** Use the drop-down menu to select a profile to be used for Parental Control. The profile can be set to **Always Block** to have this client blocked from accessing the Internet, or you can create your own profiles to specify the times that the client can access the network. You can also block access to unwanted websites. Refer to **Features > Parental Control** on page **62** for more information.

Click **Save** when you are done.

Settings Wizard

Go to **Settings > Wizard** to open the setup wizard. This is the same wizard that appears when you start the router for the first time. Refer to **Setup Wizard** on page **15** for details.

Note: *When the Wizard is opened, the router will disconnect from the Internet.*

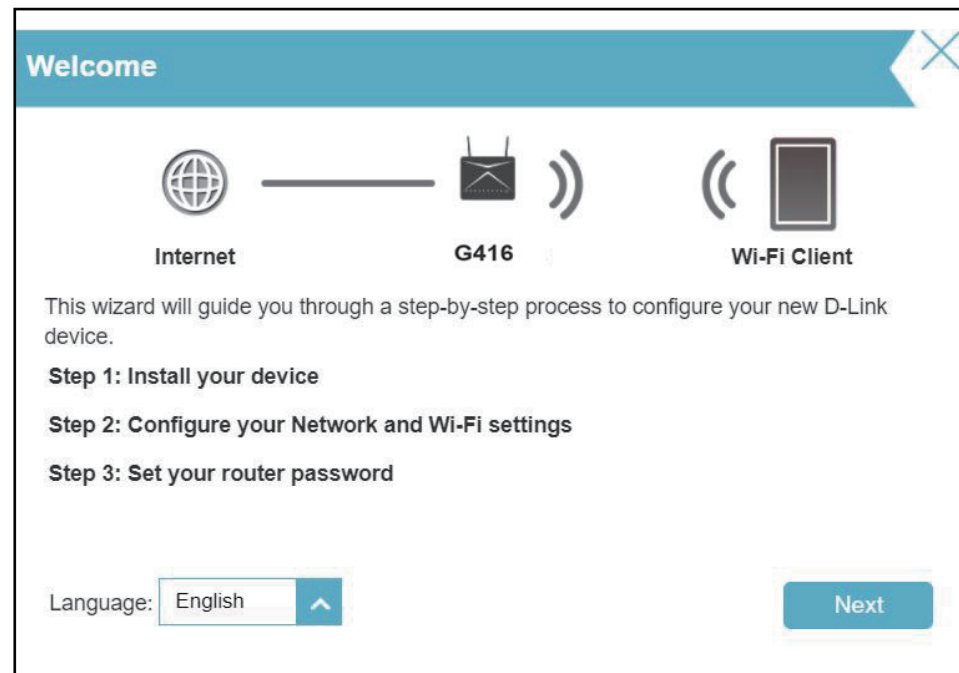

Cellular


Go to **Settings > Cellular** to configure your cellular connection. You can view data on the LTE modem connected to the router and enable/disable the function for automatic creation of 3G/LTE WAN connection.

Connection Settings

Service Mode: Select **3G Only**, **3G Prefer**, **LTE Only**, or **Auto** to let the system determine.

Connection Mode: Select Auto Connect or Manual Connect.

Data Roaming: Enable or disable **Data Roaming**.

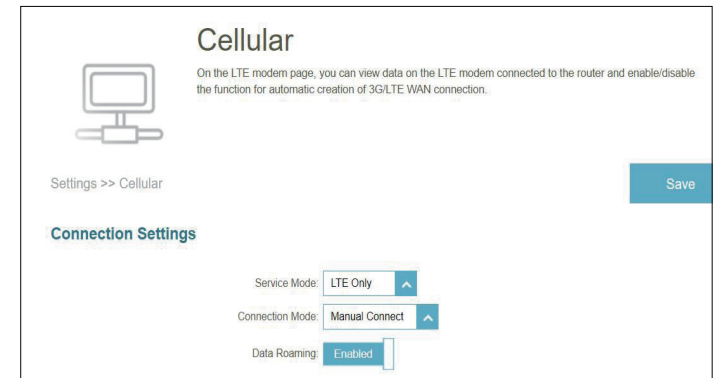

Dial-up Settings

APN Mode: Select Manual or Auto for APN mode.

APN Name: When APN Mode is set to manual, enter the name of your APN.


PDP Type: Select IPv4, IPv6, or IPv6/IPv6 for PDP type.

Username: Enter your username.

Password: Enter your password

Dial Number: Enter the dial number


Authentication Type: Select PAP, CHAP, NONE, or Auto for your authentication type.

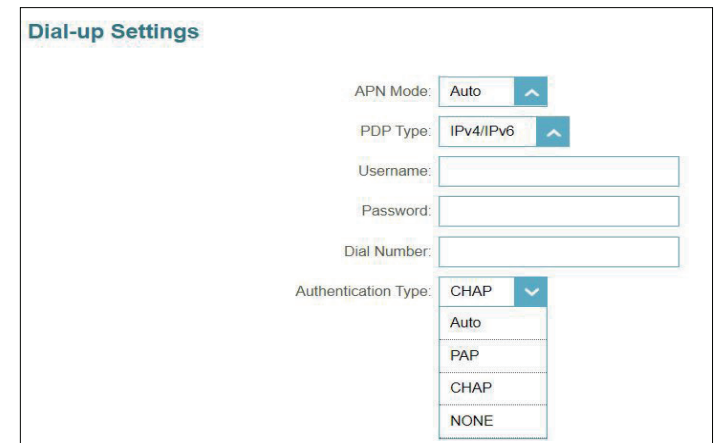

Failover

Go to **Settings->Failover** to configure the WAN backup function. The G416's failover feature allows you to set your router to automatically switch to a backup Internet connection if your primary Internet connection is lost. When the main connection is recovered, the device will switch back on its own.

Click **Save** at any time to save the changes you have made on this page.

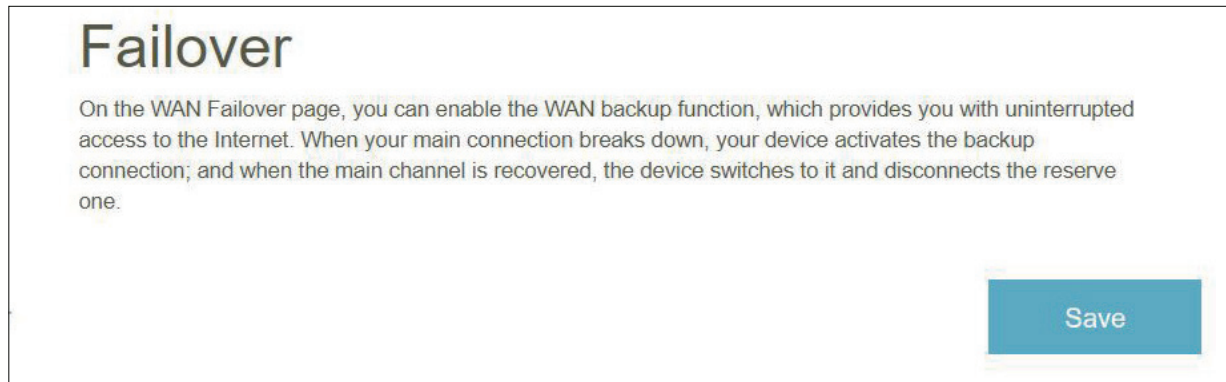

When Failover is enabled, the following options will appear.

Checking Method: Select between **DNS Query + ICMP Ping, ICMP Ping, DNS Query, or Auto.**


Target Host 1: Enter an IP address for Host 1.

Target Host 2: Enter an IP address for Host 2.

Timeout Limit (ms) Enter the timeout limit in milliseconds.

Retry Times Enter the entry time.

Interval Enter the interval in seconds.

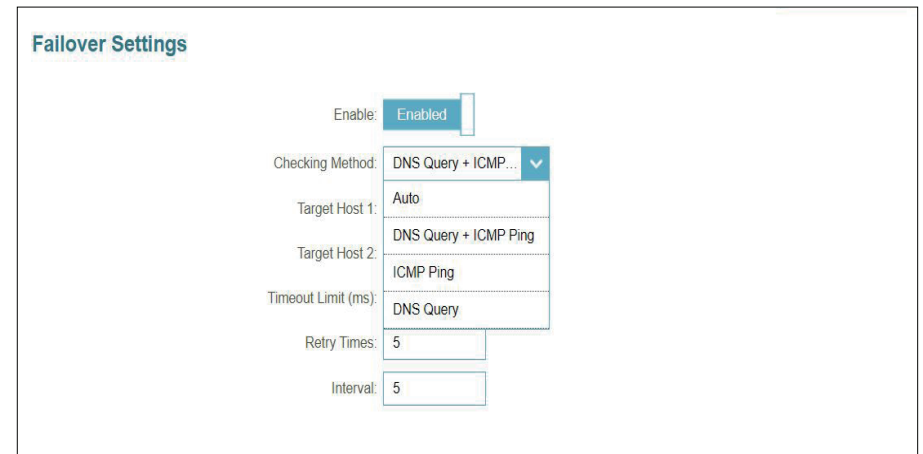

Internet - IPv4

Go to **Settings > Internet** to see the Internet configuration options for IPv4 connection.


To configure IPv6 Internet and network connection details, click the **IPv6** tab. Refer to **Internet - IPv6** on page 36. Click **Save** at any time to save the changes you have made on this page.

My Internet Connection is Choose your Internet connection type from the drop-down menu. You will be presented with **Dynamic IP (DHCP)**, **Static IP**, and **PPPoE** for your connection type.

Secure DNS Enable the secure DNS to use public DNS with encryption via DNS-over-HTTPS (DoH).

DNS over HTTP Provider Select the public DNS service provider: Google or Cloudflare.

Allow Fall-back Use your primary or secondary DNS server as an alternative if the configured provider is not working.

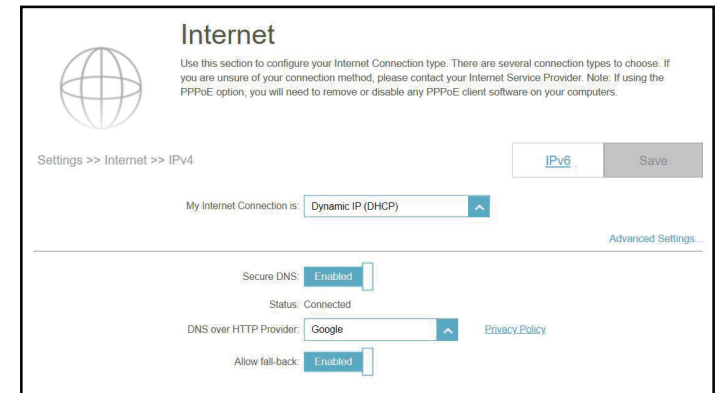

For **IPv4 - Dynamic IP (DHCP)** refer to page 32

For **IPv4 - Static IP** refer to page 33

For **IPv4 - PPPoE** refer to page 34

IPv4 - Dynamic IP (DHCP)

Select **Dynamic IP (DHCP)** to obtain IP address information automatically from your Internet Service Provider (ISP). Select this option if your ISP does not specify an IP address to use. Click **Save** at any time to save the changes you have made on this page.

Advanced Settings...

Host Name	The host name is optional but may be required by some ISPs. Leave it blank if you are not sure.
Primary DNS Server	Enter the primary DNS server IP address assigned by your ISP. This address is usually filled in automatically.
Secondary DNS Server	Enter the secondary DNS server IP address assigned by your ISP. This address is usually filled in automatically.
MTU	Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP. The default is 1500.
MAC Address Clone	The default MAC address is set to the Internet port's physical interface MAC address on the router. You can replace the Internet port's MAC address with the MAC address of a connected client.



Host Name:

Primary DNS Server:

Secondary DNS Server:

MTU:

MAC Address Clone: << MAC Address

IPv4 - Static IP

Select **Static IP** if your IP information is provided by your Internet Service Provider (ISP). Click **Save** at any time to save the changes you have made on this page.

- IP Address** Enter the IP address provided by your ISP.
- Subnet Mask** Enter the subnet mask provided by your ISP.
- Default Gateway** Enter the default gateway address provided by your ISP.
- Primary DNS Server** Enter the primary DNS server IP address provided by your ISP.
- Secure DNS** Enable the secure DNS to use public DNS with encryption via DNS-over-HTTPS (DoH).
- DNS over HTTP Provider** Select the public DNS service provider: Google or Cloudflare.
- Allow Fall-back** Use your primary or secondary DNS server as an alternative if the configured provider is not working.

Advanced Settings...

- Secondary DNS Server** Enter the secondary DNS server IP address assigned by your ISP.
- MTU** Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.
- MAC Address Clone** The default MAC address is set to the Internet port's physical interface MAC address on the router. You can replace the Internet port's MAC address with the MAC address of a connected client.

The screenshot shows the 'Internet' configuration page. At the top, there is a globe icon and the title 'Internet'. Below the title, a note states: 'Use this section to configure your Internet Connection type. There are several connection types to choose. If you are unsure of your connection method, please contact your Internet Service Provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.' The page shows the navigation path 'Settings >> Internet >> IPv4'. There are two buttons at the top right: 'IPv6' and 'Save'. The 'My Internet Connection is:' dropdown menu is set to 'Static IP'. Below this, there are input fields for 'IP Address', 'Subnet Mask', 'Default Gateway', and 'Primary DNS Server'. There is a link for 'Advanced Settings...'. At the bottom, there are toggle switches for 'Secure DNS' (set to 'Enabled'), 'Status' (set to 'Connected'), 'DNS over HTTP Provider' (set to 'Google' with a 'Privacy Policy' link), and 'Allow fall-back' (set to 'Enabled').

The screenshot shows the 'Advanced Settings' section. It contains three input fields: 'Secondary DNS Server', 'MTU' (set to '1500'), and 'MAC Address Clone'. The 'MAC Address Clone' field has a dropdown menu with '<< MAC Address' selected.

IPv4 - PPPoE

Select **PPPoE** (Point-to-Point Protocol over Ethernet) if your ISP requires you to enter a PPPoE username and password in order to connect to the Internet. Click **Save** at any time to save the changes you have made on this page.

Username Enter the username provided by your ISP.

Password Enter the password provided by your ISP.

Reconnect Mode Select either **Always on**, **On Demand**, or **Manual**.

Maximum Idle Time Configurable when **On Demand** is selected. Enter a maximum idle time during which the Internet connection is maintained during inactivity. The default is 5 minutes. To disable this feature, select **Always on** or **Manual** as the reconnect mode.

Secure DNS Enable the secure DNS to use public DNS with encryption via DNS-over-HTTPS (DoH).

DNS over HTTP Provider Select the public DNS service provider: Google or Cloudflare.

Allow Fall-back Use your primary or secondary DNS server as an alternative if the configured provider is not working.

The screenshot shows the 'Internet' configuration page. At the top, there is a globe icon and the title 'Internet'. Below the title is a note: 'Use this section to configure your Internet Connection type. There are several connection types to choose. If you are unsure of your connection method, please contact your Internet Service Provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.' The breadcrumb 'Settings >> Internet >> IPv4' is visible. There are 'IPv6' and 'Save' buttons. The 'My Internet Connection is:' dropdown is set to 'PPPoE'. Below this are fields for 'Username', 'Password', 'Reconnect Mode' (set to 'On demand'), and 'Maximum Idle Time' (set to '5 minutes'). There is an 'Advanced Settings...' link. At the bottom, there are toggle switches for 'Secure DNS' (Enabled), 'Status' (Connected), 'DNS over HTTP Provider' (Google), and 'Allow fall-back' (Enabled). A 'Privacy Policy' link is also present.

Advanced Settings... - Dynamic IP

Address Mode Select **Static IP** if the following information has been provided by your ISP: IP address, MTU, and DNS server addresses. In most cases, select **Dynamic IP**.

IP Address When **Static IP** is selected as the address mode, the column for IP address will appear. Enter the IP address provided by your ISP.

Service Name Enter the ISP service name (optional)

Primary DNS Server Enter the primary DNS server IP address assigned by your ISP.

Secondary DNS Server Enter the secondary DNS server IP address assigned by your ISP.

MTU Maximum Transmission Unit (1280~1500)- you may need to change the MTU for optimal performance with your ISP. The default is 1500.

MAC Address Clone The default MAC address is set to the Internet port's physical interface MAC address on the router. You can replace the Internet port's MAC address with the MAC address of a connected client.

The screenshot shows a configuration form for Dynamic IP. The fields are as follows:

- Address Mode:** A dropdown menu set to "Dynamic IP".
- Service Name:** A text input field containing "Dynamic IP".
- Primary DNS Server:** A text input field containing "Static IP".
- Secondary DNS Server:** An empty text input field.
- MTU:** A text input field containing "1492".
- MAC Address Clone:** A text input field that is empty, with a dropdown arrow on the right showing "<< MAC Address".

Internet - IPv6

Go to **Settings > Internet** to see the Internet configuration options for IPv4 , then click the **IPv6** tab to access the configuration options for IPv6.

To configure the IPv4 Internet and network connection details, click the **IPv4** tab. Refer to **Internet - IPv4** on page **31**

Click **Save** at any time to save the changes you have made on this page.

My Internet Connection is

Choose your Internet connection type from the drop-down menu. You will be presented with the appropriate options for your connection type.

For **IPv6 - Auto Detection** refer to page **37**


For **IPv6 - Static IPv6** refer to page **39**

For **IPv6 - Auto Configuration (SLAAC/DHCPv6)** refer to page **41**

For **IPv6 - PPPoE** refer to page **43**


For **IPv6 - 6rd** refer to page **47**

For **IPv6 - Local Connectivity Only** refer to page **49**

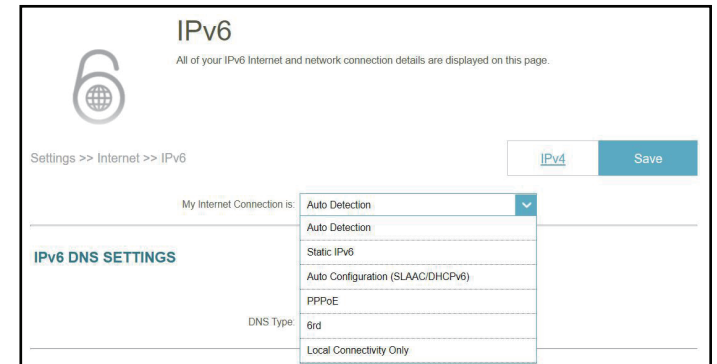

IPv6 - Auto Detection

Select **Auto Detection** to automatically detect the IPv6 connection method used by your Internet Service Provider (ISP). If Auto Detection fails, you can manually select another IPv6 connection type. Click **Save** at any time to save the changes you have made on this page.


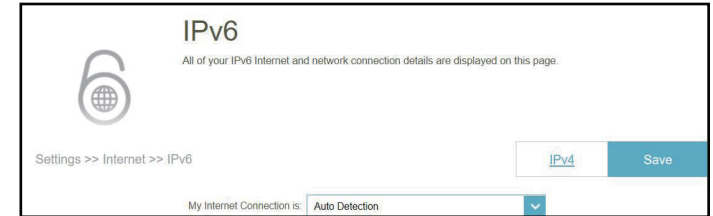


IPv6 DNS Settings

DNS Type Select either **Obtain DNS server address automatically** or **Use the following DNS address**.

Primary DNS Server If you select **Use the following DNS address**, enter the primary DNS server address.

 Secondary DNS Server Enter the secondary DNS server address as a backup.

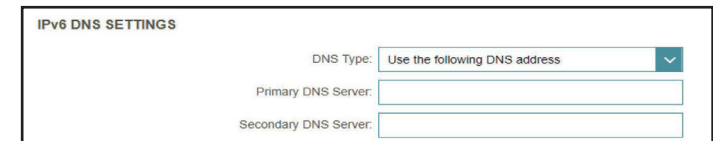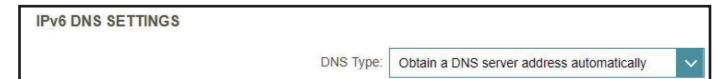

LAN IPv6 Address Settings


Enable DHCP-PD Enable or disable DHCP prefix delegation.

LAN IPv6 Link-Local Address Displays the router's LAN link-local address, which is used only within the local network.

If **Enable DHCP-PD** is disabled, enter the following:

LAN IPv6 Address Enter a valid LAN IPv6 address.

LAN IPv6 Link-Local Address Displays the router's LAN link-local address.

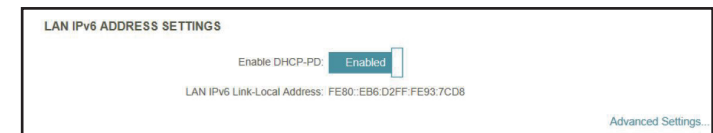

Advanced Settings... - Address Autoconfiguration Settings




- Enable Automatic IPv6 Address Assignment** Enable or disable the Automatic IPv6 Address Assignment feature.
- Enable Automatic DHCP-PD in LAN** Enable or disable DHCP-PD for other IPv6 routers connected to the LAN interface.
- Autoconfiguration Type** Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

- Router Advertisement Lifetime** Enter the router advertisement lifetime (in minutes). The default is 30 minutes.

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

- IPv6 Address Range (Start)** Enter the start IPv6 address for the DHCP server's IPv6 assignment.
- IPv6 Address Range (End)** Enter the end IPv6 address for the DHCP server's IPv6 assignment.
- IPv6 Address Lifetime** Enter the dynamic IP's retention time. The default is 10080 minutes.

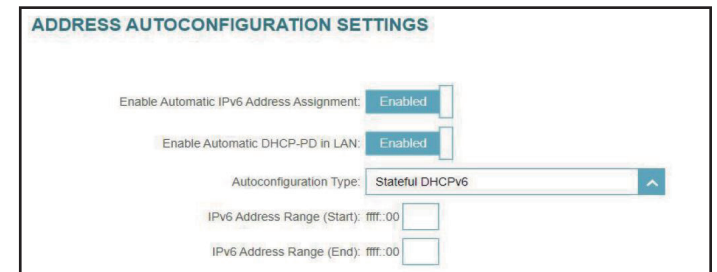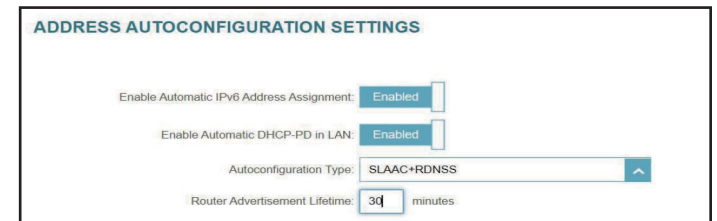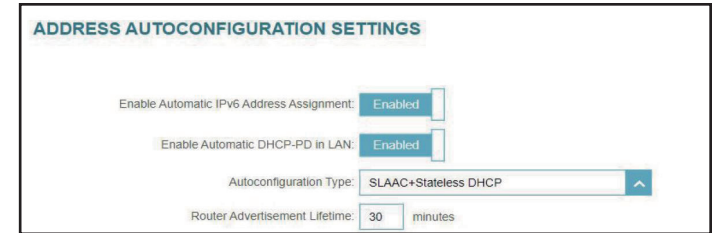

IPv6 - Static IPv6

Select **Static IP** if your IPv6 information is provided by your Internet Service Provider (ISP). Click **Save** at any time to save the changes you have made on this page.

- Use Link-Local Address** Enable or disable link-local address.
- IPv6 Address** Configurable when **Use Link-Local Address** is disabled. Enter the address supplied by your ISP.
- Subnet Prefix Length** Configurable when **Use Link-Local Address** is disabled. Enter the subnet prefix length (1~128) supplied by your ISP.
- Default Gateway** Enter the default gateway for your IPv6 connection.
- Primary DNS Server** Enter the primary DNS server address.
- Secondary DNS Server** Enter the secondary DNS server address.

LAN IPv6 Address Settings

- LAN IPv6 Address** Enter the LAN (local) IPv6 address for the router.
- LAN IPv6 Link-Local Address** Displays the router's LAN link-local address.

IPv6
All of your IPv6 Internet and network connection details are displayed on this page.

Settings>>Internet>>IPv6

VLAN IPv4 Save

My Internet Connection is: Static IPv6

Use Link-Local Address: Disabled

IPv6 Address:

Subnet Prefix Length:

Default Gateway:

Primary DNS Server:

Secondary DNS Server:

LAN IPv6 ADDRESS SETTINGS

LAN IPv6 Address: /64

LAN IPv6 Link-Local Address: FE80::AA63:7DFF:FE61:C262/64

[Advanced Settings...](#)

Advanced Settings... - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment feature.

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:




Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes). The default is 30 minutes.

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the start IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End) Enter the end IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Lifetime Enter the dynamic IP's retention time. The default is 10080 minutes.

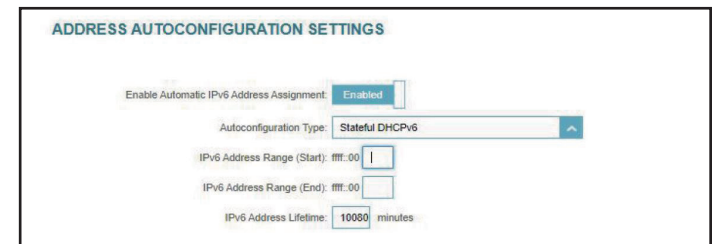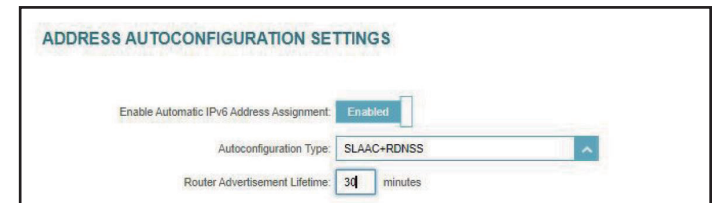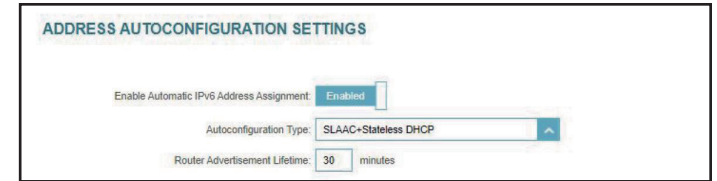

IPv6 - Auto Configuration (SLAAC/DHCPv6)

Select **Auto Configuration** if your ISP assigns an IPv6 address when your router requests one from the ISP's server. Some ISPs require you to configure relevant settings in advance before your router can connect to the IPv6 Internet. Click **Save** at any time to save the changes you have made on this page.

IPv6 DNS Settings

DNS Type Select either **Obtain DNS server address automatically** or **Use the following DNS address**.

Primary DNS Server If you select **Use the following DNS address**, enter the primary DNS server address.

Secondary DNS Server If you select **Use the following DNS address**, enter the secondary DNS server address.

LAN IPv6 Address Settings

Enable DHCP-PD Enable or disable prefix delegation.

LAN IPv6 Link-Local Address Displays the router's LAN link-local address.

*If **Enable DHCP-PD** is disabled, configure the following:*

LAN IPv6 Address Enter a valid LAN IPv6 address.

LAN IPv6 Link-Local Address Displays the router's LAN link-local address for the local network only.

Settings->Internet->IPv6

VLAN IPv6 Save

My Internet Connection is: Auto Configuration (SLAAC/DHCPv6)

IPv6 DNS SETTINGS

DNS Type: Use the following DNS address

Primary DNS Server:

Secondary DNS Server:

LAN IPv6 ADDRESS SETTINGS

Enable DHCP-PD: Enabled

LAN IPv6 Link-Local Address: /64

Advanced Settings

ADDRESS AUTOCONFIGURATION SETTINGS

Enable Automatic IPv6 Address Assignment: Enabled

Enable Automatic DHCP-PD in LAN: Disabled

Autoconfiguration Type: SLAAC+Stateless DHCP

Router Advertisement Lifetime: 30 minutes

Advanced Settings... - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment feature.

Enable Automatic DHCP-PD in LAN If **DHCP-PD** is enabled in the previous LAN IPv6 Address Settings, enable or disable automatic DHCP-PD for other IPv6 routers connected to the LAN interface.

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:




Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes). The default is 30 minutes.

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the start IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End) Enter the end IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Lifetime If **DHCP-PD** is disabled in the previous LAN IPv6 Address Settings, enter the IP address retention period in minutes. The default is 10080 minutes.

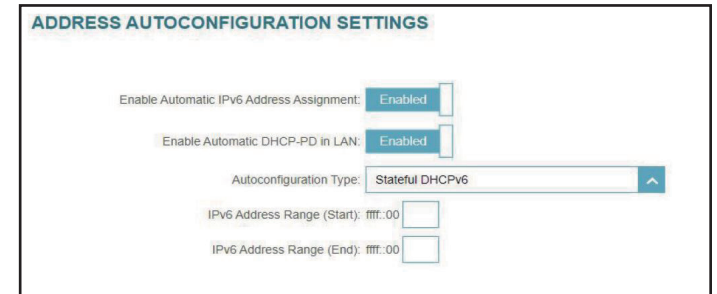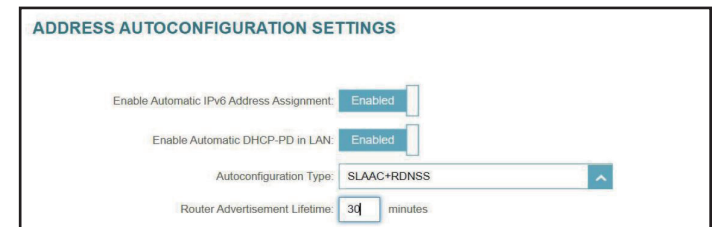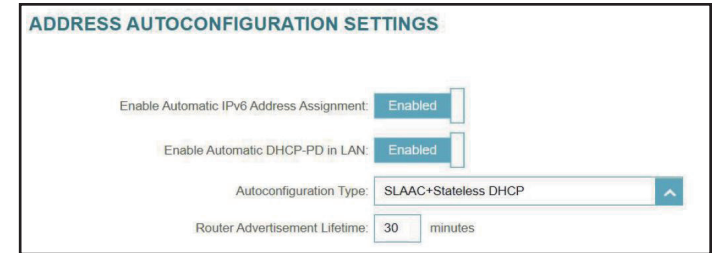

IPv6 - PPPoE

Select **PPPoE** if your ISP requires you to enter a PPPoE username and password to connect to the Internet. Click **Save** at any time to save the changes you have made on this page.

- PPPoE Session** Create a new PPPoE session.
- Username** Enter the username provided by your ISP.
- Password** Enter the password provided by your ISP.
- Address Mode** Select either **Dynamic IP** or **Static IP**.
- IP Address** Configurable if Static IP is chosen. Enter the IP address provided by your ISP.
- Service Name** Enter the ISP service name (optional).
- Reconnect Mode** Select either **Always On** or **Manual**.
- MTU** Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP. The default is 1492 bytes.


The screenshot shows the IPv6 configuration interface. At the top, there's a lock icon and the text "IPv6" and "All of your IPv6 Internet and network connection details are displayed on this page." Below that, the breadcrumb "Settings >> Internet >> IPv6" is visible. There are three buttons: "VLAN", "IPv4", and "Save". The "Save" button is highlighted. The main configuration area contains several dropdown menus and input fields: "My Internet Connection is:" is set to "PPPoE"; "PPPoE Session:" is set to "Create a new session"; "Username:" has an input field with the letter "I"; "Password:" has an empty input field; "Address Mode:" is set to "Dynamic IP"; "Service Name:" has an empty input field; "Reconnect Mode:" is set to "Always on"; and "MTU:" is set to "1492 bytes".

IPv6 DNS Settings

DNS Type Select either **Obtain DNS server address automatically** or **Use the following DNS address**.

Primary DNS Server If you select **Use the following DNS address**, enter the primary DNS server address.

Secondary DNS Server If you select **Use the following DNS address**, enter the secondary DNS server address as a backup.


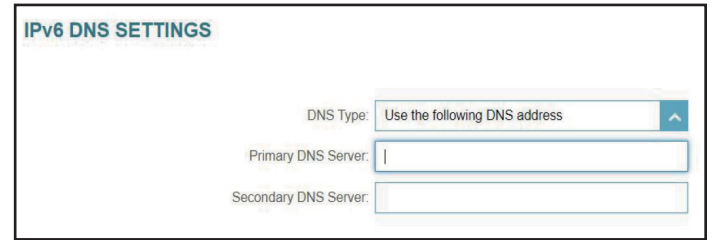


LAN IPv6 Address Settings

Enable DHCP-PD Enable or disable prefix delegation.

LAN IPv6 Address Configurable if the above DHCP-PD is disabled. Enter the IP address provided by your ISP.

LAN IPv6 Link-Local Address Displays the router's LAN link-local address for the local network only.

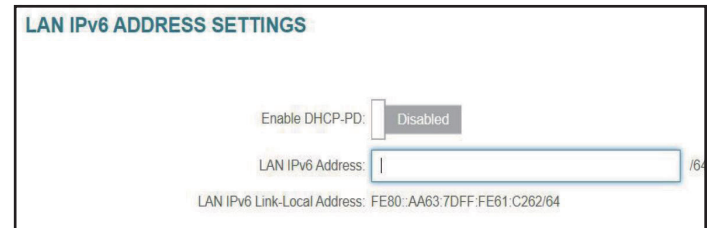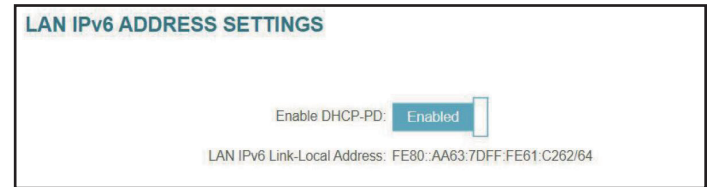

Advanced Settings... - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment.

If **Enable DHCP-PD** is enabled in the previous LAN IPv6 Address Settings:

Enable Automatic DHCP-PD in LAN Enable or disable DHCP-PD for other IPv6 routers connected to the LAN interface.

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes).

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the start IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End) Enter the end IPv6 address for the DHCP server's IPv6 assignment.

The screenshot shows the 'ADDRESS AUTOCONFIGURATION SETTINGS' page. The 'Enable Automatic IPv6 Address Assignment' and 'Enable Automatic DHCP-PD in LAN' options are both set to 'Enabled'. The 'Autoconfiguration Type' dropdown menu is open, showing four options: 'SLAAC+RDNSS' (selected), 'SLAAC+RDNSS', 'SLAAC+Stateless DHCP', and 'Stateful DHCPv6'. The 'Router Advertisement Lifetime' field is currently empty.

The screenshot shows the 'ADDRESS AUTOCONFIGURATION SETTINGS' page. The 'Enable Automatic IPv6 Address Assignment' and 'Enable Automatic DHCP-PD in LAN' options are both set to 'Enabled'. The 'Autoconfiguration Type' dropdown menu is set to 'SLAAC+Stateless DHCP'. The 'Router Advertisement Lifetime' field is set to '30 minutes'.

The screenshot shows the 'ADDRESS AUTOCONFIGURATION SETTINGS' page. The 'Enable Automatic IPv6 Address Assignment' and 'Enable Automatic DHCP-PD in LAN' options are both set to 'Enabled'. The 'Autoconfiguration Type' dropdown menu is set to 'Stateful DHCPv6'. The 'IPv6 Address Range (Start)' field is set to 'ffff::00' and the 'IPv6 Address Range (End)' field is set to 'ffff::00'.

Advanced Settings... - Address Autoconfiguration Settings

Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment feature.

If **Enable DHCP-PD** is disabled in the previous LAN IPv6 Address Settings:

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:




Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes). The default is 30 minutes.

If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the start IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Range (End) Enter the end IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Lifetime Enter the IPv6 address lifetime (in minutes). The default is 10080 minutes.

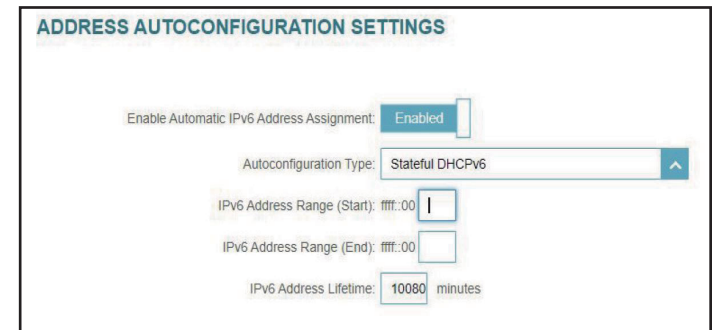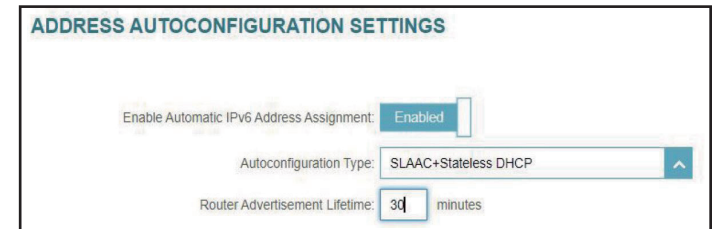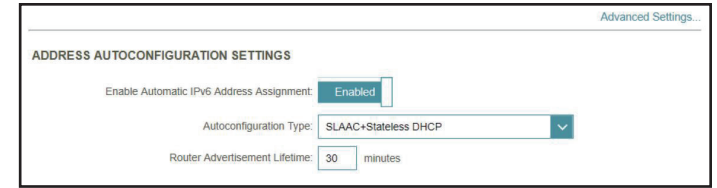

IPv6 - 6rd

IPv6 **6rd** (rapid deployment) allows IPv6 packets to be transmitted over an IPv4 network. Click **Save** at any time to save the changes you have made on this page.

- Assign IPv6 Prefix** Currently unsupported.
- Primary DNS Server** Enter the primary DNS server address.
- Secondary DNS Server** Enter the secondary DNS server address as a backup.

6rd Manual Configuration

- Enable Hub and Spoke Mode** Enable this option if you want to minimize the number of routes to the destination by using a hub and spoke method of networking.
- 6rd Configuration** Choose the **6rd DHCPv4 Option** to automatically discover and populate the data values, or **Manual Configuration** to enter the settings yourself.

If you select **Manual Configuration** as the 6rd Configuration:

- 6rd IPv6 Prefix** Enter the 6rd IPv6 network address and prefix length (1~128) supplied by your ISP.
- WAN IPv4 Address** Enter the IPv4 network prefix.
- 6rd Border Relay IPv4 Address** Enter the 6rd border relay IPv4 address settings supplied by your ISP.

LAN IPv6 Address Settings

LAN IPv6 Address Displays the router's LAN IPv6 address.


LAN IPv6 Link-Local Address Displays the router's LAN link-local address.



Advanced Settings... - Address Autoconfiguration Settings


Enable Automatic IPv6 Address Assignment Enable or disable the Automatic IPv6 Address Assignment feature.

Autoconfiguration Type Select **SLAAC+RDNSS**, **SLAAC+Stateless DHCP**, or **Stateful DHCPv6**.

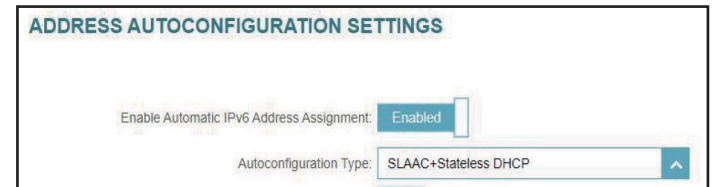

If you select **SLAAC+RDNSS** or **SLAAC+Stateless DHCP** as the Autoconfiguration Type:

Router Advertisement Lifetime Enter the router advertisement lifetime (in minutes). The default is 30 minutes.

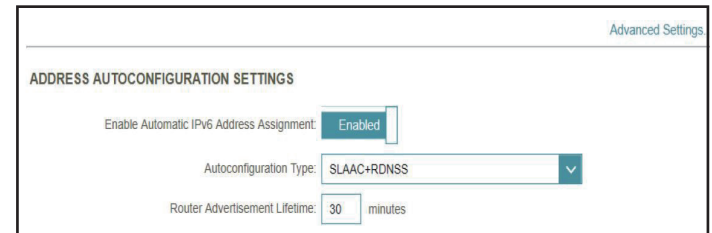


If you select **Stateful DHCPv6** as the Autoconfiguration Type:

IPv6 Address Range (Start) Enter the start IPv6 address for the DHCP server's IPv6 assignment.


IPv6 Address Range (End) Enter the end IPv6 address for the DHCP server's IPv6 assignment.

IPv6 Address Lifetime Enter the IPv6 address lifetime (in minutes). The default is 10080 minutes.

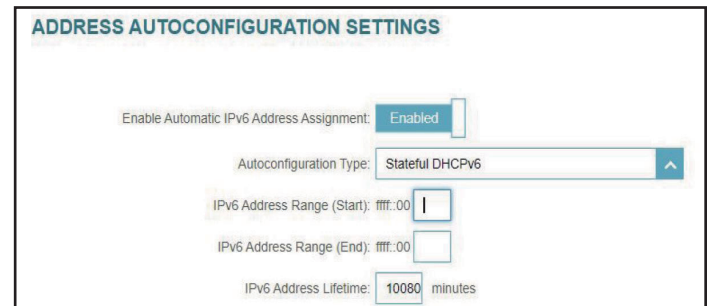

IPv6 - Local Connectivity Only

Local Connectivity Only allows you to set up an IPv6 connection that will not connect to the Internet. Click **Save** at any time to save the changes you have made on this page.

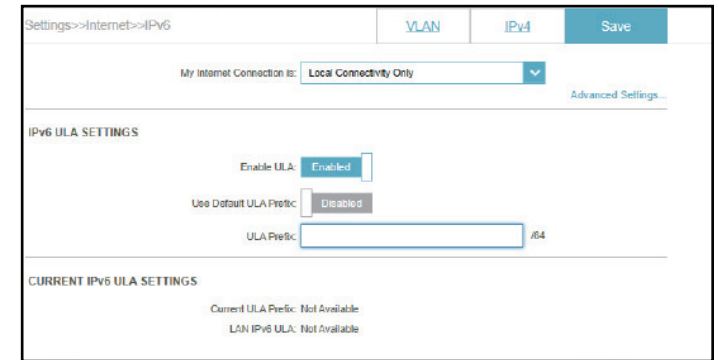

Advanced Settings... - IPv6 ULA Settings

Enable ULA Click here to enable Unique Local IPv6 Unicast Addresses settings.

Use Default ULA Prefix Enable this option to use the default ULA prefix.

ULA Prefix If you disable Use Default ULA Prefix, enter your own ULA prefix.

Advanced Settings... - Current IPv6 ULA Settings

Current ULA Prefix Displays the current ULA prefix.

LAN IPv6 ULA Displays the LAN's IPv6 ULA.

Wireless

Go to **Settings > Wireless** to see your wireless network settings for your router.

Click **Save** at any time to save the changes you have made on this page.

Wi-Fi Mesh

Status Enable or disable Wi-Fi mesh if you plan to build a mesh network in your environment. The mesh network is able to find the shortest and fastest path to your gateway/router in a mesh network topology. Hence, it enhances efficiency and reliability.

Smart Connect

Status Enable or disable the Smart Connect Feature. The Smart Connect feature presents a single wireless network. When connecting clients to the extended network, the clients will be automatically added to the best band, either 2.4 GHz or 5 GHz.

*If Smart Connect is **Enabled**:*

Wireless

Wi-Fi Name (SSID) Create a name for your wireless network. Up to 32 characters are allowed.

Password Create a password to use for wireless security. Wireless clients will need to enter this password to successfully connect to the network.

The screenshot shows the 'Wireless' configuration page. At the top, there is a Wi-Fi icon and a title 'Wireless'. Below the title is a note: 'Use this section to configure the wireless settings for your D-Link Router. Please make sure that any changes made in this section will need to be updated on your wireless device.' There are two buttons: 'Guest Zone' and 'Save'. The page is divided into three sections:

- Wi-Fi Mesh:** Status is 'Enabled'.
- Smart Connect:** Status is 'Enabled'.
- Wireless:** Status is 'Enabled'. It includes two input fields: 'Wi-Fi Name (SSID)' with the value 'G416-BD3A' and 'Password' with the value 'edhr33466'. There is an 'Advanced Settings' link to the right.

Wireless - Advanced Settings...

Security Mode Choose **None**, **WPA/WPA2-Personal**, **WPA2-Personal**, **WPA2/WPA3-Personal**, or **WPA3-Personal**. WPA3 provides the highest level of security among these. Note that WPS will be disabled if WPA3 is used.

Transmission Power Select the desired wireless transmission power: High, Medium, or Low.

Schedule Select the time during which the wireless network will be available. The schedule may be set to Always Enable or you can add your own schedule.

To add a schedule:

Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.

The screenshot shows the 'Wireless' configuration page. At the top, the 'Status' is set to 'Enabled'. Below that, the 'Wi-Fi Name (SSID)' is 'Rt-G416-BD3A' and the 'Password' is 'kkuq47847'. There is a link for 'Advanced Settings...'. In the lower section, 'Security Mode' is set to 'WPA3-Personal', 'Transmission Power' is 'High', and 'Schedule' is 'Always Enable' with a plus sign icon.

Smart Connect

Status Enable or disable the Smart Connect Feature. When disabled, 2.4GHz and 5GHz configuration options become available.

If Smart Connect is **Disabled**:

2.4GHz / 5GHz

Status Enable or disable the 2.4GHz / 5GHz wireless network.

Wi-Fi Name (SSID) Create a name for your wireless network. Up to 32 characters are allowed.

Password Create a password to use for wireless security. Wireless clients will need to enter this password to connect to the network.

The screenshot displays the wireless configuration interface for the D-Link G416. It is divided into three main sections:

- Smart Connect:** A toggle switch is currently set to "Disabled".
- 2.4GHz:**
 - Status: Enabled
 - Wi-Fi Name (SSID): G416-8D3A
 - Password: kkuq47047
 - Advanced Settings link
 - Security Mode: WPA3-Personal
 - 802.11 Mode: Mixed 802.11b/g/n
 - Wi-Fi Channel: Auto
 - Transmission Power: High
 - Channel Width: Auto 20/40 MHz
 - HT20/40 Coexistence: Enabled
 - Visibility Status: Visible
 - Schedule: Always Enable
- 5GHz:**
 - Status: Enabled
 - Wi-Fi Name (SSID): G416-8D3A
 - Password: kkuq47047
 - Advanced Settings link

2.4GHz - Advanced Settings...

Security Mode Choose **None**, **WPA/WPA2-Personal**, **WPA2-Personal**, **WPA2/WPA3-Personal**, or **WPA3-Personal**. WPA3 provides the highest level of security among these. Note that WPS will be disabled if WPA3 is used.

802.11 Mode (2.4GHz) Select the desired wireless networking standards to use. The available options for the 2.4 GHz wireless network are **Mixed 802.11b/g/n**, **Mixed 802.11b/g**, **Mixed 802.11g/n**, **802.11b only**, **802.11g only**, and **802.11n only**.

Wi-Fi Channel Select the desired channel:1-11. The default is **Auto** (recommended).

Transmission Power Select the desired wireless transmission power: High, Medium, or Low.

Channel Width (2.4GHz) Select **Auto 20/40 MHz** if you are using both 802.11n and non-802.11n (802.11b/g/a) devices, or select **20 MHz** if you are using a mix of 802.11b/g/a devices.

HT20/40 Coexistence (2.4GHz) Enable or disable HT20/40 Coexistence.

Visibility Status The default setting is **Visible**. Select **Invisible** if you do not want to broadcast the SSID of your wireless network.

Schedule Select the time during which the wireless network will be available. The schedule may be set to Always Enable or you can add your own schedule.

To add a schedule:

Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.

2.4GHz

Status: Enabled

Wi-Fi Name (SSID):

Password:

[Advanced Settings](#)

Security Mode:

802.11 Mode:

Wi-Fi Channel:

Transmission Power:

Channel Width:

HT20/40 Coexistence: Enabled

Visibility Status:

Schedule:

5GHz - Advanced Settings...

Security Mode Choose **None**, **WPA/WPA2-Personal**, **WPA2-Personal**, **WPA2/WPA3-Personal**, or **WPA3-Personal**. WPA3 provides the highest level of security among these. Note that WPS will be disabled if WPA3 is used.

802.11 Mode (5GHz) Select the desired wireless networking standards to use. The available options for the 5 GHz wireless network are **Mixed 802.11a/n/ac/ax**, **Mixed 802.11a/n/ac**, **Mixed 802.11a/n**, **802.11ac only**, **802.11a only**, and **802.11n only**.

Wi-Fi Channel Select the desired channel: 36, 40, 44, 48, 149, 153, 157, 161, or 165. The default is **Auto** (recommended).

DFS Channel If Auto Channel is selected, select this option to help find one with the least interference.

Transmission Power Select the desired wireless transmission power: High, Medium, or Low.

Channel Width (5GHz) Select **Auto 20/40/80 MHz** if you are using 802.11ax, 802.11ac, 802.11n, and 802.11a devices, select **Auto 20/40** if you are using 802.11n and 802.11a devices, or select **20 MHz** if you are using 802.11a devices.

Visibility Status The default setting is **Visible**. Select **Invisible** if you do not want to broadcast the SSID of your wireless network.

Schedule Select the time during which the wireless network will be available. The schedule may be set to Always Enable or you can add your own schedule.

To add a schedule:

Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.

5GHz

Status: Enabled

Wi-Fi Name (SSID):

Password:

[Advanced Settings...](#)

Security Mode:

802.11 Mode:

Wi-Fi Channel:

Transmission Power:

Channel Width:

Visibility Status:

Schedule: +


AI Wi-Fi Optimizer

AI-assisted Wi-Fi Optimizer intelligently assists in bandwidth optimization in your home or office network. It automatically adopts the "cleanest" channel using the mesh beamforming technology, which in turn optimizes the overall mesh network. It also provides push notifications about weekly network bandwidth utilization and network management advice on prioritizing clients to maintain the overall Internet quality. Refer to **EAGLE PRO AI** on page **94** for more information.

AI Wi-Fi Optimizer Enable or disable AI Wi-Fi Optimizer functionality.

Choose Optimization Time Enable or disable scheduled optimization. Select the time at which the AI Wi-Fi Optimizer will start.


Once this is turned on, you will start receiving weekly reports on Wi-Fi conditions through AI Assistant.

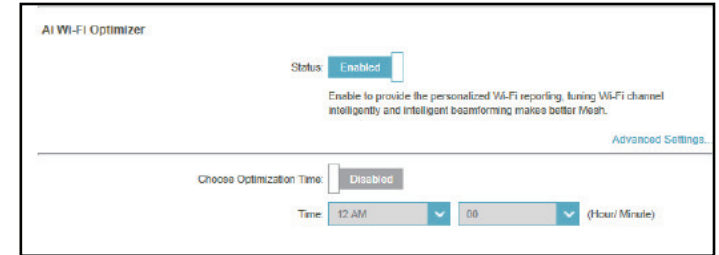

Wi-Fi Protected Setup

The easiest way to connect your wireless devices to the router is with Wi-Fi Protected Setup (WPS).

 WPS-PBC Status Enable or disable WPS-PBC (Push Button Configuration) functionality. Press to establish a connection with another WPS compatible device.

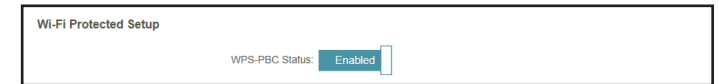

Guest Zone

Go to **Settings > Wireless**, then click the **Guest Zone** tab to configure your guest Wi-Fi.

The **Guest Zone** feature will allow you to create temporary zones that can be used by guests to access the Internet. These zones will be separate from your main wireless network. You may configure different zones for the 2.4 GHz and 5 GHz wireless bands.

Click **Save** at any time to save the changes you have made on this page.

If Smart Connect is **Enabled** in the previous Wireless settings, configure the following for both radio frequencies. If it is **Disabled**, configure the following for 2.4GHz and 5GHz individually.

Wireless

Status Enable or disable the Guest Zone feature. The status is disabled by default.

Wireless Name (SSID) Create a name for your wireless network using up to 32 characters.

Password Create a password to use for wireless security. Your password must be between 8-63 characters in length.


Schedule Select the time during which the wireless network will be available. The schedule may be set to Always Enable or you can add your own schedule.

To add a schedule:

Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.

Advanced Settings

Security Mode Choose **None**, **WPA/WPA2-Personal**, **WPA2-Personal**, **WPA2/WPA3-Personal**, or **WPA3-Personal**. WPA3 provides the highest level of security among these. Note that WPS will be disabled if WPA3 is used.

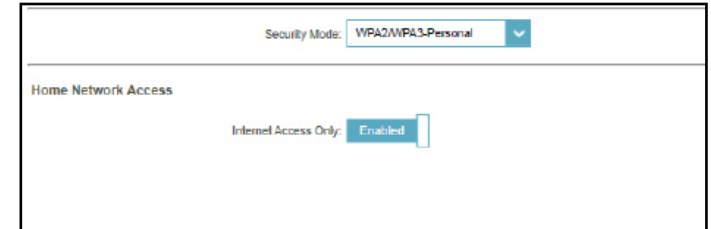

Home Network Access

Internet Access Only Enabling this option will confine connectivity to the Internet and prevent guests from accessing other local network devices.

Network

Go to **Settings > Network** to change the local network settings of the router and configure the DHCP settings.

Click **Save** at any time to save the changes you have made on this page.

Network Settings

LAN IP Address Enter the IP address of the router. The default IP address is **192.168.0.1**. If you change the IP address, you will need to enter the new IP address in your browser to log in to the web configuration.

Subnet Mask Enter the subnet mask of the router. The default subnet mask is **255.255.255.0**.

Management Link The default address to access the router's configuration is **http://G416-xxxx.local/** (where xxx represents the last 4 digits of your router's MAC address). You can replace **G416-xxxx** with a name of your choice.

Local Domain Name Enter the domain name (optional).

Enable DNS Relay Disable this option to transfer the DNS server information from your ISP to your computers. If enabled, your computers will use the router's settings for DNS service.

The screenshot displays the 'Network' configuration page. At the top, there is a computer icon and the title 'Network'. Below the title is a brief instruction: 'Use this section to configure the network settings for your device. You can enter a name for your device in the management link field, and use the link to access web UI in a web browser. We recommend you change the management link if there are more than one D-Link devices within the network.' The page includes a 'Settings>>Network' breadcrumb, a 'Save' button, and a 'Network Settings' section. The settings are as follows: LAN IP Address is 192.168.0.1; Subnet Mask is 255.255.255.0; Management Link is http://G416-BD3A.local/; Local Domain Name is empty; and Enable DNS Relay is checked (Enabled). An 'Advanced Settings' link is located at the bottom right.

DHCP Server

- Status** Enable or disable the DHCP server.
- DHCP IP Address Range** Enter the start and end IP addresses for the DHCP server's IP assignment. **Note:** *If you statically assign IP addresses to your computers or devices, make sure the IP addresses are outside of this range or you may have an IP conflict.*
- DHCP Lease Time** Enter the length of time for the IP address lease in minutes. The default is 10080 minutes.
- Always Broadcast** Enable this feature to broadcast your network's DHCP server to LAN/WLAN clients.

Advanced Settings...

- WAN Port Speed** You may set the link speed of the Internet port to **10 Mbps**, **100 Mbps**, **1000 Mbps**, or **Auto** (recommended).
- UPnP** Enable or disable Universal Plug and Play (UPnP). UPnP provides compatibility with networking equipment, software, and peripherals. This is enabled by default.
- IPv4 Multicast Streams** Allow or disallow IPv4 multicast traffic to pass through the router from the Internet. This is enabled by default.
- IPv6 Multicast Streams** Allow or disallow IPv6 multicast traffic to pass through the router from the Internet. This is enabled by default.

Advanced Settings...

DHCP Server

Status: Enabled

DHCP IP Address Range: 192.168.0.100 to 192.168.0.199

DHCP Lease Time: 10080 minutes

Always Broadcast: Disabled
(compatibility for some DHCP Clients)

Advanced Settings

WAN Port Speed:


UPnP: Enabled

IPv4 Multicast Streams: Enabled

IPv6 Multicast Streams: Enabled

D-Link Cloud

Go to **Settings > D-Link Cloud** to see your D-Link Cloud Service details. This page lists whether you are registered with D-Link Cloud Service and email address associated with the account. It enables you to manage your device anytime, anywhere and check the status of your router. Use the EAGLE PRO AI to find out more about D-Link Cloud's features.

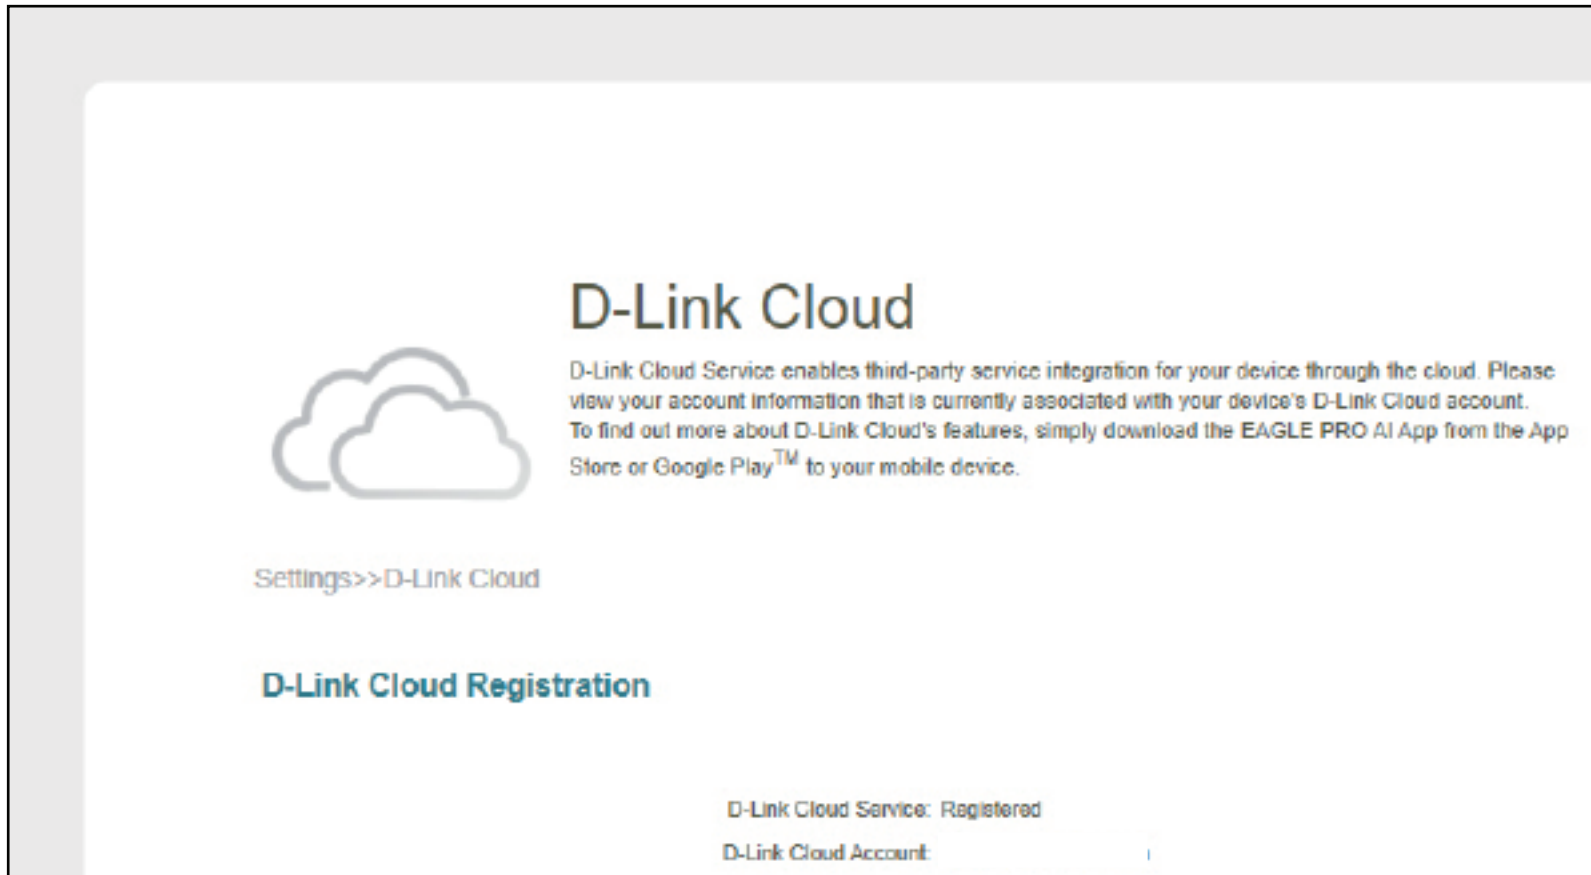

Operation Mode

Go to **Settings > Operation Mode** to select your operation mode. Depending on your network architecture, you can configure the router to function as one of the following types of network device: Router or Mobile Router.

Router Mode: In this mode, G416 directly connects to the Internet provided by your ISP (Internet Service Provider). All client devices from a network group are connected and managed under this router. This is the default mode.

Mobile Router: In this mode, G416 connects to the Internet via 4G/LTE network provided by your Cellular Internet Service Provider. All client devices from the network group are connected and managed under this mobile router.

The screenshot shows the 'Operation Mode' configuration page. At the top left is a circular icon with two arrows pointing in opposite directions. The title 'Operation Mode' is centered at the top, with a subtitle below it: 'This device has multiple operating modes. Please choose the one that best suits your needs.' Below the title is a breadcrumb trail 'Settings >> Operation Mode' and a blue 'Save' button on the right. The main section is titled 'Operation Mode Settings'. It features a dropdown menu labeled 'Your device operation mode is:' with 'Router Mode' selected. Below the dropdown, there is explanatory text for Router mode: 'In Router mode, the device directly connects to the Internet provided by your Internet Service Provider. All client devices from a network group are managed under this router.' A note states 'The device operates under Router mode by default.' At the bottom, a network diagram shows 'Internet' (globe icon) connected to 'Your Device' (router icon), which is then connected to 'Wi-Fi Client' (smartphone icon).

Features

Parental Control

Go to **Features > Parental Control** to configure parental control policies. You can configure schedules that restrict online hours and prevent access to certain websites.

Click **Save** at any time to save the changes you have made on this page.

This page displays a list of profiles with the following information:


- Profile Name** The name describes this profile.
- Device Count** The number of devices that this policy will be applied to.
- State** Displays the current status of Internet accessibility, i.e. Normal, Schedule Paused, or Paused on Demand.
- Edit** Edit this access profile.
- Delete** Remove this access profile.

A maximum of 12 profiles can be defined. Once a profile has been set, you will start receiving weekly reports on Internet access activity of the clients through AI Assistant.

To add a profile, configure the following:

Schedule

- Profile Name** Enter a name for this profile.
- Allow Internet Access Time** Click **Enabled** and define the schedule to allow Internet access. Select the time during which the Internet will be available.
 To add a schedule:
 Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule. If no time periods are selected, all devices in this profile will be denied Internet access.

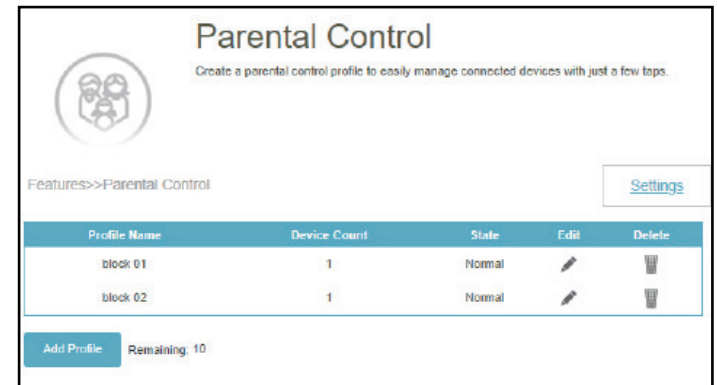

Block Internet Access During Bedtime

Click **Enabled** and define the schedule to block Internet access during bedtime.

To add a bedtime schedule:

Select the time during which bedtime schedule will be active. Select the days of the week, then select the pause time and the resume time for the period during which Internet access will be blocked. To specify different time periods for days of the week, click **Add another Bedtime schedule...** A maximum of 2 schedules can be defined.

Allow Slow Internet Access

Enable this option to allow slow Internet access with reduced speed during restricted hours set above.

You can also modify an existing schedule by clicking **Edit**.

Website Filter

Click **Add Rule** to add a new website to be blocked:

Website Name

Enter the name for the website. This blocks access to websites based on a website's address. For example, enter "ABC.com" or "www.ABC.com."




URL Keyword

This blocks access to websites based on the keywords with matching URLs. For example, use "ABC" to block "www.ABC.com" and "xxx.ABC.com" and other URLs containing ABC. Enter the same website name as the above in this field to block only the specific URL.

You can also modify or delete an existing rule by clicking **Edit** or **Delete** respectively.

Device

Click **Add Device** to add devices to be in the defined profile. Select the devices from the list of connected devices to which the access policy should be applied, then click **Apply** to close the screen. Click **Save** to save your profile settings and the new profile will be added to the profile list. You can also modify or delete an existing profile by clicking **Edit** or **Delete** respectively. On the Edit page for a selected profile, you can **Pause for Internet Access** of specified devices of the profile immediately.

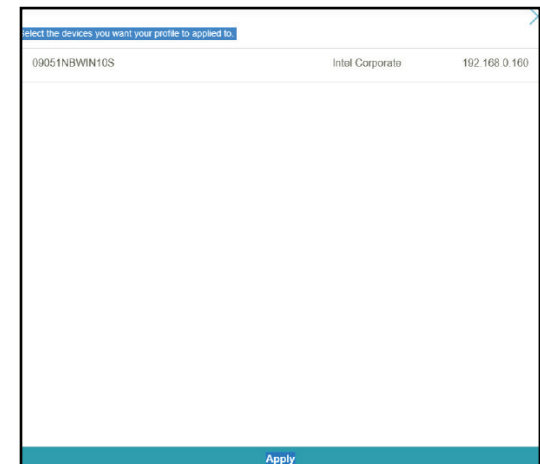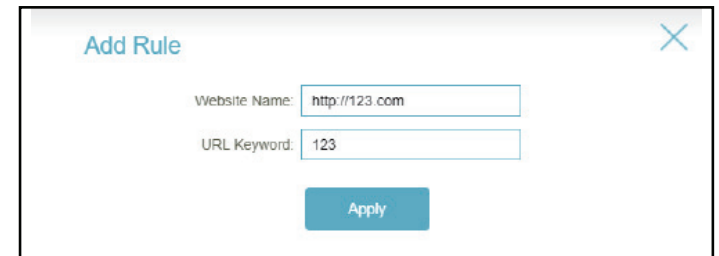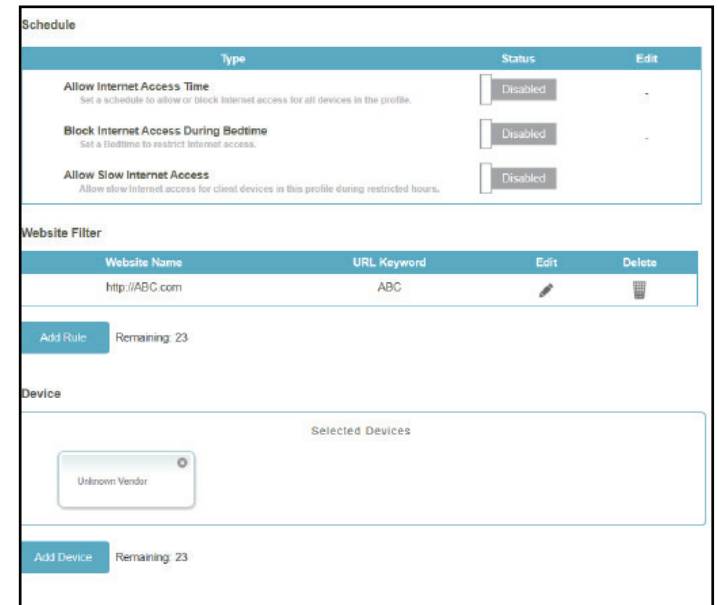

Click **Settings** to view the messages displayed to the device users whose Internet access has been restricted.

Blocked Webpage Message


For these access controls: **Manual Pause Control**, **Website Filter**, **Custom Schedule**, and **Bedtime Schedule**, you can view and customize the messages as well as the titles:

Title Enter the title of the message in the text box.

Description State the message to inform the user about the restricted access.

Reset this message Click this button to reset the modified message to its factory default.

Preview this message Display the presentation of the message on a new webpage.

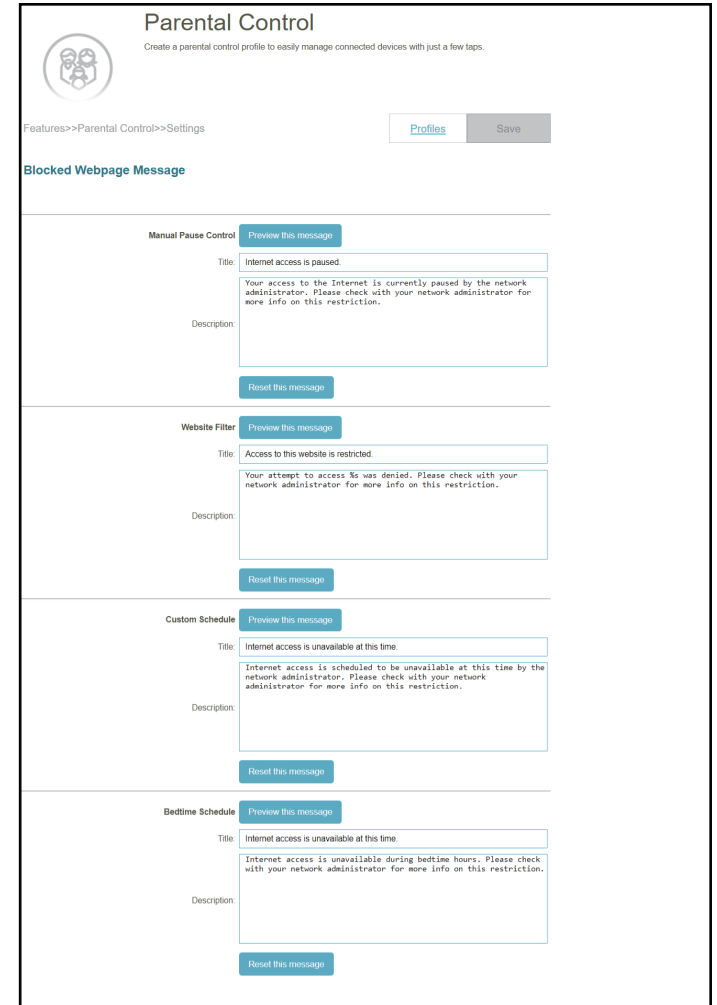

Data Cap

Go to **Features** -> **Data** to configure the Data Cap settings for your device. You can monitor the data usage in real-time and receive alert message when data usage allowance reached.

Click **Save** at any time to save the changes you have made on this page.

Blocked Webpage Message

Data Cap Enable or disable data cap.

Amount Set the maximum data usage allowance in GB.

Warning Ratio (%) Set the Warning Ratio to which the alert message will be triggered.

Reset Date Monthly Enter a day of the month in which the data cap will be reset.

Send SMS Enable or disable **Send SMS** when the data cap is reached

Phone Number When **Send SMS** is enabled, enter the phone number in which the alert message will be received.

Note: Sending SMS messages may incur additional fees. Please contact your ISP for more information.

Cellular Data Cap
Use this section to configure the Data Cap setting for your device. You can monitor the data usage in real-time and receive alert message when data usage allowance reached.

Advanced >> Cellular Data Cap Save

Cellular Data Cap Settings

Data Cap: Enabled

Amount: GB

Warning Ratio (%):

Reset Date monthly:

Send SMS: Enabled

Phone Number:

SMS

Go to **Features** -> **SMS** to send or receive SMS messages. This page shows all messages that are stored on the SIM card. Click **Save** at any time to save the changes you have made on this page.

Cellular SMS Settings

SMS: Enable or disable the SMS receiving function.

Storage: Select **SIM Card** or **Modem** to store the SMS messages.

Keep Message: Enable or disable Keep Message.

Keep Number: Set the amount of SMS messages to save. Up to 20 messages can be saved.

Click **New SMS** to create new SMS messages.

Cellular SMS Settings

Phone Number: Enter the phone number of the recipient.

Message: Enter your message here.

In the SMS page, click **Inbox** to manage the SMS message you have received. Select a message to display its contents in the SMS window. After you read it, you can delete it, or reply to the sender.

Inbox

Status Displays the status of the message.

ID Displays the sender's ID.


Read Displays whether the message has been read.

Date Time Displays the time and date in which the message is received.

From Phone Number Displays the phone number of the sender..

Message Preview: Displays a preview of the message selected.

Delete: Delete the selected SMS message.

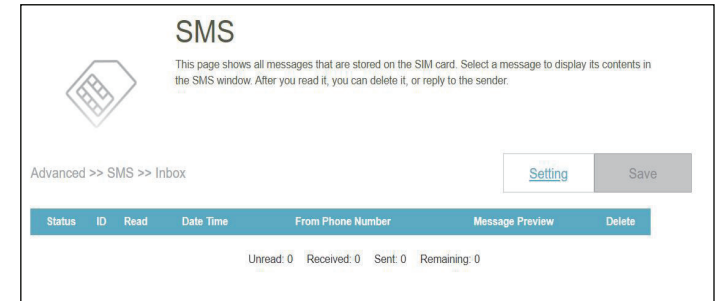

PIN

Go to **Features** -> **Pin** to configure your SIM card's PIN. Click **Save** at any time to save the changes you have made on this page.


Inbox

SIM PIN Lock Settings Enable or disable SIM PIN Lock

SIM card status Displays the status of your SIM card.

To change your SIM's PIN, enter the new PIN in the PIN text field. When PIN protection is enabled, you'll have to input your PIN whenever your SIM card is switched.

Click **Apply** when you are done.

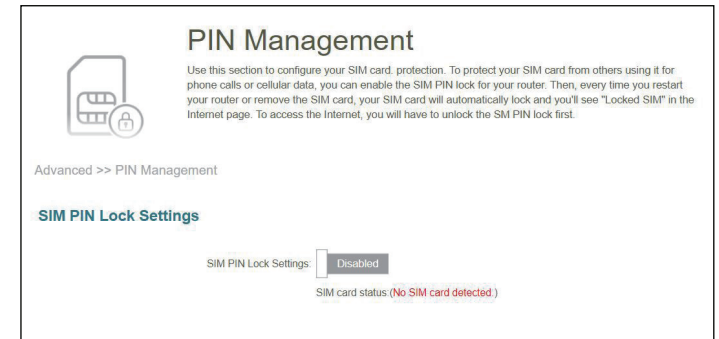

USSD

Go to **Features** -> **USSD** to interact with your ISP with USSD . Unstructured Supplementary Service Data (USSD) allows ISP-specific applications to be activated with an SMS message.

Cellular USSD

Command: Enter an application activation code and click **Send**. This will allow you to activate applications by sending an SMS message to your ISP.

Response: Displays an acknowledgement of receipt from your internet service provider.

USSD
Unstructured Supplementary Service Data (USSD) allows ISP-specific applications to be activated with an SMS message.

Advanced >> USSD >> Setting

Cellular USSD

Command:

Response:

QoS Engine

Go to **Features > QoS Engine** to configure clients' Internet access priorities. It aims to optimize Internet traffic to enhance the overall user experience.

Click **Save** at any time to save the changes you have made on this page.

AI Traffic Optimizer

The intelligent QoS Engine lists devices consuming comparatively large resources and will intelligently adjust bandwidth to these devices by assigning a low priority. It will also allocate appropriate bandwidth to connected devices based on their priorities to maintain quality online experience.

Once this is turned on, you will start receiving weekly reports on bandwidth usage through AI Assistant.


Upload Speed

The rate at which the content is being transferred to the Internet.

Download Speed


The rate at which the content is being transferred to the router. Upload/download speeds can be obtained from your Internet Service Provider.

Click **Save** after filling in the above information.

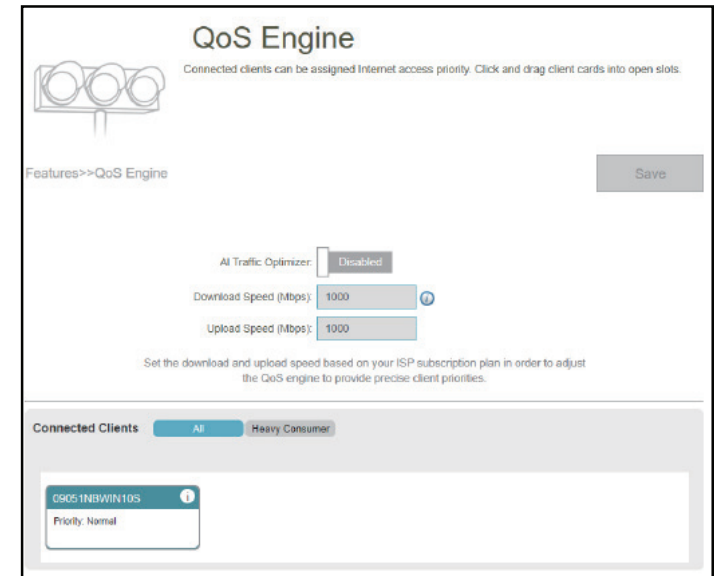

Under **Connected Clients**, you will see device cards representing each connected client. Click **All** to see all connected devices and **Heavy Consumer** to see clients that are particularly active on the Internet.

To assign a priority level to a device, enable the **AI Traffic Optimizer** first. Then click the client to open its information page. The following information will be shown:

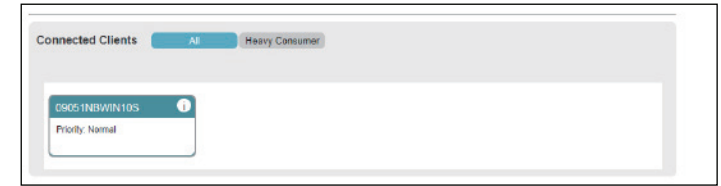

Device Name: The name that describes the client device.


MAC Address: The MAC address of the client device.

IPv4/IPv6 Address: The IP address in IPv4 and IPv6 addressing mechanism of the client device.

Priority: Select the priority and duration for the client device in the following categories:

Normal/High: Always Enable, 1 Day, 4 Hours, 2 Hours, or 1 Hour.

Low: Always Enable, 1 Day, 4 Hours, 2 Hours, or 1 Hour.

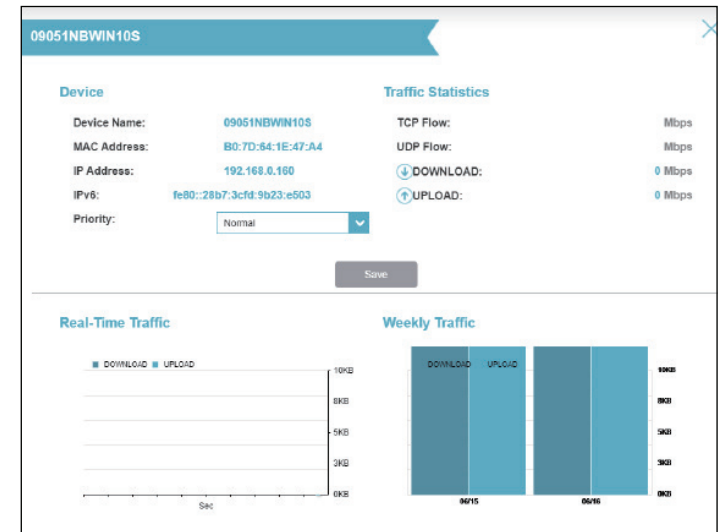

Traffic Statistics

The following traffic statistics is displayed: TCP flow, UDP flow, Download and Upload speeds (In Mbps).

Real-Time & Weekly Traffic

The Real-time Traffic and Weekly Traffic present real-time speed measurements in MB/s or KB/s. If no devices are explicitly assigned as priority, they will all be treated with equal priority.

Firewall

Go to **Features > Firewall** to configure the router's firewall settings. The firewall feature protects your network from malicious attacks over the Internet.

To configure the IPv4 firewall rules, click the **IPv4 Rules** tab. Refer to **Firewall Settings - IPv4/IPv6 Rules** on page 74
 To configure the IPv6 firewall rules, click the **IPv6 Rules** tab. Refer to **Firewall Settings - IPv4/IPv6 Rules** on page 74

Click **Save** at any time to save the changes you have made on this page.

Enable DMZ Enable or disable Demilitarized Zone (DMZ). Devices in this zone are completely exposed to threats over the Internet. This is not recommended unless they are servers that must be exposed to the WAN.


DMZ IP Address If you enable DMZ, enter the IP address of the client to be placed in this zone, or use the drop-down menu to quickly select one of the clients.

Enable SPI IPv4 Enabling Stateful Packet Inspection (SPI) or dynamic packet filtering helps prevent cyber attacks by tracking more states per session to validate that the traffic passing through the session conforms to the protocol.

Enable Anti-spoof Checking Enable this feature to help protect your network from certain kinds of "spoofing" attacks.

IPv6 Simple Security Enable or disable IPv6 simple security. A simple firewall configuration that denies access directly to computers behind the router.

IPv6 Ingress Filtering Enable or disable IPv6 ingress filtering for incoming packets to prevent suspicious senders.

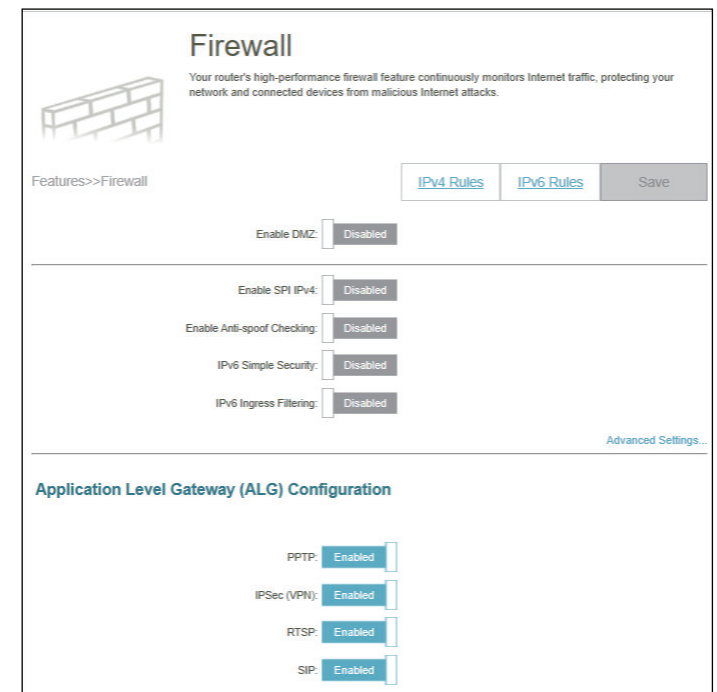

Advanced Settings... - Application Level Gateway (ALG) Configuration


Different ALGs provide special handling for specific protocols or applications. A number of ALGs for common applications are enabled by default as stated below.

PPTP Allows multiple machines on the LAN to connect to their corporate network using the PPTP protocol.

IPSec (VPN) Allows multiple VPN clients to connect to their corporate network using IPSec. Some VPN clients support traversal of IPSec through NAT. This Application Level Gateway (ALG) may interfere with the operation of such VPN clients. If you are having trouble connecting with your corporate network, try turning this ALG off. Please check with the system administrator of your corporate network whether your VPN client supports NAT traversal.

RTSP Allows applications that uses Real Time Streaming Protocol (RTSP) to receive streaming media from the Internet.

SIP Allows devices and applications using VoIP (Voice over IP) to communicate across NAT. Some VoIP applications and devices have the ability to discover NAT devices and work around them. This ALG may interfere with the operation of such devices. If you are having trouble making VoIP calls, try turning this ALG off.

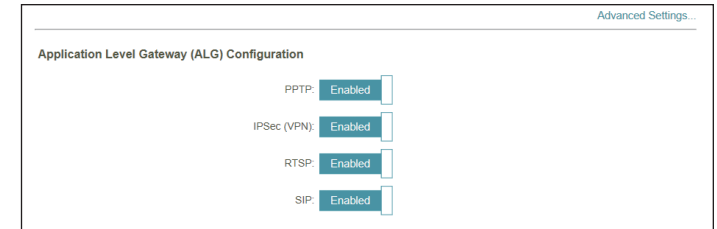



Firewall Settings - IPv4/IPv6 Rules


Go to **Features > Firewall**, then click the **IPv4 Rules** tab or the **IPv6 Rules** tab to configure rules for filtering the inbound/outbound traffic based on parameters like IP address with ports.

To configure the Firewall Advanced settings, click the **Advanced** link. Refer to **Firewall** on page **72**

Click **Save** at any time to save the changes you have made on this page.

To begin, use the drop-down menu to select whether it is an **ALLOW** or **DENY** rule. You can also choose to turn filtering **OFF**.

If you want to remove a rule, click  in the Delete column. If you wish to edit a rule, click  in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

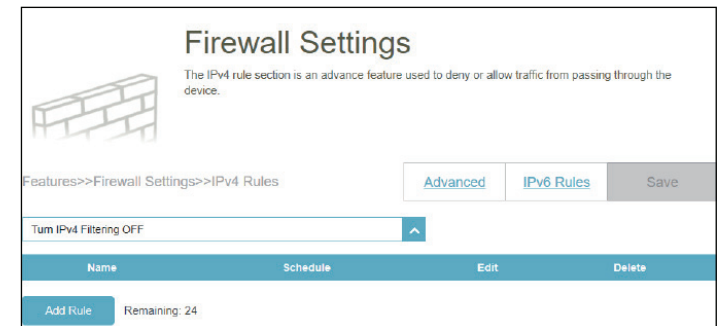

If you click **Edit** or **Add Rule**, the following options will appear:

- Name** Enter a name for the rule.
- Source IP Address Range** Enter the source IP address range (e.g. 1.1.1.1-1.1.1.2 for IPv4 or 2001::1-2001::2 for IPv6) that the rule will apply to. Using the drop-down menu, specify whether it is a **WAN** or **LAN** IP address. Both a single IP address and a range of IP addresses can be entered.
- Destination IP Address Range** Enter the destination IP address range (e.g. 1.1.1.1-1.1.1.2 for IPv4 or 2001::1-2001::2 for IPv6) that the rule will apply to. Using the drop-down menu, specify whether it is a **WAN** or **LAN** IP address. Both a single IP address and a range of IP addresses can be entered.
- Protocol & Port Range** Select the protocol of the traffic to allow or deny (**Any, TCP, or UDP**) and then enter the range of ports (e.g. 21-23) that the rule will apply to. Select **Any** to allow/deny all types of traffic regardless of the port number.
- Schedule** Use the drop-down menu to select the time schedule during which the rule will be active. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section. Refer to **Management > Time & Schedule - Schedule** on page **86** for more information.



A maximum of 24 rules can be defined.


Port Forwarding

Go to **Features > Port Forwarding** to specify a port or range of ports to open for specific devices on the network. This might be necessary for certain applications to connect through the router. For example, access from the Internet can be redirected to a DMZ host using Port Forwarding.

To configure the Virtual Server settings, click the **Virtual Server** link. Refer to **Port Forwarding - Virtual Server** on page **78**.

Click **Save** at any time to save the changes you have made on this page.

If you want to remove a rule, click  in the Delete column. If you want to edit a rule, click  in the Edit column. If you want to create a new rule, click the **Add Rule** button.

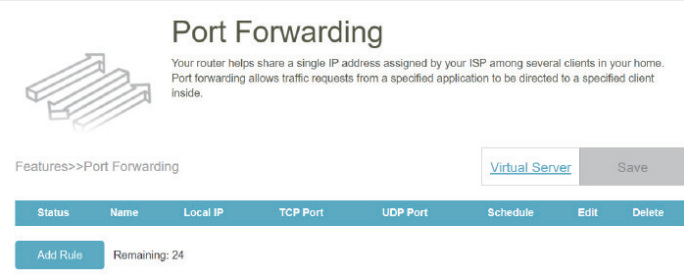

Port Forwarding


Your router helps share a single IP address assigned by your ISP among several clients in your home. Port forwarding allows traffic requests from a specified application to be directed to a specified client inside.

Features>>Port Forwarding [Virtual Server](#) [Save](#)

Status	Name	Local IP	TCP Port	UDP Port	Schedule	Edit	Delete
Add Rule		Remaining: 24					

If you click **Edit** or **Add Rule**, the following options will appear:

- Name** Enter a name for the rule.
- Local IP** Enter the IP address of the computer on your local network to which you want to direct the incoming service. Alternatively, select the device from the drop-down menu.
- TCP Port** Enter the TCP ports that you want to open. You can enter a single port or a range of ports. Separate ports with a comma (for example: 24,1009,3000-4000).
- UDP Port** Enter the UDP ports that you want to open. You can enter a single port or a range of ports. Separate ports with a comma (for example: 24,1009,3000-4000).
- Schedule** Use the drop-down menu to select the time schedule during which the rule will be active. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section. Refer to **Management > Time & Schedule - Schedule** on page **86** for more information.

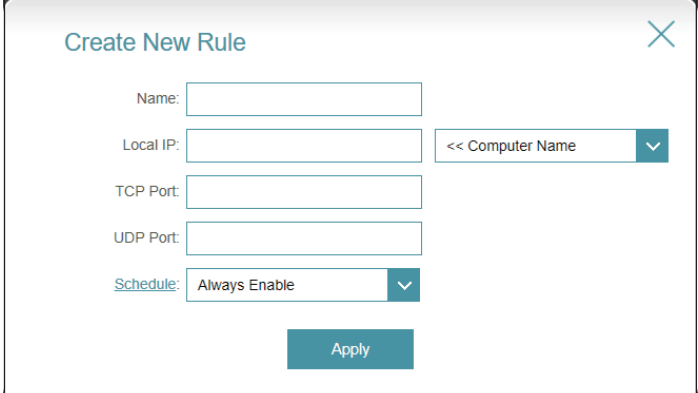

Create New Rule ✕

Name:

Local IP: << Computer Name ▼

TCP Port:

UDP Port:

Schedule: Always Enable ▼



Apply


Port Forwarding - Virtual Server

Go to **Features > Port Forwarding** then click the **Virtual Server** tab to configure its settings and specify a single public port on your router for redirection to an internal LAN IP with the mapped port. This might be necessary if you are hosting services behind the router.

To configure the Port Forwarding settings, click the **Port Forwarding** link. Refer to **Port Forwarding** on page 76

Click **Save** at any time to save the changes you have made on this page.

If you wish to remove a rule, click  in the Delete column. If you wish to edit a rule, click  in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

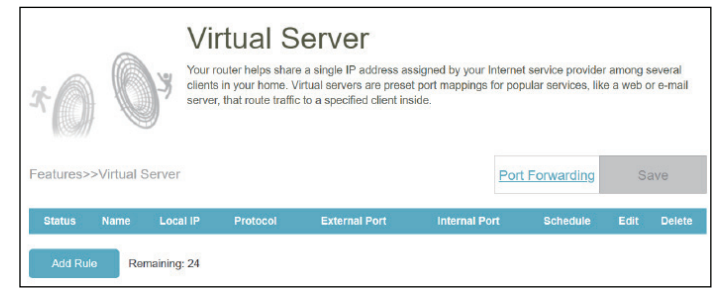

If you click on **Edit** or **Add Rule**, the following options will appear:

Name Enter a name for the rule. Alternatively, select the protocol/Application Name from the drop-down menu. Depending on the requested service, the router redirects the external service request to the appropriate internal host.

Local IP Enter the IP address of the computer on your local network that you want to direct the incoming service to. Alternatively, select the device from the drop-down menu.

Protocol Select the protocol of the traffic to allow or deny (**TCP**, **UDP**, **Both**, or **Other**).

Protocol Number If you entered **Other** above, enter the protocol number. Refer to <https://www.iana.org/assignments/protocol-numbers/protocol-numbers.xhtml> for Assigned Internet Protocol Numbers.

External Port Enter the public port you want to open.

Internal Port Enter the private port you want to open.

Schedule Use the drop-down menu to select the time schedule during which the rule will be active. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section. Refer to **Time & Schedule - Schedule** on page **86** for more information.

The screenshot shows a 'Create New Rule' dialog box with the following fields and options:



- Name:** A text input field followed by a drop-down menu showing '<< Application Name'.
- Local IP:** A text input field followed by a drop-down menu showing '<< Computer Name'.
- Protocol:** A drop-down menu currently set to 'TCP'.
- External Port:** A text input field.
- Internal Port:** A text input field.
- Schedule:** A drop-down menu currently set to 'Always Enable'.
- Apply:** A teal button at the bottom right.


Static Routes - IPv4

Go to **Features > Static Routes** to define custom routes, controlling that external data traffic from a specified IP address should be forwarded to a specified client in the LAN behind the router.

To configure the Static Route IPv6 settings, click the **IPv6** tab. Refer to **Static Routes - IPv6** on page **81**

Click **Save** at any time to save the changes you have made on this page.

If you wish to remove a rule, click  in the Delete column. If you wish to edit a rule, click  in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

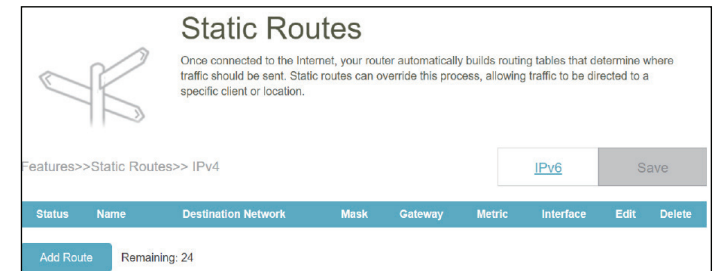

If you click on **Edit** or **Add Route**, the following options will appear:

Name Enter a name for the route.

Destination Network Enter the destination network IP address to be assigned with a static route.

Mask Enter the subnet mask of the destination address.

Gateway Enter the IP address of the next hop, which is the gateway to the remote network.

Metric Enter a route metric value between 1 and 16. This value indicates the cost of using this route.



Interface Select the interface that the IP packet will use to transit out of the router when this route is used.


Static Routes - IPv6

Go to **Features > Static Routes**, then click **IPv6** to configure the IPv6 Static Routes.

To configure the Static Route IPv4 settings, click the **IPv4** tab. Refer to **Static Routes - IPv4** on page **80**.

Click **Save** at any time to save the changes you have made on this page.

If you wish to remove a rule, click  in the Delete column. If you wish to edit a rule, click  in the Edit column. If you wish to create a new rule, click the **Add Rule** button.

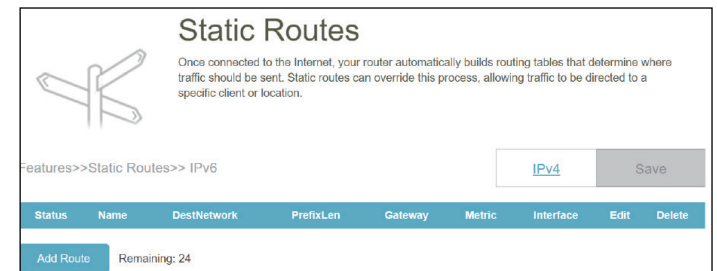

If you click on **Edit** or **Add Route**, the following options will appear:

- Name** Enter a name for the route.
- DestNetwork** Enter the destination network address of the route.
- PrefixLen** Enter the number of prefix bits of the IP address that will take this route. Enter a value between 64 and 128.
- Gateway** Enter the IP address of the next hop, which is the gateway to the remote network.
- Metric** Enter a route metric value between 1 between 128. This value indicates the cost of using this route.
- Interface** Select the interface that the IP packet will use to transit out of the router when this route is used.

Dynamic DNS



Go to **Features > Dynamic DNS**. This page allows your router to associate an easy-to-remember domain name such as [YourDomainName].com with a regularly changing IP address assigned by your Internet Service provider. This feature is helpful when running a virtual server.

Click **Save** at any time to save the changes you have made on this page.

- Enable Dynamic DNS** Enable or disable dynamic DNS. Enable this feature to display more configuration options.
- Status** Displays the current dynamic DNS connection status.
- Server Address** Select the DDNS service provider from the drop-down menu.
- Host Name** Enter the host name that you registered with your dynamic DNS service provider.
- User Name** Enter your dynamic DNS account name.
- Password** Enter your dynamic DNS account password.
- Time Out** Enter a time-out value (in hours) to indicate how often the router should update its Dynamic DNS settings.

A maximum of 10 rules can be defined.

At the bottom of the page are the IPv6 host settings.

If you wish to remove a record, click  in the Delete column. If you wish to edit a record, click  in the Edit column. If you wish to create a new record, click the **Add Record** button.

Host Name Enter the host name that you registered with your dynamic DNS service provider.

IPv6 Address Enter the IPv6 address for DDNS configuration. Alternatively, select the network interface for DDNS configuration.

A maximum of 10 records can be defined.

Status	Host Name	IPv6 Address	Edit	Delete
Add Record	Remaining: 10			

Create New Record ✕

Host Name:

IPv6 Address: << Computer Name

Quick VPN

Go to **Features > Quick VPN**. This page will help you configure the Quick VPN feature of your router. For more information, refer to **Quick VPN** on page 111. Before proceeding, ensure that your Internet connection is working properly. We recommend configuring Dynamic DNS before proceeding with Quick VPN setup. If your router is assigned an IP address from your ISP using DHCP, it may frequently change, requiring connection parameters to be set accordingly and a DDNS address can avoid this hassle.

To configure the User settings and grant users with VPN permission, go to **Management > User**. Refer to **User** on page 91.

Click **Save** at any time to save the changes you have made on this page.

L2TP over IPsec Enable or disable the Quick VPN server. Quick VPN uses L2TP protocol.

Username Enter a username.

Password Enter a password containing both numbers and letters with 8 to 64 characters in length.

PSK Enter a Pre-shared Key between 6 and 64 characters.

VPN Profile for iOS Device and MAC OS X Click **Export** to save the VPN profile settings file for iOS devices and Mac OS X.

Advanced Settings...

Authentication Protocol Choose the authentication protocol type: **MSCHAPv2**, **PAP**, or **CHAP**. **MSCHAPv2** is set as default.

MPPE Select the encryption cipher strength for Microsoft Point-to-Point (MPPE) Encryption: **None**, **RC4-40**, or **RC4-128**. **None** is set as default.

Management

Time & Schedule - Time

Go to **Management > Time & Schedule**. The **Time** page allows you to configure, update, and maintain the correct time on the internal system clock. From here you can set the time zone and the Network Time Protocol (NTP) server.

To configure the Schedule settings, click the **Schedule** tab. Refer to **Time & Schedule - Schedule** on page **86**

Click **Save** at any time to save the changes you have made on this page.

Time Configuration

Time Zone Select your time zone from the drop-down menu.

Time Displays the current date and time of the router.

The screenshot shows the 'Time' configuration page. At the top, there's a clock icon and the title 'Time'. Below it, a note states: 'Your device's Internal clock is used for time sensitive applications, such as firmware online checking, data logging and schedules for features. The date and time can be synchronized with a public time server through the Internet.' A breadcrumb trail reads 'Management >> Time'. There are two buttons: 'Schedule' (highlighted in blue) and 'Save' (grey). The 'Time Configuration' section has a 'Time Zone' dropdown menu set to 'Asia/Taipei' and a 'Time' display showing '2021/07/25 12:02:53 AM'. The 'Automatic Time Configuration' section has an 'NTP Server' dropdown menu set to 'D-Link NTP Server'.

Automatic Time Configuration

NTP Server Select from the drop-down menu to use one of the following servers to synchronize the time and date for your router:
D-Link NTP Server or Google NTP Server.
Choose Manual to set the NTP server's IP address or server name.



The screenshot shows the 'Automatic Time Configuration' section. It has a label 'Automatic Time Configuration' and an 'NTP Server' input field. To the right of the input field is a dropdown menu currently set to 'Manual'.


Time & Schedule - Schedule

Go to **Management > Time & Schedule**, then click the **Schedule** tab. The **Schedule** page allows you to control some of the functions based on a pre-configured schedule, for example, Port Forwarding in **Features > Port Forwarding** and Firewall Settings in **Features > Firewall** as well as sending Syslog via email in **Management > System Log**.

To configure the Time settings, click the **Time** tab. Refer to **Time & Schedule - Time** on page 85

Click **Save** at any time to save the changes you have made on this page.

If you wish to remove a schedule, click  in the Delete column. If you wish to edit a schedule, click  in the Edit column. If you wish to create a new schedule, click the **Add a Schedule** button.

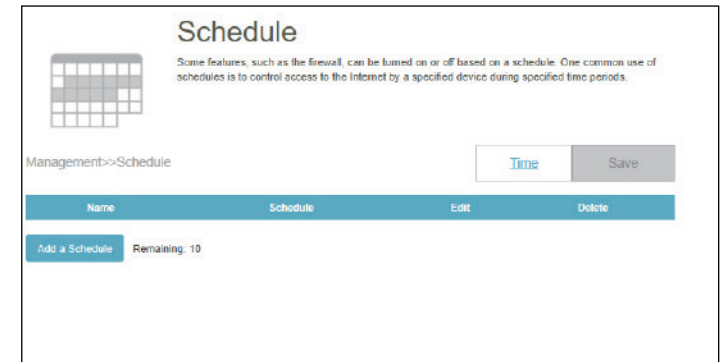


On the Schedule creation page, enter the name of your schedule in the **Name** field.

Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.

To remove a time period from the schedule, click on the cross icon.

Click **Apply** to save and close the page. Then click **Save** when you are done creating schedules.

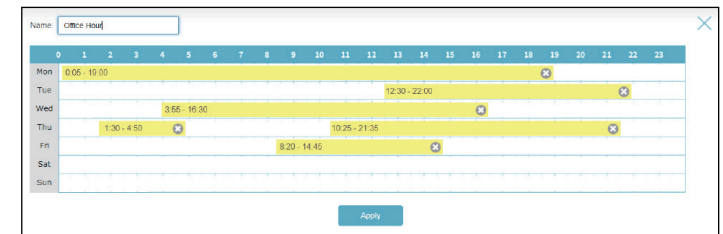

System Log

Go to **Management > System Log**. The router keeps a running log of events. This log can be sent to a Syslog server or to your email address.

Click **Save** at any time to save the changes you have made on this page.

Log Settings

System Log

Click the **Check System Log** button to download a text file containing the system log. You can view the log entries by opening with any text editing applications such as WordPad on Windows.

SysLog Settings

Enable Logging to Syslog Server

Check this box to send the router logs to a SysLog Server.

SysLog Server IP Address

Configurable if **Enable Logging to Syslog Server** is enabled. Enter the IP address of the Syslog server. If the Syslog server is connected to the router, select it from the drop-down menu to automatically populate the field.

The screenshot shows the 'System Log' configuration page. At the top, there is a title 'System Log' and a brief description: 'On-board diagnostics run continuously in the background to monitor the health of your router. The results are recorded in the system log if it is enabled. This info can be used to diagnose common problems or help Customer Support resolve issues more quickly.' Below this, there is a breadcrumb trail 'Management >> System Log' and a 'Save' button. The page is divided into three sections: 'Log Settings' with a 'Check System Log' button; 'SysLog Settings' with an 'Enable Logging to Syslog Server' checkbox set to 'Disabled'; and 'E-mail Settings' with an 'Enable E-mail Notification' checkbox set to 'Disabled'.

Email Settings

Enable E-mail Notification Enable this option if you want the logs to be automatically sent to an email address.

If you enable **Enable E-mail Notification**, configure the following:

From E-mail Address Enter the sender's email address of the SysLog messages.

To E-mail Address Enter the recipient's email address.

SMTP Server Address Enter the SMTP server address.

SMTP Server Port Enter the SMTP server port. The default is 25.

Enable Authentication Enable this if your SMTP server requires authentication.

Account Name Enter your SMTP account name.

Password Enter your SMTP account's password.

E-mail Log When Full or On Schedule

Send When Log Full If enabled, this option will set the router to send the log when the log buffer is full. The email account for sending logs is configured in the above section.

Send on Schedule If enabled, this option will set the router to send the log according to a set schedule periodically, so the administrator is always up to date on the operation of the router. The email account for sending logs is configured in the above section.

Schedule If you enable Send On Schedule, use the drop-down menu to select a schedule to apply. The schedule may be set to Always Enable, or you can create your own schedules in the Schedules section. Refer to **Time & Schedule - Schedule** on page 86 for more information.

System Admin - Admin

Go to **Management > System Admin**. The Admin page will allow you to change the administrator (Admin) password.

To configure the System settings, click the **System** tab. Refer to **System Admin - System** on page 90

Click **Save** at any time to save the changes you have made on this page.

Admin Password

Password Enter a new password for the administrator account. You will need to enter this password whenever you configure the router using a web browser or add the router to EAGLE PRO AI.

Advanced Settings... - Administration

Enable HTTPs Management Enable router management using secure HTTP connection.

Enable HTTPs Remote Management Enable remote management over the Internet using secure HTTP connection.

Remote Admin Port Specify the port number for accessing the web configuration interface. The default is 8081.

LED Control

Status LED Turn the LED status lights on or off.

Admin

The administrator can change device's settings. To keep your device secure, you should give have a strong password.

Management >> Admin System Save

Admin Password

Password:

[Advanced Settings...](#)

Administration

Enable HTTPs Management: Disabled

Enable HTTPs Remote Management: Disabled

Remote Admin Port: Use HTTPs: Disabled

LED Control

Status LED: On

System Admin - System

Go to **Management > System Admin**, then click **System**. This page allows you to save the router's current configuration, load a previously saved configuration, reset the router to its factory default settings, or reboot the router.

To configure the Admin settings, click the **Admin** tab. Refer to **System Admin - Admin** on page 89

Click **Save** at any time to save the changes you have made on this page.

System

Save Settings to Local Hard Drive

This option will save the current router configuration settings to a file (bin type) on your computer.

Load Settings from Local Hard Drive

This option will load a previously saved router configuration file. This will overwrite the router's current configuration.

Restore to Factory Default Settings

This option will restore the router back to the default configurations stored in the firmware. Any settings that have not been saved will be lost, including any rules that you have created. If you want to back up the current router configuration settings before restoring to factory defaults, use the **Save Settings to Local Hard Drive** function above.

Auto Reboot Configuration

Reboot the Device

Click this button to reboot the router immediately.

Auto Reboot

You may set the router to automatically reboot at a set time. The options are **Never**, **Daily**, or **Weekly**. You may set the day, and hour and minute of the day for automatic reboot.



The screenshot shows the 'System' configuration page. At the top, there is a gear icon and the text 'System'. Below this, a message states: 'This page lets you save your router's current settings to a file, restore your settings from a file, restore your router to factory default settings, or reboot the device. Please note that restoring the settings to the factory defaults will erase all settings, including any rules you have created.' There are two tabs: 'Admin' and 'Save'. The 'System' section contains three options: 'Save Settings To Local Hard Drive' with a 'Save' button, 'Load Settings From Local Hard Drive' with a 'Select File' button, and 'Restore To Factory Default Settings' with a 'Restore' button. Below this is the 'Auto Reboot Configuration' section, which includes a 'Reboot The Device' button and an 'Auto Reboot' dropdown menu currently set to 'Never'.


The screenshot shows the 'Auto Reboot Configuration' page. It features a 'Reboot The Device' button and an 'Auto Reboot' dropdown menu set to 'Weekly'. Below this, there are two more dropdown menus: 'Day of week' set to 'Mon' and 'Time' set to '12 AM'. To the right of the 'Time' dropdown is a text input field containing '00' and a label '(Hour/ Minute)'.

User

Go to **Management > User**. The User page is used to create, manage, and delete user accounts with VPN connection permission.

Click **Save** at any time to save the changes you have made on this page.

If you wish to remove a user, click  in the Delete column. If you wish to edit a user, click  in the Edit column. If you wish to create a new user, click the **Create User** button.



Status	Name	VPN	Export VPN Profile (iOS/Mac OS X)	Edit	Delete
	Admin	-	-	-	-
<input checked="" type="checkbox"/>	test	-	-		
<input checked="" type="checkbox"/>	test02	-	-		

Create User Remaining: 7

To create a user, click **Create User** and configure the following:


User Name Enter a username for the new user account.
Maximum length: 20 characters.

Password Enter a password for the new user account.
Maximum length: 32 characters.

VPN

Status Enable or disable Virtual Private Network (VPN) functionality for this user.

A maximum of 9 users (not including the Admin) can be created. Click **OK** to close the screen.

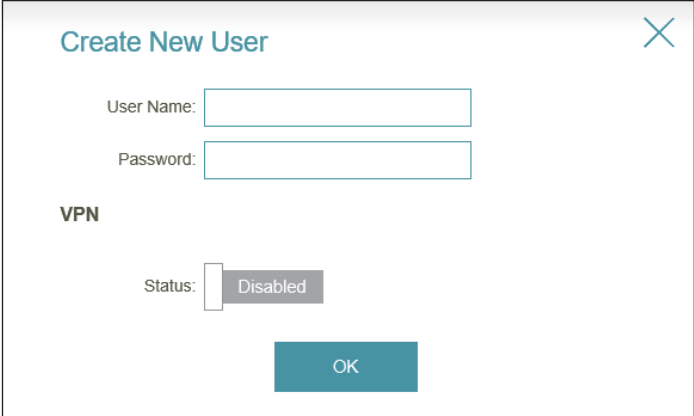

Create New User

User Name:

Password:

VPN

Status:

OK

Upgrade

Go to **Management > Upgrade**. This page allows you to upgrade the router's firmware, either automatically or manually. To manually upgrade the firmware, you must first download the firmware file from <http://support.dlink.com>.

Click **Save** at any time to save the changes you have made on this page.

Firmware Information


- Current Firmware Version** Displays the current firmware version for both the main router as well as the extenders.
- Check for New Firmware** Click this button to prompt the router to automatically check for a new firmware version. If a newer version is found, it will prompt you to install it.

Advanced Settings...Upgrade Manually

- Device Name** Select the device in the mesh network for manual update.
- Select File** If you wish to upgrade manually, first download the firmware file. Then, click the **Select File** button and locate the file to install the new firmware.

Automatic Firmware Upgrade

- Automatic Upgrade** If enabled, the router will automatically upgrade to the newest firmware. The system will automatically upgrade to the latest firmware every day at 3:30-4:00 AM.
- Choose Upgrade Time** Enable this function to set the router to automatically upgrade its firmware at a set time every day.
- Upgrade Time** Configurable if **Choose Upgrade Time** is enabled. Set the hour and minute to automatically upgrade the router.

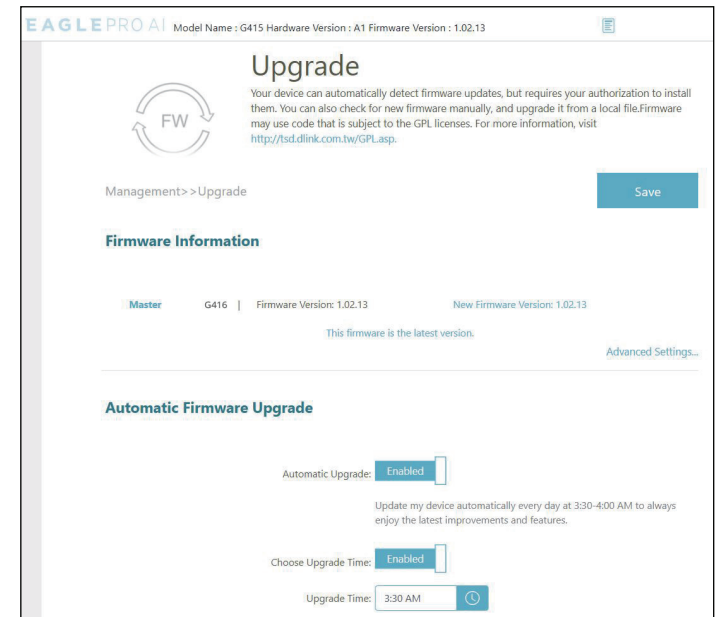

Statistics

Go to **Management > Statistics**. On the Statistics page you can view the amount of traffic that passes through the router on the Internet and LAN interfaces as well as the traffic from Wi-Fi 2.4 GHz and Wi-Fi 5GHz networks.

Router


You can view the **Internet**, **LAN**, **Wi-Fi 2.4 GHz**, or **Wi-Fi 5 GHz** by clicking the respective tab at the top. The real-time graph of network traffic in KB/s will be shown. To clear the information on the graph, click **Clear**.

The table below for each interface and radio frequency shows the total number of packets and data that are sent and received through the interface.

The traffic counter will reset if the device is rebooted.

Extender

Click the Extender tab to view the above information about the extender.

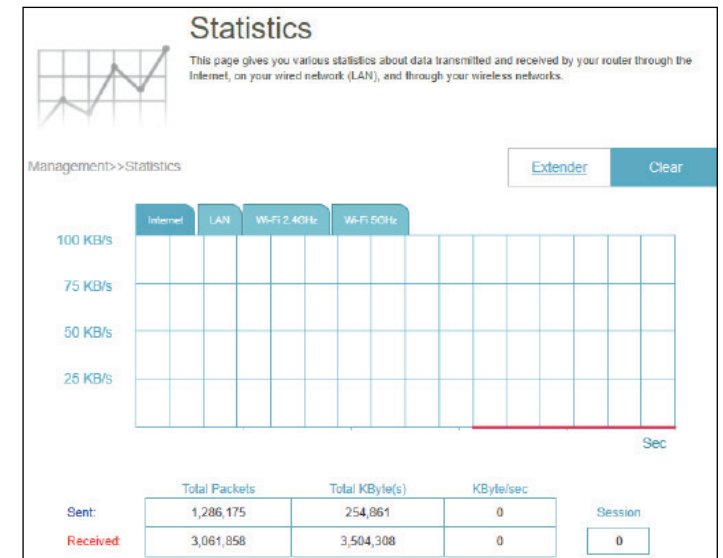

EAGLE PRO AI

With the EAGLE PRO AI on your smart devices, you can get the G416 up and running quickly. Just plug in the router, open the app and build your home network by following the easy instructions on the screen. The new EAGLE PRO AI is especially designed to ease your management work with the following features:


AI Wi-Fi Optimizer: Enable this feature to always connect to the cleanest Wi-Fi Channel using the breakthrough beamforming technology and receive information about Wi-Fi usage of individual devices and bandwidth utilization reports for continued improvement of Wi-Fi environment.


AI Traffic Optimizer: The QoS engine controls the traffic flow intelligently by automatically assigning heavy traffic with a low priority to improve the overall user experience.

AI Assistant: The message center provides feedback and suggestions when clients are transmitting a large amount of data in the weekly bandwidth report. It also enables you to prioritize connected devices to reduce traffic congestion with the client usage report. Moreover, every improvement made by the AI-assisted Wi-Fi Optimizer will also be recorded to inform administrators about conditions of the wireless environment.

AI Parental Control: The Parental Control provides the highest flexibility of Internet accessibility control and website filtering. It allows administrators to control the availability of Internet access and speed on individual devices during the designated time periods.

AI Wi-Fi Optimizer:

To enable this function, open the app. From the **Home** screen, tap **Wi-Fi** and tap . Then tap the slider for **AI Wi-Fi Optimizer**. Turn on Wi-Fi Optimizer to have your wireless connection adopting an interference-free channel automatically and receive weekly Wi-Fi environment report every Monday at 8 AM local time.


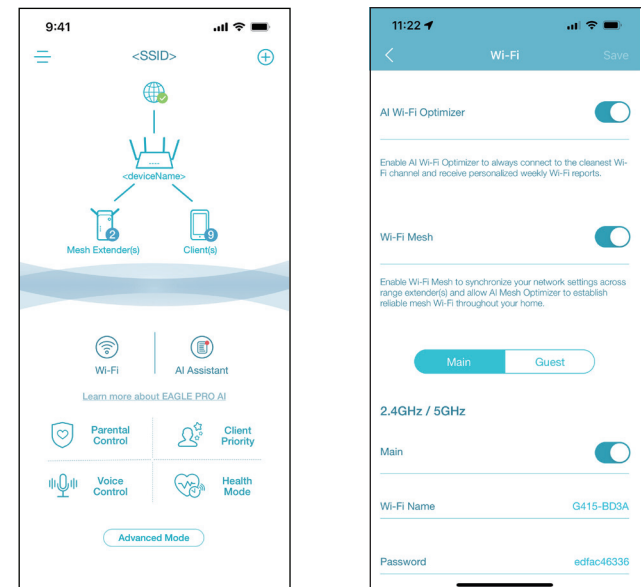


AI Traffic Optimizer:

To enable this function, navigate to the **Home** screen, tap the model icon to enter the **Device Info** page, scroll down to **Settings**, and tap **QoS**. Next, tap the **AI Traffic Optimizer** toggle to enable the function.

When enabling the AI Traffic Optimizer, you can input the download and upload speeds to assist the QoS engine in distributing the bandwidth to prioritized clients.

To prioritize clients, tap **Client Priority**. Tap a client device and tap **Priority** to assign a priority level with duration to this device. Devices set as High priority will have faster connection when running online games, video conferences, or other real-time programs. The Red bar on the left indicates heavy users.

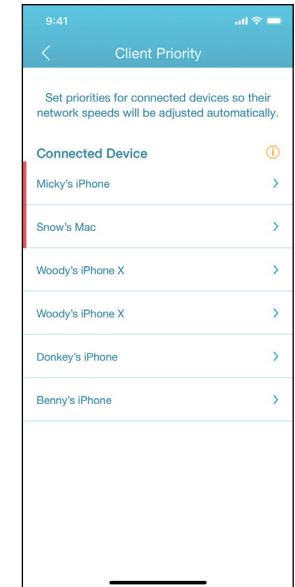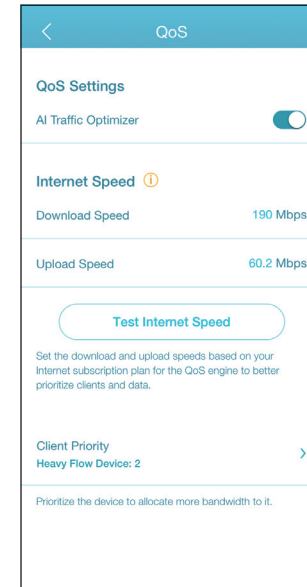

AI Parental Control:



To enable this function, navigate to the **Home** screen, tap **Parental Control**.

Then use the following procedure to add a new control profile:



1. Tap **Start**.
2. Name this profile. Then tap **Next** to continue.
3. Select client devices to which the profile will be applied.
4. Tap **Done** to proceed.
5. The profile summary will be displayed. On this page you can tap **Pause** to pause Internet immediately to the devices specified in the profile.

You can set schedules to restrict Internet access.

Use **Block Bedtime Internet Access** to block Internet access during the specified days and time periods. Use **Allow Scheduled Internet Access** to allow Internet access only during the specified days and hours. Users cannot access the Internet except during the hours that you specify. Note that bedtime restriction takes precedence over the allowed schedules here.

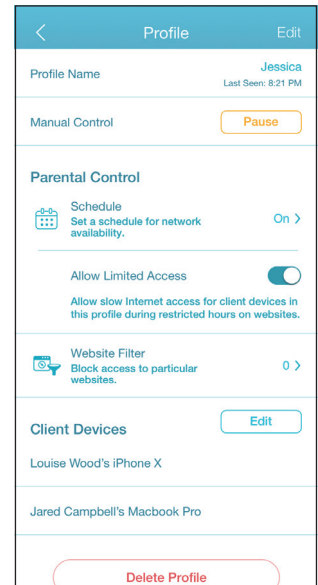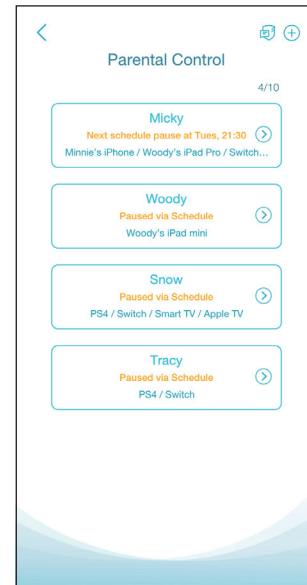



You can also block specific websites on this page to prevent the specified devices from accessing certain websites. To do this, tap **Website Filter**, tap **Add Website**, then enter the website name and the domain keyword, for example, enter *violent.com* to block all access to this site and *violent* to block domain names that contain this keyword. Then tap **Add** at the top right.

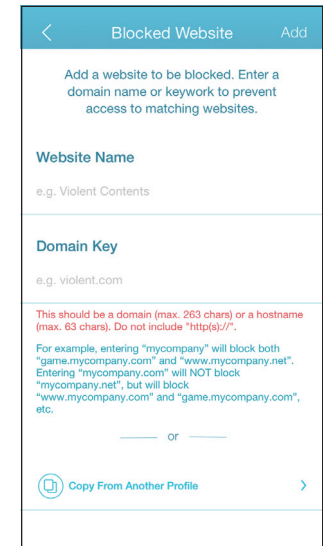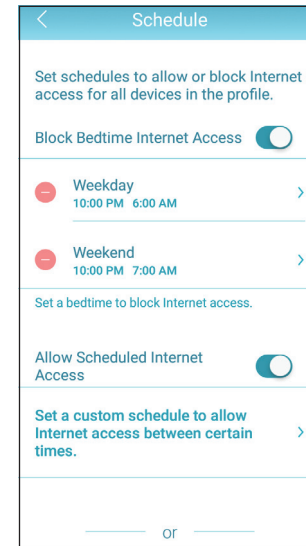

AI Assistant:

Tap **AI Assistant** to display the weekly reports on bandwidth consumption with information about heavy users. Weekly reports also give information on the number of times the system performs traffic management automatically when congestion occurs and provides qualitative rating on your Wi-Fi environment. Furthermore, the **NightTime Internet Activity** informs you about the overly active Internet access during nighttime.

This app enables you to proactively improve sleep quality by restricting Internet access during nighttime. Tap **Health Mode** to set the bedtime during which Internet access will be blocked on all devices within the network.

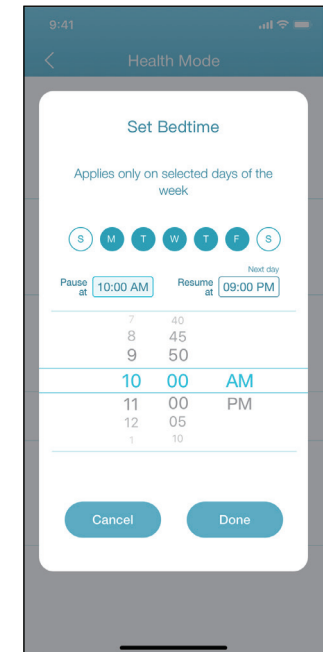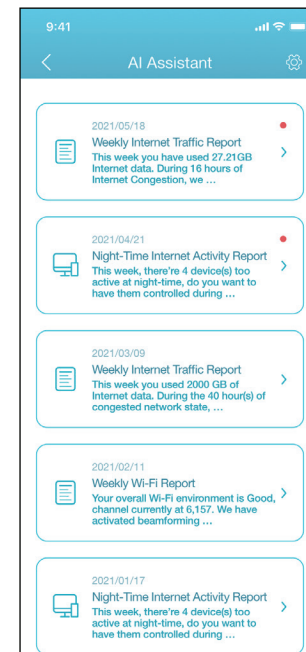

Other Features

Advanced Mode

The advanced mode provides links to the web management interfaces of the device. Note that this feature is only available with local access (i.e. connected within the same Wi-Fi network). To access, go to **Home > Advanced Mode**.

Device Information and Settings




From **Home**, tap the device (**main router**) of the mesh network topology to view its information and settings: name, IP and MAC address, hardware and firmware version, time zone, and model number. You can also configure the Internet connection method and change the device password on this page. It also provides basic device maintenance functions: reboot, LED indicator on/off, firmware update, and device identification with flashing LED.

Client Information and Statistics

From **Home**, tap the **device (Clients)** of the mesh network topology to view the clients currently online and blocked. Tap a device to obtain its information: name, IP and MAC address, and parental control profile. It also displays real-time traffic statistics in megabytes per second as well as weekly traffic in megabytes per day for both download and upload data transmissions. The Priority function allows you to assign a High/Low priority for this device with effective duration: Always, 1 Day, 4 Hours, 2 Hours, 1 Hour.


Extender Information

From **Home**, tap the **device (Extenders)** of the mesh network topology to view the extenders currently connected with the following information: name, IP and MAC address, and hardware and firmware version. Tap **Clients** to view its currently connected clients. You can also identify the device by flashing its status LED and restart the device on this screen.

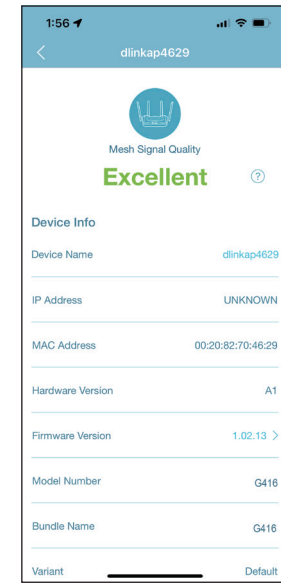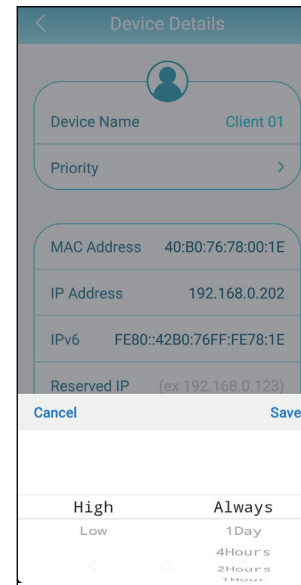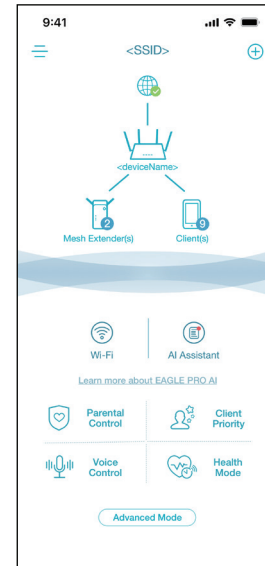

Voice Control

With the G416, you can command your router's functionality with your voice through Amazon Alexa and the Google Assistant, enabling you to control your network with voice commands. Features include enabling and disabling your Wi-Fi guest zone without logging in to the web interface, rebooting the router, and checking your router for firmware upgrades. In order to use third-party services to control and manage your device, please register your device with D-Link Cloud Service first.

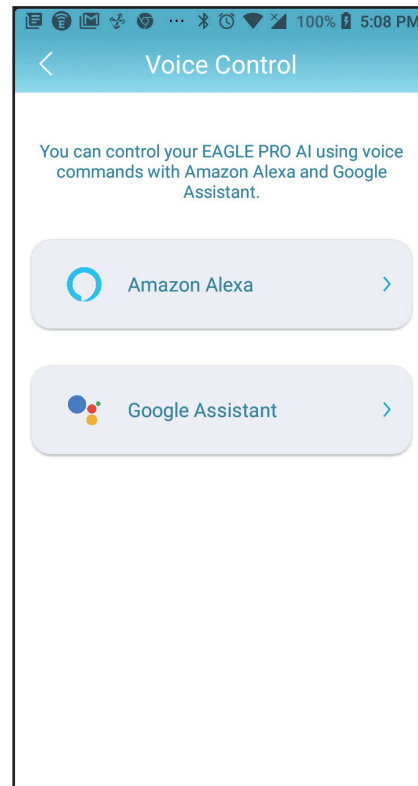

Register a D-Link Cloud Service Account

In order to use third-party apps to control and manage your device, you will first need to link your D-Link account with the app such as Google Assistant.

Step 1

Launch EAGLE PRO AI and go to the **Home** screen.




EAGLE PRO AI




Step 2

Tap **Voice Control** from the **Home** screen.

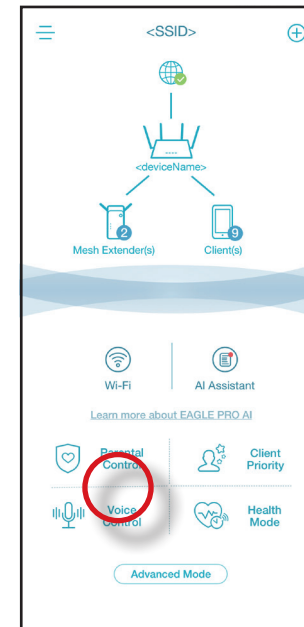


Step 3

Choose the cloud service.

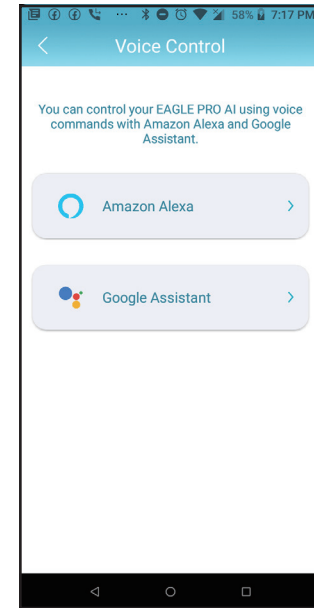


Step 4

Link your Google account.

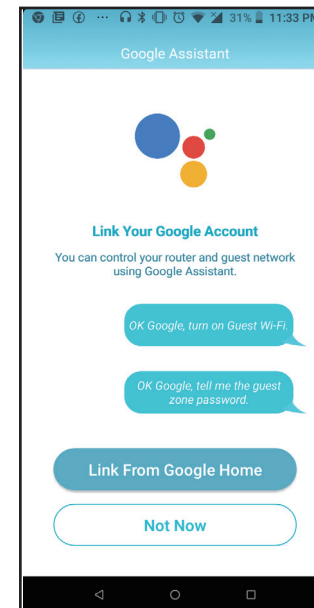


Step 5

The Google Home app will be launched.

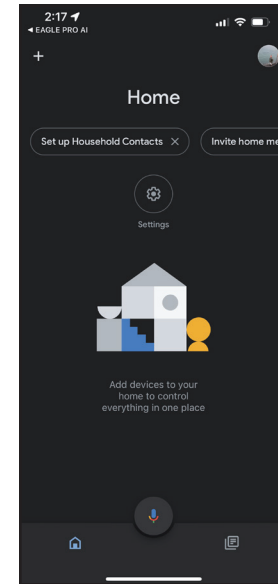


Step 6

Link your registered D-Link account with Google.

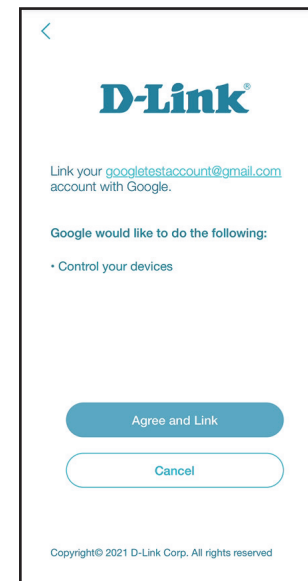


Step 8

Choose your device.

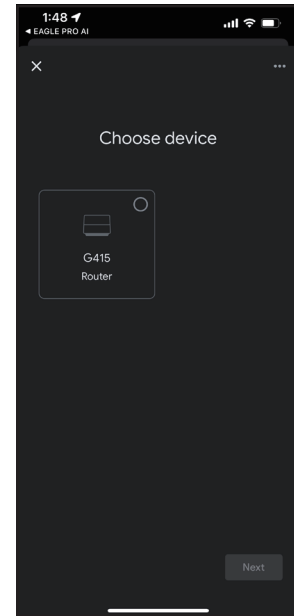


Step 9

Choose a home.

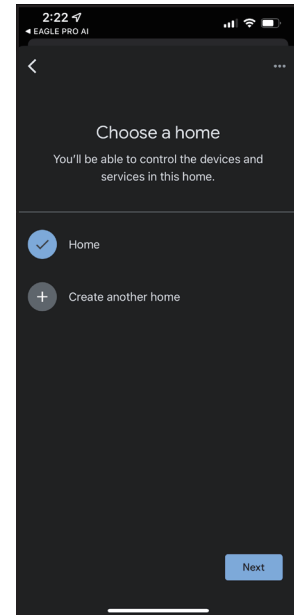


Step 10

Choose a location for your device.

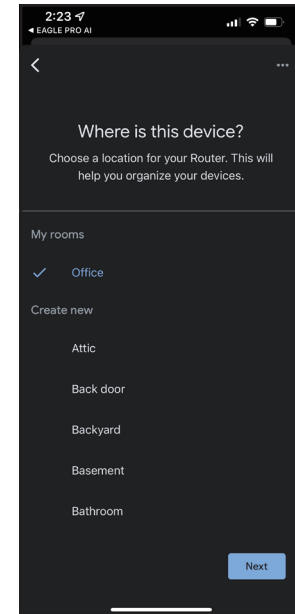

Step 11

Device successfully set up with the Google Home.

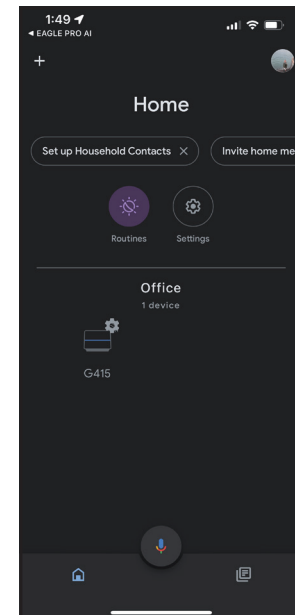

Amazon Alexa Setup

You will need the Amazon Alexa app, an Amazon account, and a D-Link account to use this feature.

Note: *The screenshots may be different depending on your mobile device's OS version. However, the process is the same.*

Step 1


Launch the **Amazon Alexa** app.



Amazon Alexa


Step 2

Tap **Browse Skills**.

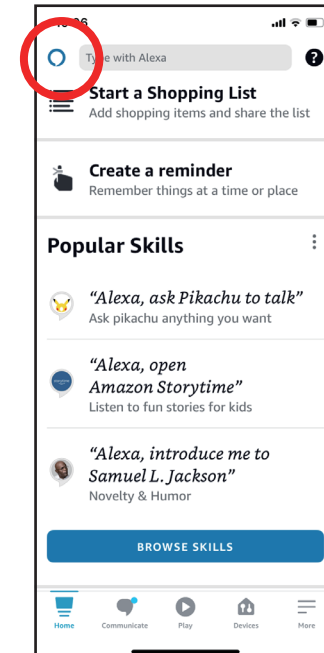


Step 3

Search EAGLE PRO AI for **Skills & Games**.

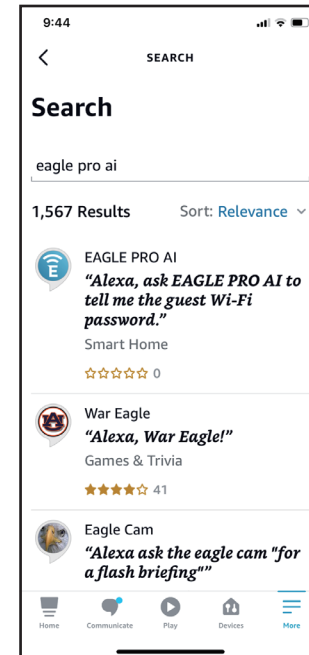


Step 4

The EAGLE PRO AI page.

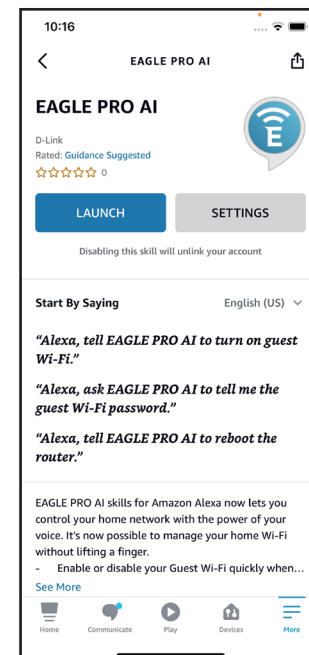


Step 5

Tap **LAUNCH** to link the skill.

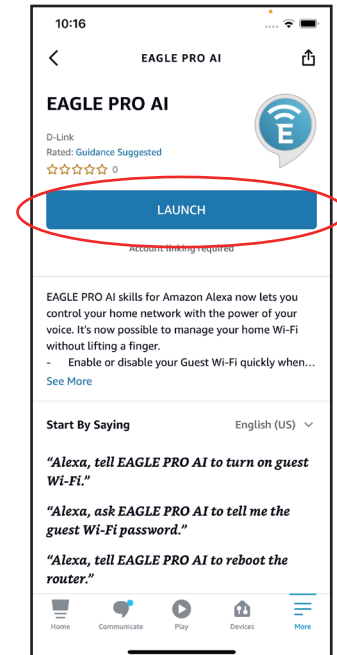

Step 6

Congratulations! **EAGLE PRO AI** has been successfully linked as a skill for your Amazon device. Refer to **Amazon Alexa Voice Commands** on the next page for tasks that you can ask your Amazon Alexa to perform.

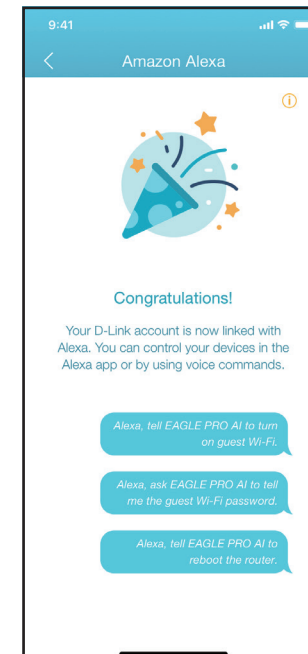

Amazon Alexa Voice Commands

With **EAGLE PRO AI** enabled as a skill for Alexa, you can ask Alexa to do any of the following tasks. Before commanding Alexa, say "Open EAGLE PRO AI" and respond to Alexa's offering by saying "Help."

Task	Command
Enable the guest Wi-Fi	"Enable my guest Wi-Fi."
Disable the guest Wi-Fi	"Disable my guest Wi-Fi."
Find out your Wi-Fi SSID	"What is my Wi-Fi SSID?"
Find out the guest Wi-Fi name and password	"What are my guest Wi-Fi credentials?"
Reboot the router	"Reboot my router."
Upgrade the router	"Upgrade my router."
Obtain weekly report messages	"Read messages."
Note: Network can be substituted for Wi-Fi.	

If using an Alexa speaker, start your command with one of the following:

1. "Alex, ask EAGLE PRO AI to." For example, command Alexa by saying, "Alex, ask EAGLE PRO AI to enable my guest Wi-Fi."
2. "Alex, talk to EAGLE PRO AI" and wait for Alexa to respond. Then say your command.

Google Assistant Setup

You will need the Google Assistant app, a Google account, and a D-Link Cloud Service account to use this feature.

Note: The screenshots may be different depending on your mobile device's OS version. However, the process is the same.

Step 1


Launch the **Google Assistant** app.



Assistant



Step 2

Tap **Voice Control** from the **Home** screen.

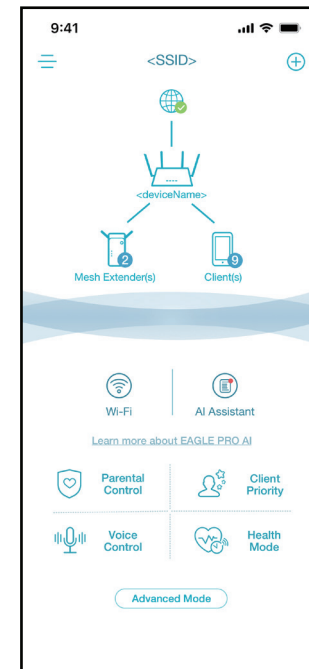



Step 3

Tap **Edit** to customize the pin code or use the randomly generated number.

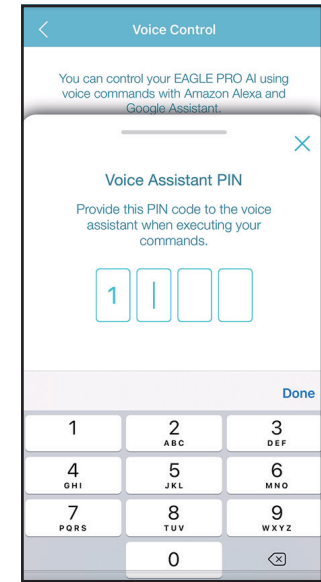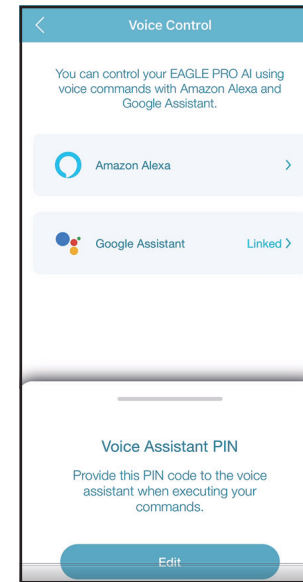

Step 4

Type in your command and provide the pin code as required. Refer to **Google Assistant Voice Commands** on the next page for tasks that you can ask your Google Assistant to perform.

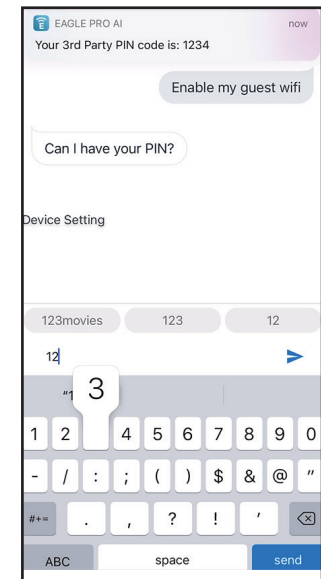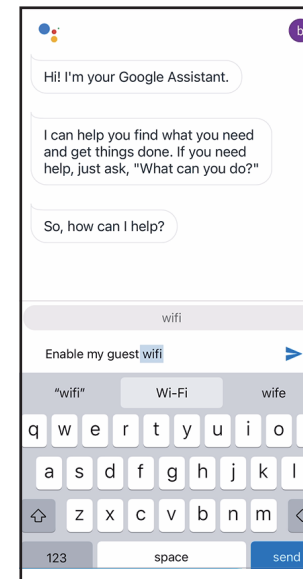

Google Assistant Voice Commands

With **EAGLE PRO AI** linked with the Google Assistant, you can ask your Google Assistant to do any of these tasks:


Task	Command
Check guest Wi-Fi status	"Is my guest Wi-Fi enabled?"
Check Wi-Fi status	"Is my Wi-Fi enabled?"
Check guest Wi-Fi SSID	"What is my guest Wi-Fi SSID?"
Check Wi-Fi SSID	"What is my Wi-Fi SSID?"
Enable the guest Wi-Fi	"Enable my guest Wi-Fi."
Disable the guest Wi-Fi	"Disable my guest Wi-Fi."
Find out the guest Wi-Fi password	"What is my guest Wi-Fi password?" ¹
Reboot the router	"Reboot my router."
Update the router	"Software update my router."
Notes: <ol style="list-style-type: none"> 1. Only supported on Nest Hub with screen display. 2. Network can be substituted for Wi-Fi. 	

If using a Google Home speaker, start your command by saying "Hey Google."


Quick VPN

This router is equipped with D-Link's Quick VPN technology. Virtual Private Networking (VPN) creates a connection between devices across the Internet. Using Quick VPN allows you to securely connect your computer or mobile device to places with free, untrusted Wi-Fi hotspots in places like coffee shops and hotels by encrypting and relaying it through your home Internet connection. This extra 'hop' reduces the chances of hackers stealing your information, such as logins, passwords, and credit card numbers. When traveling, Quick VPN lets you watch sports and use video streaming services without experiencing blackouts or filtering. You can surf the whole Internet just as you would at home.

Without Quick VPN

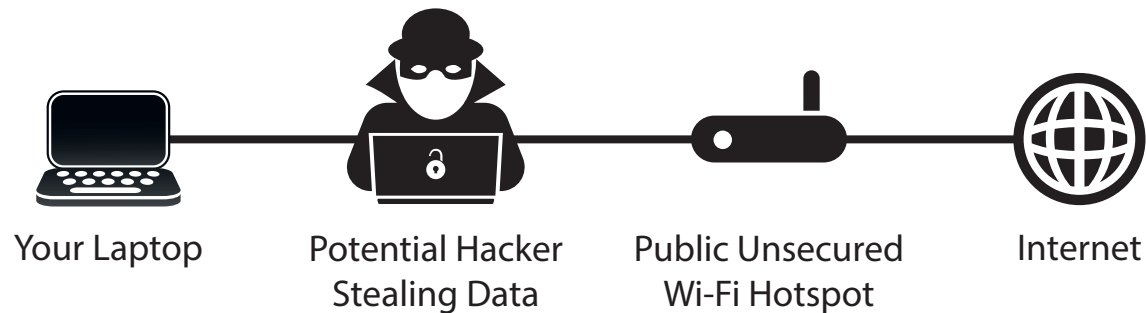

With Quick VPN

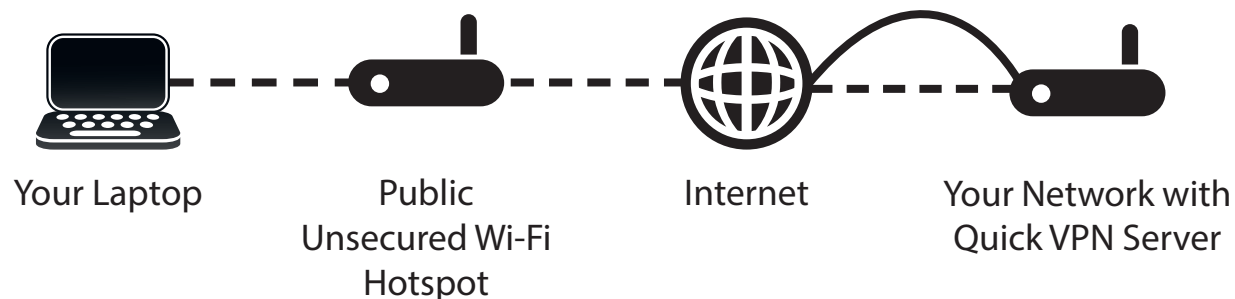

————— Unencrypted Data - - - - - Encrypted Data

Important Information

The following instructions explain and help you to configure your D-Link Quick VPN enabled router and devices to create a Virtual Private Network (VPN). This feature is provided for advanced users who wish to connect remotely and use their router's Internet connection to add a layer of security while using untrusted networks. Configure the Quick VPN Server on your router first and then set up client devices to connect through your router's WAN connection.

- Quick VPN only provides an added layer of security against specific types of snooping attacks and does not guarantee complete data integrity or protection. Only traffic in the tunnel between your router and device will be encrypted, WAN traffic will leave your D-Link Quick VPN enabled router unencrypted.
- Keep your Quick VPN Username, Password, and Passkey safe. Keep your Quick VPN Username, Password, and Passkey safe. It is recommended that you change these credentials periodically.
- A device connected via Quick VPN tunnel may experience lower data throughput and higher latency due to a number of factors including: Internet conditions, local and remote network Wi-Fi and WAN bandwidth limitations, and increased latency. This may negatively impact real time voice and video communication.
- Quick VPN supports up to five concurrent VPN client sessions using the same login and password are supported. Quick VPN uses L2TP/IPsec with MSCHAPv2, PAP, or CHAP authentication.
- Your device may warn you that your information may be intercepted, since you control the Quick VPN server, you may ignore this.
- UDP Ports 500, 4500, 1701 and IP Port 50 must be open in order for Quick VPN to work.
- L2TP/IPsec VPN usage may be restricted in some countries and on some networks. If you have trouble using Quick VPN on some networks, but not others and are not violating network access rules, try contacting your ISP or network administrator.
- Devices connected via Quick VPN are assigned addresses on a separate subnet (ex. 192.168.1.x). Some network resources may be unavailable when connecting via Quick VPN.
- If your Internet connection uses DHCP, it is strongly recommended that you first set up Dynamic DNS (DDNS), such as D-Link DDNS, to eliminate the need to reconfigure client devices in the event your ISP assigns you a new WAN IP address.

iOS Devices


VPN Setup Instructions

This section provides Quick VPN setup instructions for iOS devices. Refer to **Quick VPN** on page **84** for your router setup instructions.


Go into **Settings** on your compatible iOS device.

Scroll down and tap **General**.

Scroll down and tap **VPN**.

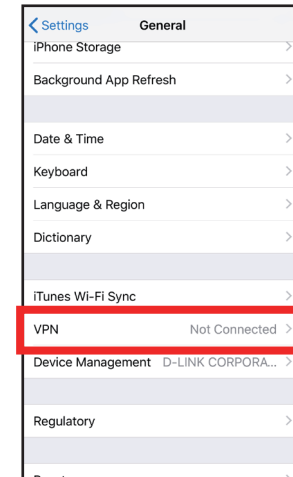

Tap **Add VPN Configuration...**

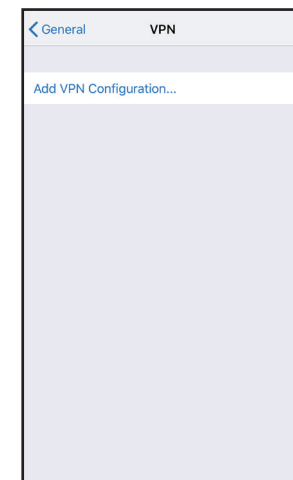

You should see a pop up window asking you to fill out the details of your VPN connection.

Type: Choose **IPSec**. Tap **Back** to return to the Add Configuration page.

Description: For reference purposes only, used to differentiate between multiple VPN connections.

Server: Enter the IP/DDNS address of your Quick VPN server.

Account: Enter the Username used to authenticate login to VPN server

Password: Enter Password used to authenticate login to VPN server

Secret: Enter your Pre-Shared Key (PSK).

Tap **Done** to close the configuration window.

Your iOS device is now configured to connect to your Quick VPN server.

Cancel Quick VPN Done

Type IPsec

Description Quick VPN

Server IP/DDNS_address_of_QuickVPN

Account vpn

Password ●●●

Use Certificate

Group Name



Secret ●●●●●●

PROXY


Off Manual Auto

Connect or Disconnect

To connect or disconnect from to your Quick VPN server, go to **Settings** > **VPN** and tap the button next to **VPN Status**.

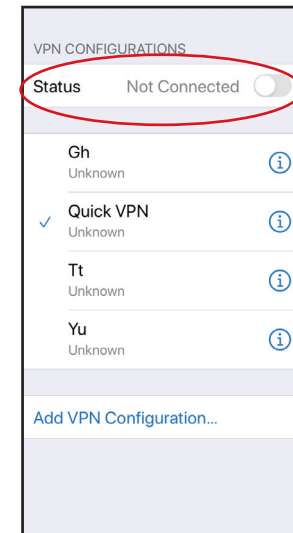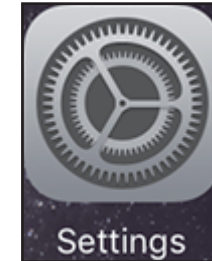

The VPN icon will appear in the notification area at the top of your screen indicating that your device is currently connected to the Quick VPN server.

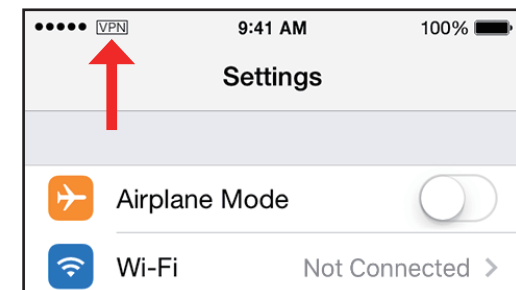

Mac OS X



VPN Setup Instructions

This section provides Quick VPN setup instructions for OS X using the **Export** Profile function. Refer to **Quick VPN** on page **84** for your router setup instructions.

Open the exported profile. The Install Profile dialogue will appear; click **Continue** and **Install**.

Enter your user account password when prompted. Close the **Profiles** dialogue.

Go to  > **System Preferences...** > **Network** and select the Quick VPN connection and click **Authentication Settings**.

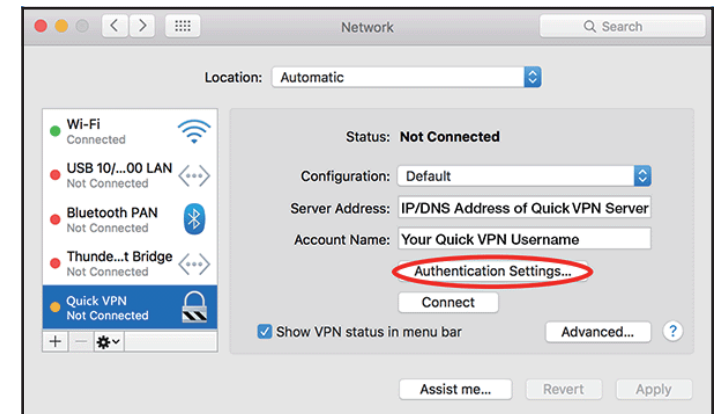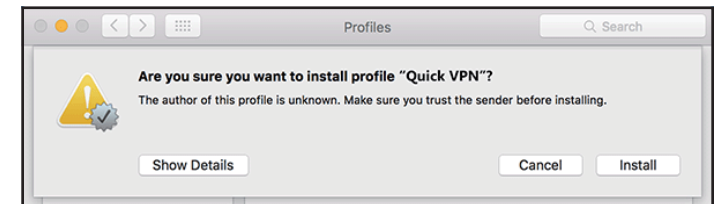

Enter your **Passkey** in the **Shared Secret** text box and click **OK, Apply**, then **OK**.


The image shows a configuration dialog box for VPN authentication. It is divided into two main sections: 'User Authentication' and 'Machine Authentication'. In the 'User Authentication' section, the 'Password' option is selected with a radio button, and its corresponding text box contains three dots. Other options include 'RSA SecurID', 'Certificate' (with a 'Select...' button), 'Kerberos', and 'CryptoCard'. In the 'Machine Authentication' section, the 'Shared Secret' option is selected with a radio button, and its text box contains the text 'Enter your PSK', which is circled in red. The 'Certificate' option is also present with a 'Select...' button. Below these sections is a 'Group Name' text box with '(Optional)' written below it. At the bottom of the dialog are 'Cancel' and 'OK' buttons.

Your Mac is now configured to connect to your Quick VPN server.

Connect or Disconnect

To connect to or disconnect from your Quick VPN server, go to **Apple > System Preferences... > Network**.

Select the Quick VPN connection and click on the **Connect** or **Disconnect** button.

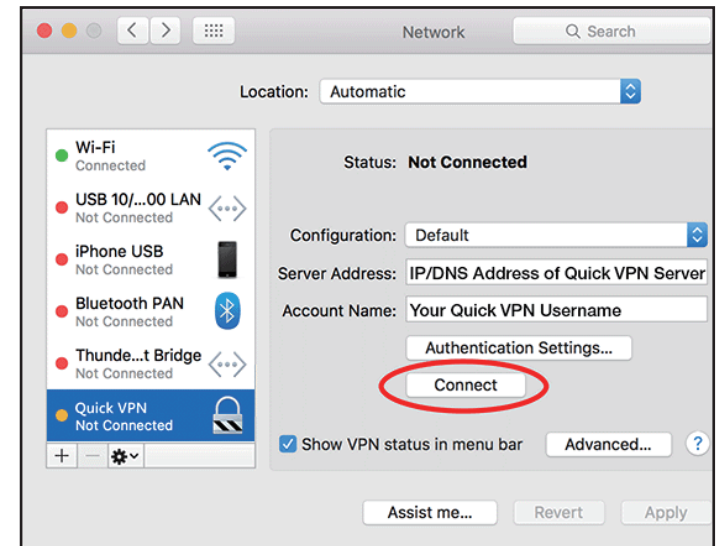


Windows 7

VPN Setup Instructions


This section provides Quick VPN setup instructions for Windows 7. Refer to **Quick VPN** on page **84** for your router setup instructions.

Click the **Start** button and type **vpn** into the **Search programs and files** box.


Select **Set up a virtual private network (VPN) connection**.

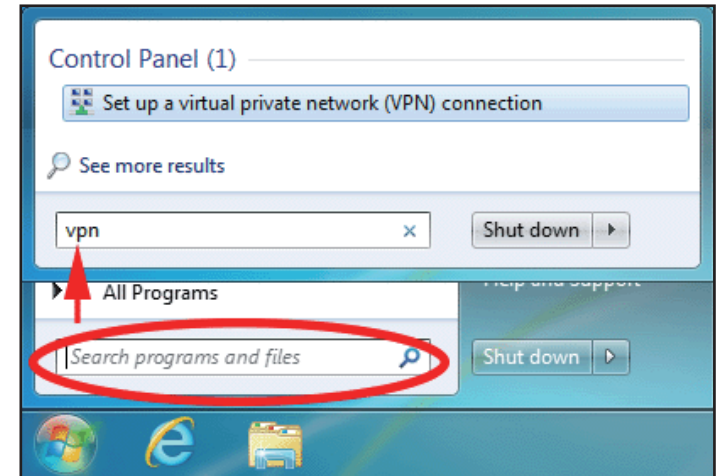

Enter the **IP/DDNS address** of your Quick VPN server in the **Internet address** box, create a name for your connection in the **Destination Name**, check **Don't Connect now; just set it up so I can connect later**, and click **Next**.

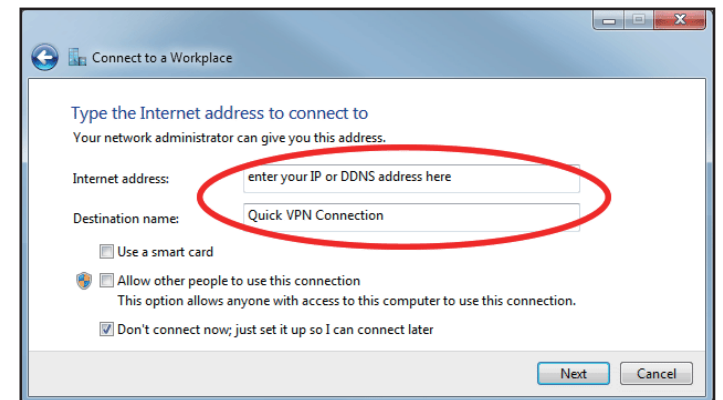


Enter your **Username**. If you would like windows to save your password, enter your **Password** and check **Remember this password**. Click **Create** to continue.

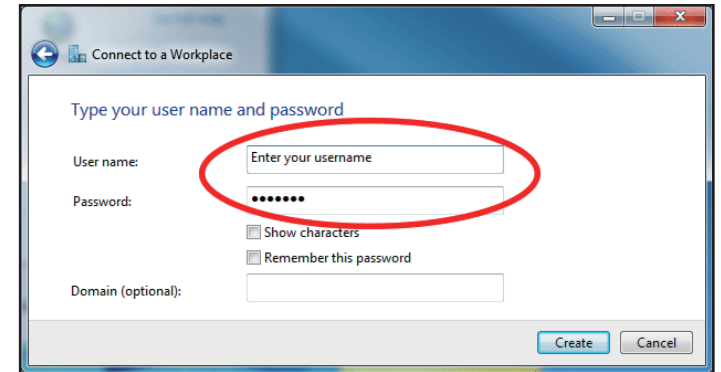


Do not click **Connect Now**.

Click **Close**. Click the **Start** button and type **view network connections** into the **Search programs and files** text box. Select **View network connections**.

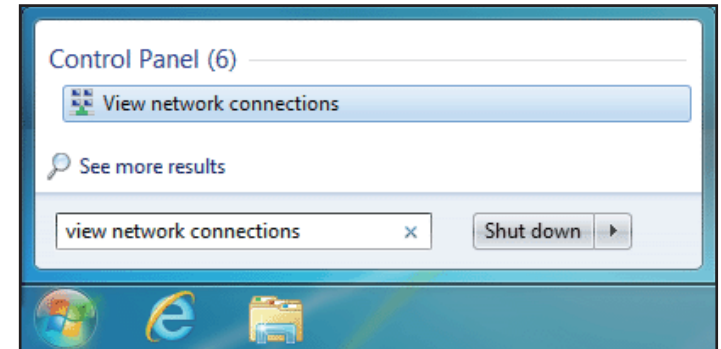


Click **Advanced settings**. Enter your **Passkey** in the **Key** text box under **Use preshared key for authentication**. Click **OK** to close **Advanced Properties** and click **OK** to close **Quick VPN Connection Properties**.

Your Windows 7 system is now configured to connect to your Quick VPN server.

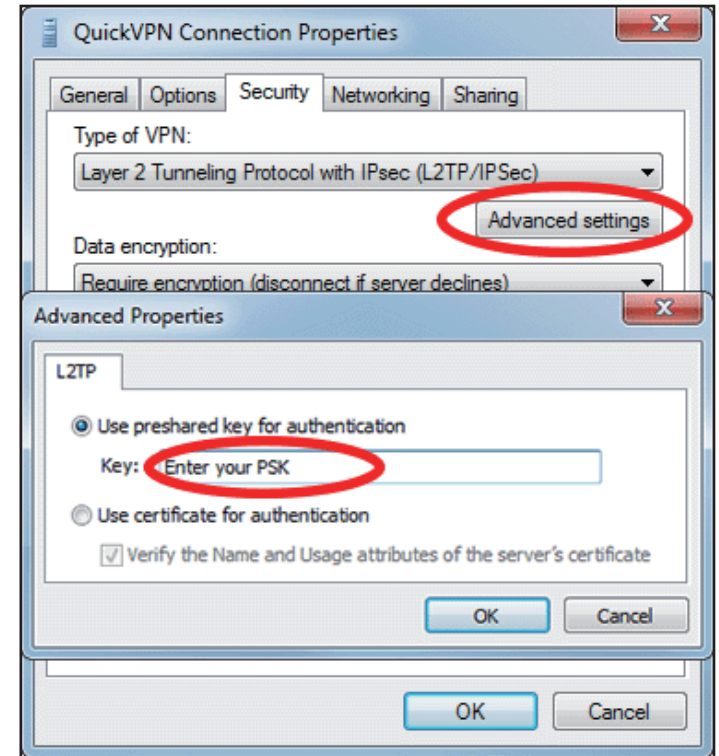

Connect or Disconnect

To connect to or disconnect from your Quick VPN server, click on the **Network Settings** icon in the notification area of the Windows taskbar and from the **Dial Up and VPN** section click on your Quick VPN connection and click on the **Connect** or **Disconnect** button.

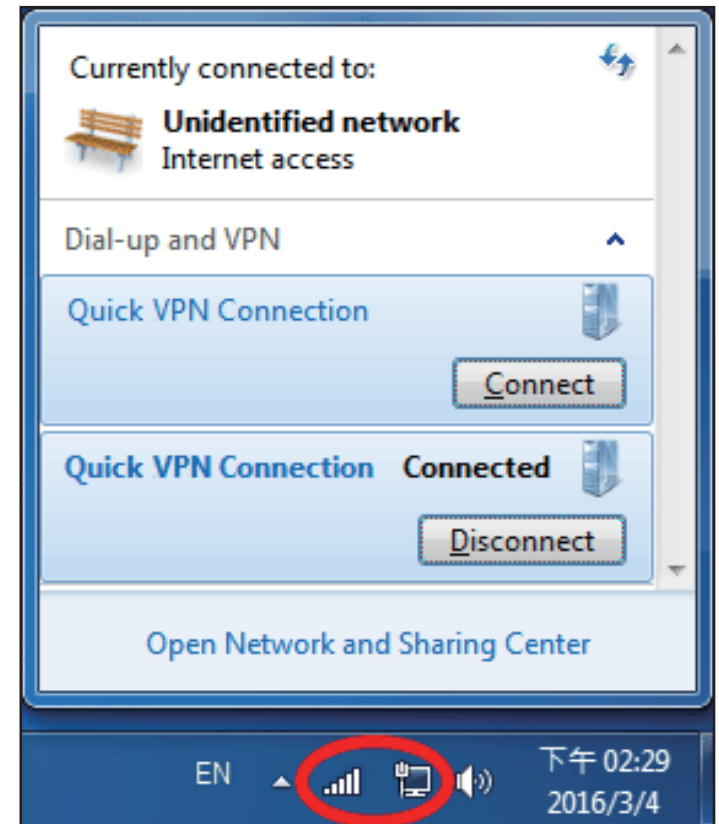

Windows 8.1/8


VPN Setup Instructions

This section provides Quick VPN setup instructions for Windows 8.1/8. Refer to **Quick VPN** on page **84** for your router setup instructions.


This section provides Quick VPN setup instructions for Windows 8.1/8.

Click the **Start** button and type **vpn**.

Select **Manage virtual private networks**.

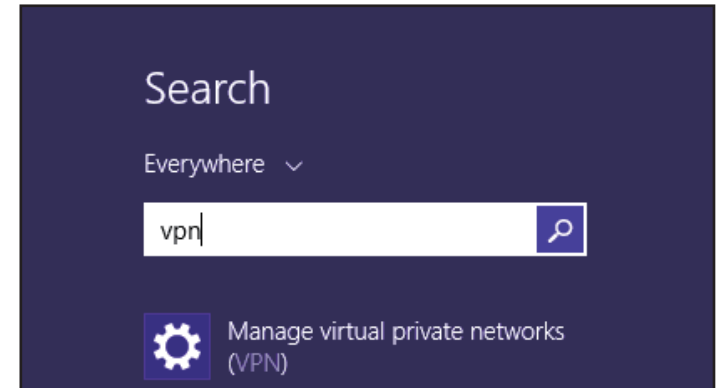

From the Network Settings page, click **Add a VPN Connection**.

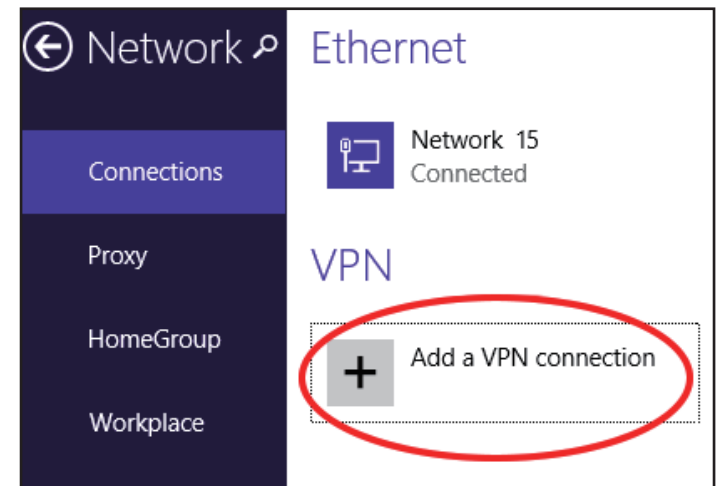


- 1 Select **Microsoft** from **VPN Provider**.
- 2 Create a name for your VPN connection.
- 3 Enter your **IP/DDNS address** of your Quick VPN server.
- 4 Select **User name and password** from **Type of sign-in info**.
- 5 If you would like windows to remember your sign-in information, enter your **User name, Password**, and select **Remember my sign-in info**
- 6 Choose **Save**.


The screenshot shows the 'Add a VPN connection' dialog box with the following fields and options:

- 1** VPN provider: Microsoft (dropdown menu)
- 2** Connection name: Quick VPN (text input)
- 3** Server name or address: IP/DDNS Address of Quick VPN Server (text input)
- 4** Type of sign-in info: User name and password (dropdown menu)
- 5** User name (optional): Username (text input)
- 5** Password (optional): [Redacted] (password input with eye icon)
- Remember my sign-in info (checkbox)
- 6** Save (button) and Cancel (button)

Right-click on the Quick VPN Connection you just created and left-click on **Properties**.

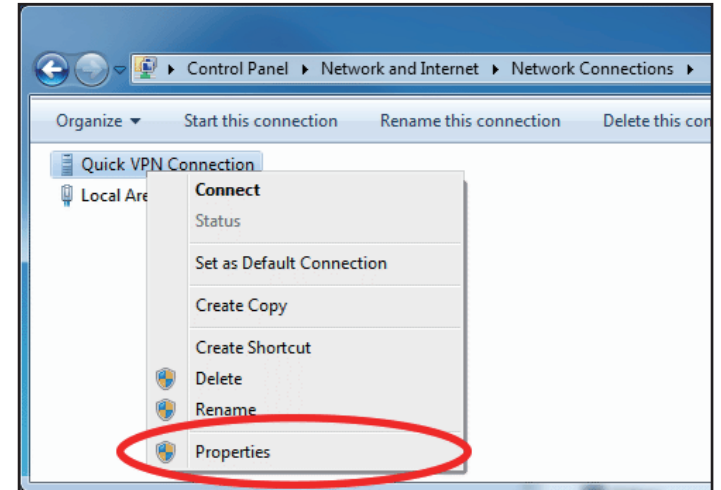


Select the **Security** tab. For the **Type of VPN**, select **Layer 2 Tunneling with IPsec (L2TP/IPSec)**.

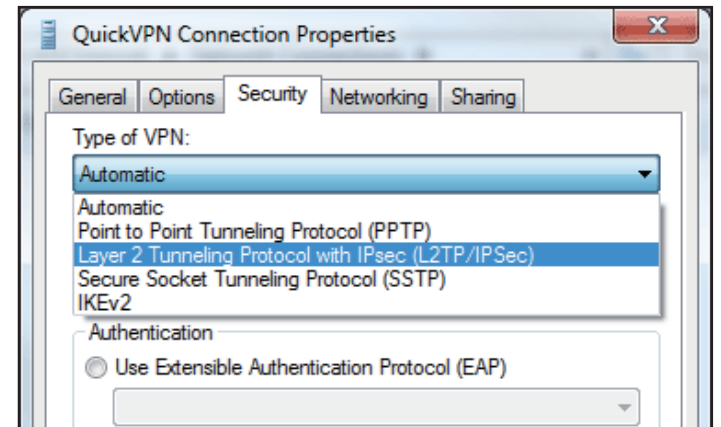


Click the **Start** button and type **view network connections**.

Select **View network connections**.

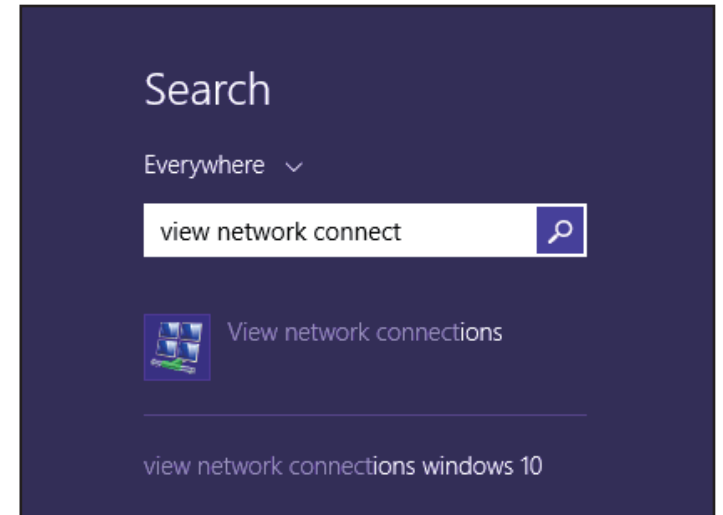

Right-click your **Quick VPN Connection** and left-click **Properties**.
Select the **Security** tab.


For the **Type of VPN**, select **Layer 2 Tunneling with IPsec (L2TP/IPSec)**.

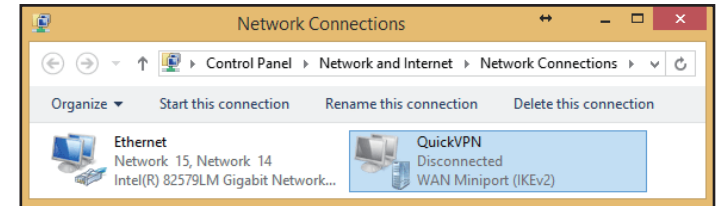

Click **Advanced settings**. Enter your **Passkey** in the **Key** text box under **Use preshared key for authentication**.



Click **OK** to close **Advanced Properties** and click **OK** to close **Quick VPN Properties**.

Your Windows 8.1/8 system is now configured to connect to your Quick VPN server.

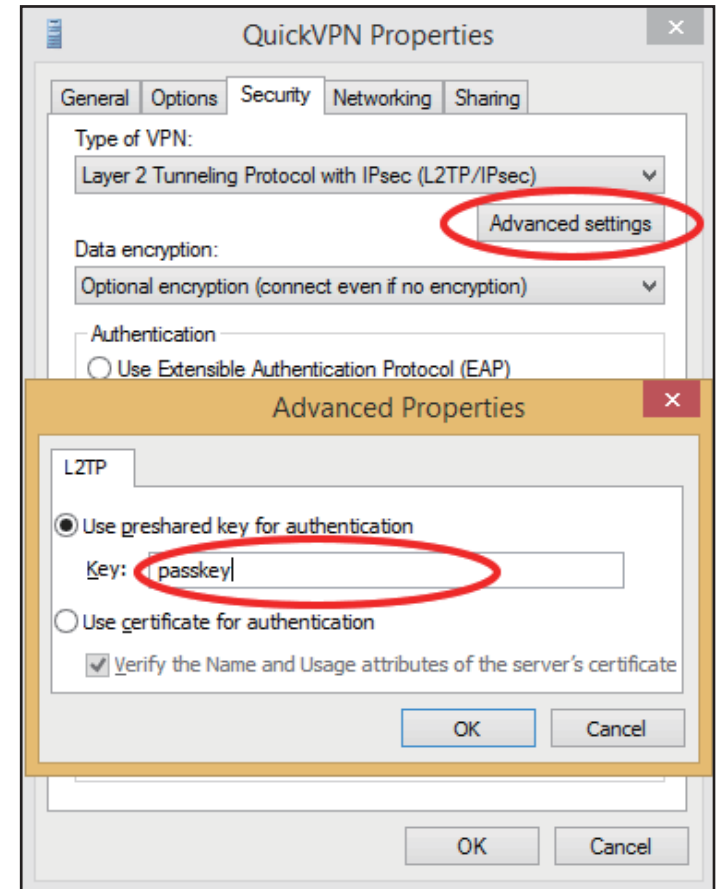

Connect or Disconnect

 To connect to or disconnect from your Quick VPN server, click on the **Network Settings** icon in the notification area of the Windows taskbar. Click on your Quick VPN connection and click on the **Connect** or **Disconnect** button.

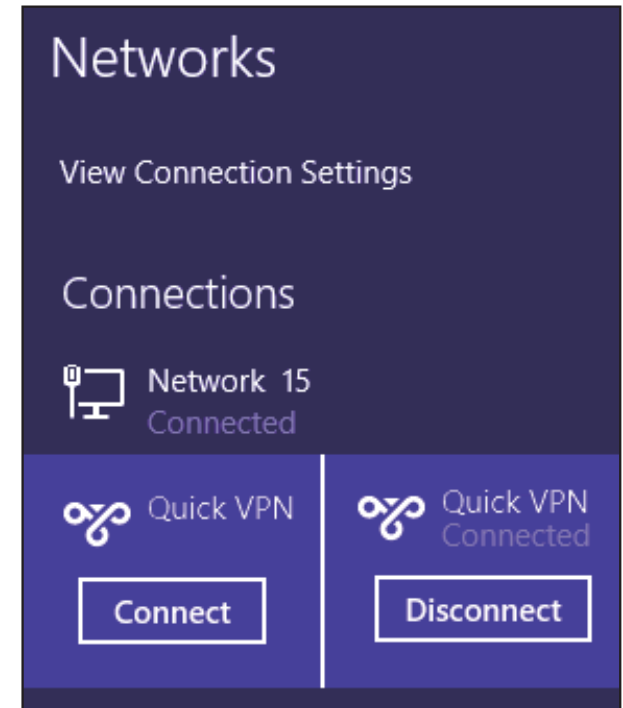
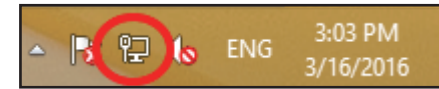


Windows 10 VPN Setup Instructions

This section provides Quick VPN setup instructions for Windows 10. Refer to **Quick VPN** on page **84** for your router setup instructions.

This section provides Quick VPN setup instructions for Windows 10.

Click **Start > Settings > Network & Internet > VPN > Add a VPN Connection.**

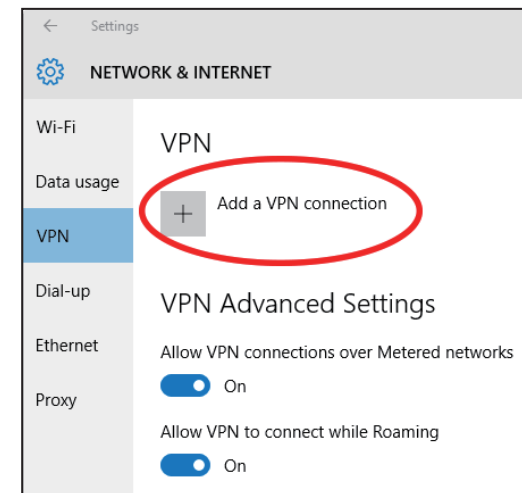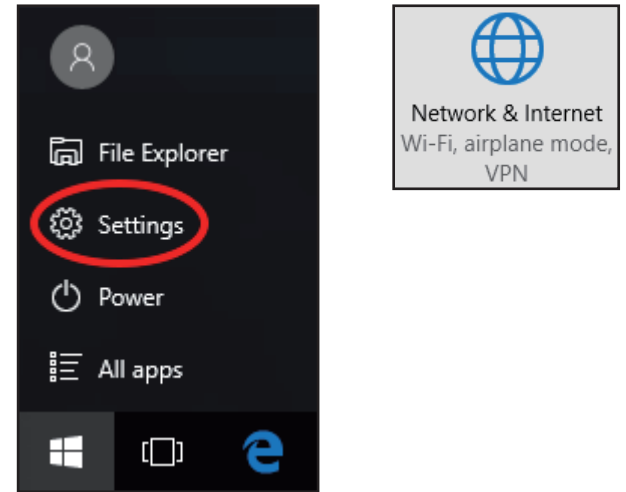


 
On the **Add a VPN connection** screen, do the following:

- 1 Select **Windows (built-in)** from the **VPN Provider** menu.
- 2 Create a name for your VPN connection.
- 3 Enter your **IP/DDNS address** of your Quick VPN server.
- 4 Select **L2TP/IPSec with pre-shared key** for **VPN type**.
- 5 Enter the **Passkey**.
- 6 Select **User name and password** from **Type of sign-in info**.
If you would like windows to remember your sign-in information, enter your **User name, Password**, and select **Remember my sign-in info**
- 7 Choose **Save**.

Your Windows 10 system is now configured to connect to your Quick VPN server.



The screenshot shows the 'Add a VPN connection' window in Windows 10. The window has a blue header and a white background. It contains several fields and a checkbox, each with a numbered callout (1-7) pointing to it. The fields are: 'VPN provider' (dropdown menu), 'Connection name' (text box), 'Server name or address' (text box), 'VPN type' (dropdown menu), 'Pre-shared key' (text box), 'Type of sign-in info' (dropdown menu), 'User name (optional)' (text box), and 'Password (optional)' (text box with masked characters). At the bottom, there is a checked checkbox labeled 'Remember my sign-in info' and two buttons: 'Save' and 'Cancel'. The callouts are: 1 points to the 'VPN provider' dropdown, 2 points to the 'Connection name' text box, 3 points to the 'Server name or address' text box, 4 points to the 'VPN type' dropdown, 5 points to the 'Pre-shared key' text box, 6 points to the 'Type of sign-in info' dropdown, and 7 points to the 'Save' button.

Connect or Disconnect

To connect to or disconnect from your Quick VPN server, click on the **Network Settings** icon (either  or ) in the notification area of the Windows taskbar and click on your Quick VPN connection.

The section of VPN in **Network & Internet Settings** page will open, select your Quick VPN, then select **Connect**. Or if the Connect button shows under the VPN connection, select **Connect**.

If connected, the VPN connection name will display **Connected** underneath it. You can click **Disconnect** to stop the connection.

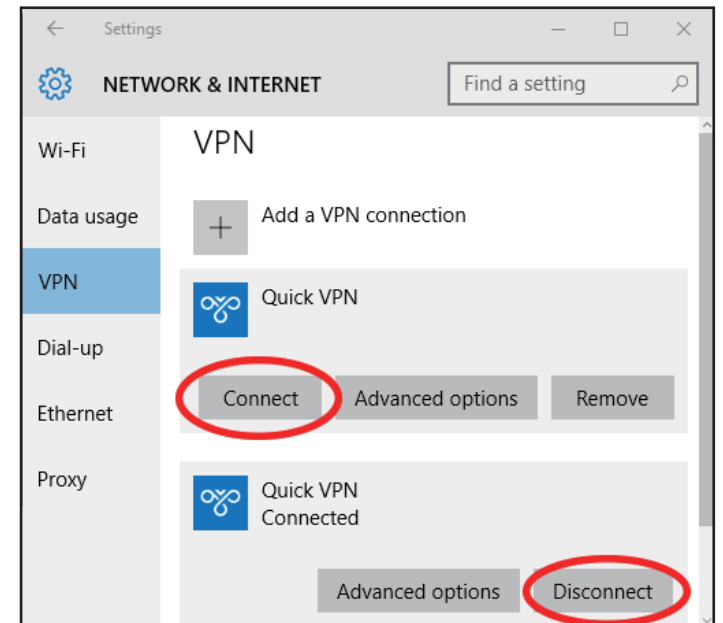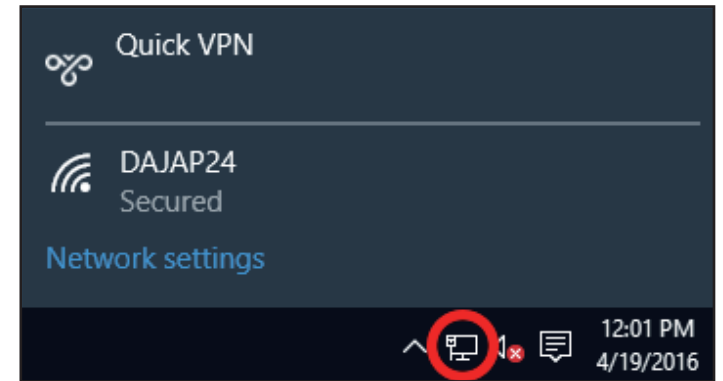


Android

VPN Setup Instructions

This section provides Quick VPN setup instructions for Android devices. Your device's screens may vary. Refer to **Quick VPN** on page **84** for your router setup instructions.



Go to **Settings** > **Network & Internet** > **VPN**

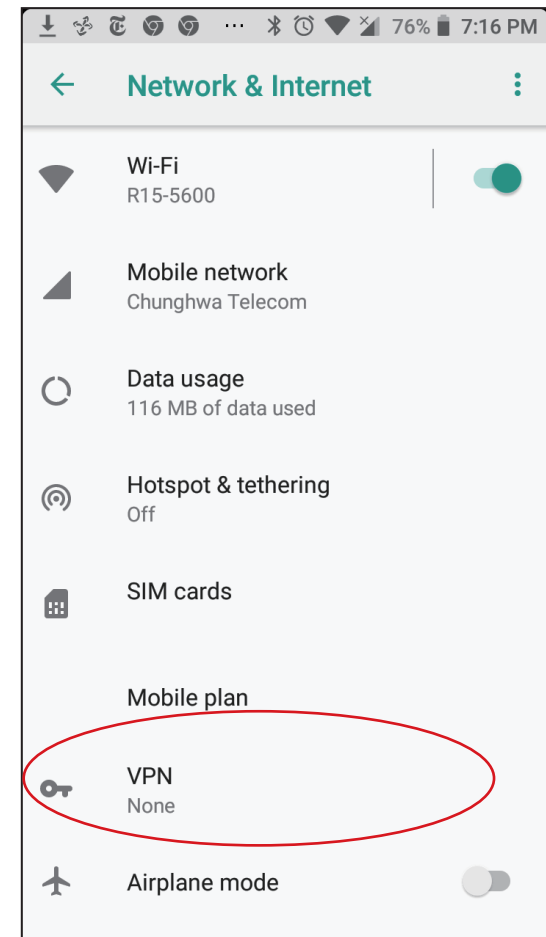

Tap + to create or **VPN Settings** to edit a VPN connection profile


- 1 Enter a name for your VPN connection.
- 2 Select **L2TP/IPSec PSK** for **Type**.
- 3 Enter the **IP/DDNS address** of your Quick VPN server.
- 4 Enter your **Passkey** in **IPSec pre-shared key** field.
- 5 Choose **Save**.

Your Android device is now configured to connect to your Quick VPN server.

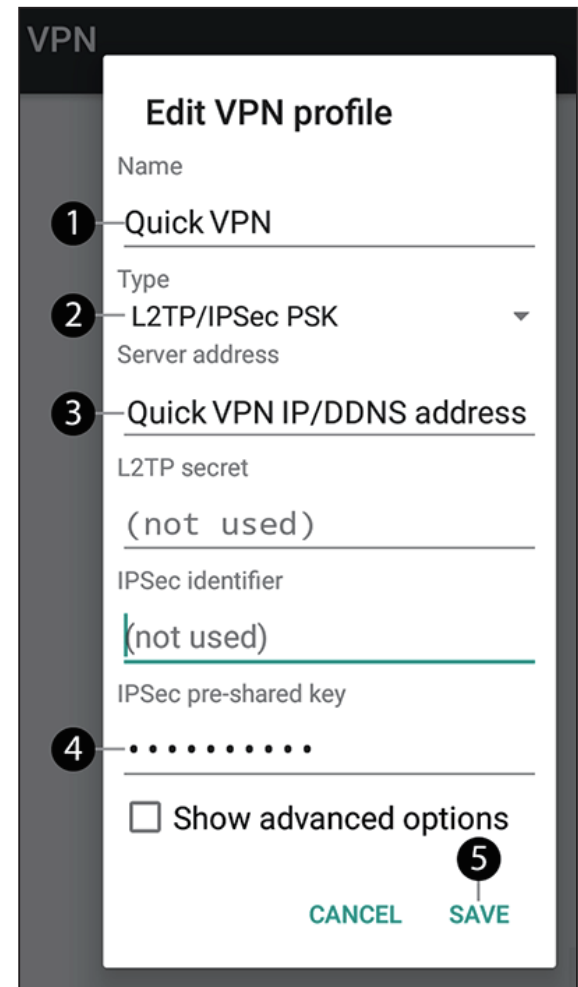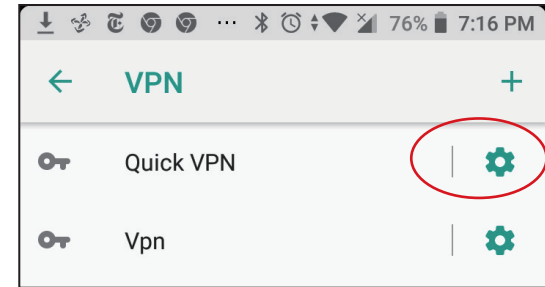


Connect or Disconnect


Tap the **Quick VPN** connection you created.

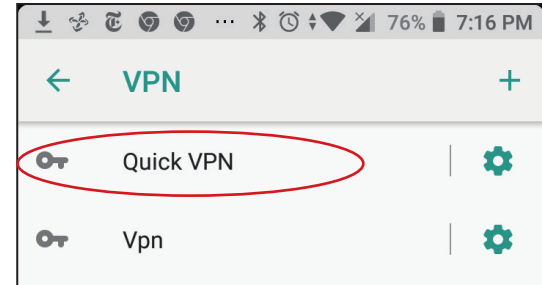

To connect, enter your **Username** and **Password**, then tap **CONNECT**.

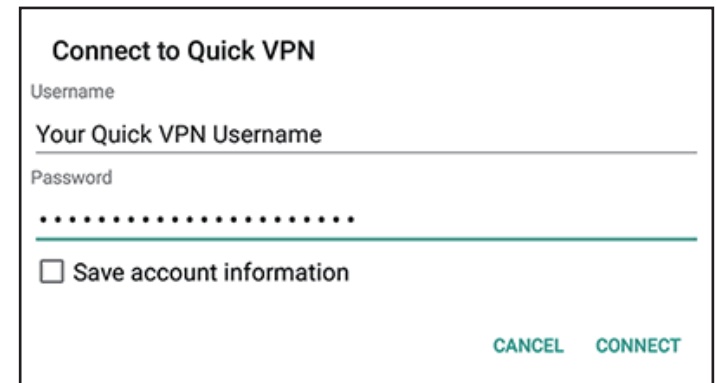

To disconnect, tap **DISCONNECT**.

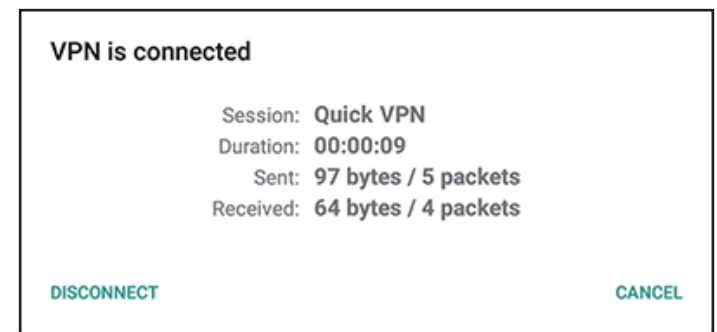


Connect a Wireless Client to Your Router

WPS Button

The easiest and most secure way to connect your wireless devices to the router is with WPS (Wi-Fi Protected Setup). Most wireless devices such as wireless adapters, media players, Blu-ray DVD players, wireless printers and cameras will have a WPS button (or a software utility with WPS) that you can press to connect to the router. Please refer to your user manual for the wireless device you want to connect to make sure you understand how to enable WPS. Once you know, follow the steps below:

Step 1 - Press the WPS button on the router for about 1 second. The wireless LEDs will start to blink.

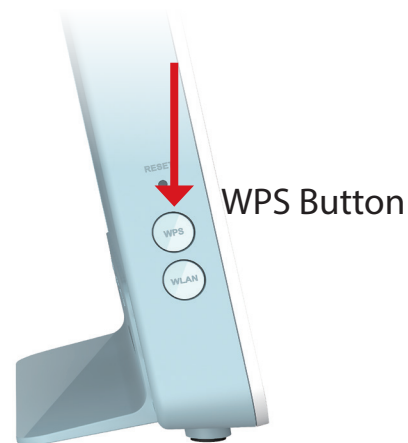

Step 2 - Within 2 minutes, press the WPS button on your wireless device (or launch the software utility and start the WPS process).

Step 3 - Allow up to 1 minute for your connection to be configured. Once the LEDs stop blinking, you will be connected securely.

Windows® 10

To join an existing network, locate the wireless network icon in the taskbar, next to the time display and click on it.

Clicking on this icon will display a list of wireless networks which are within range of your computer. Select the desired network by clicking on the SSID.




To connect to the SSID, click **Connect**.

To automatically connect with the router when your device next detects the SSID, check the **Connect Automatically** check box.

You will then be prompted to enter the Wi-Fi password (network security key) for the wireless network. Enter the password into the box and click **Next** to connect to the network. Your computer will now automatically connect to this wireless network when it is detected.




Wireless Icon

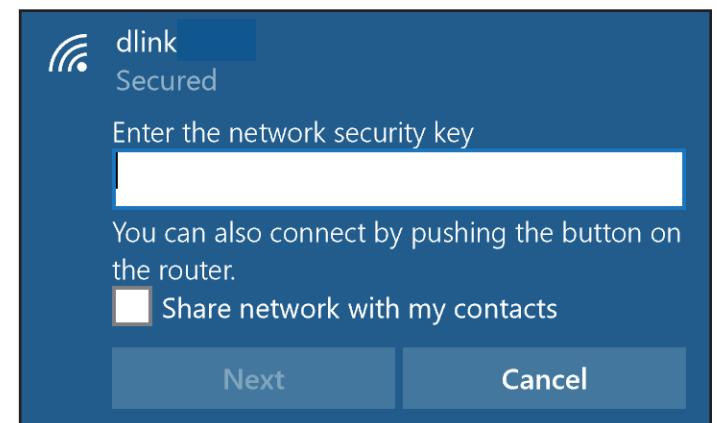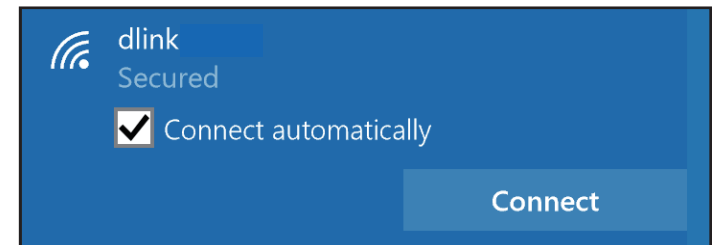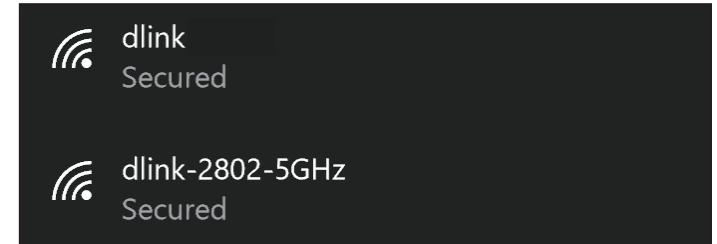


Windows® 8 - WPA/WPA2

 To join an existing network, locate the wireless network icon in the taskbar, next to the time display.

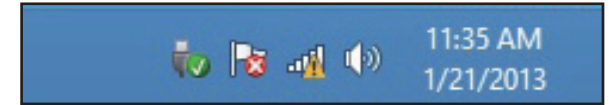


↑
Wireless Icon

Clicking on this icon will display a list of wireless networks which are within connecting proximity of your computer. Select the extender's network by clicking on the network name.

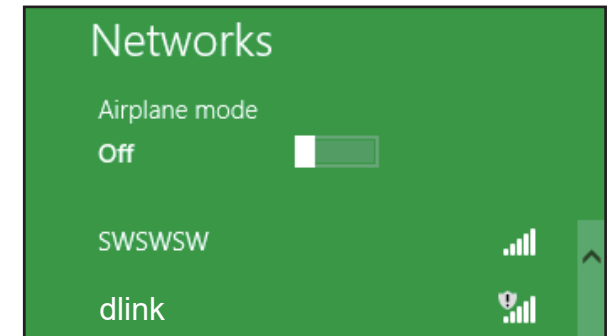


You will then be prompted to enter the network security key (Wi-Fi password) for the wireless network. Enter the password into the box and click **Next**.

If you wish to use Wi-Fi Protected Setup (WPS) to connect to the router, you can also press the WPS button on your router at this point to enable the WPS function.

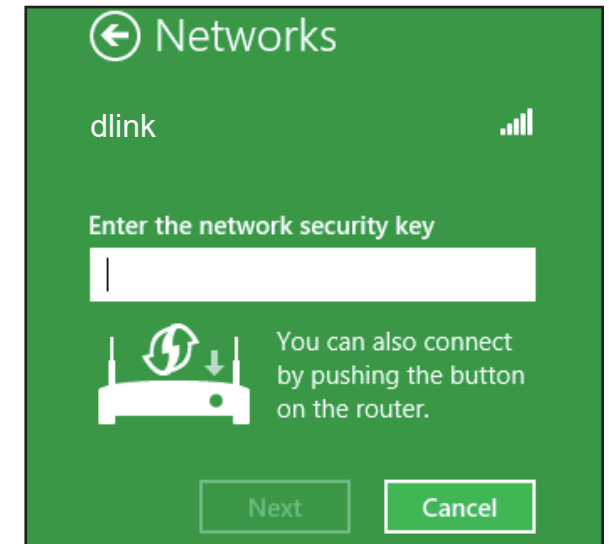

When you have established a successful connection with a wireless network, the word **Connected** will appear next to the name of the network to which you are connected.

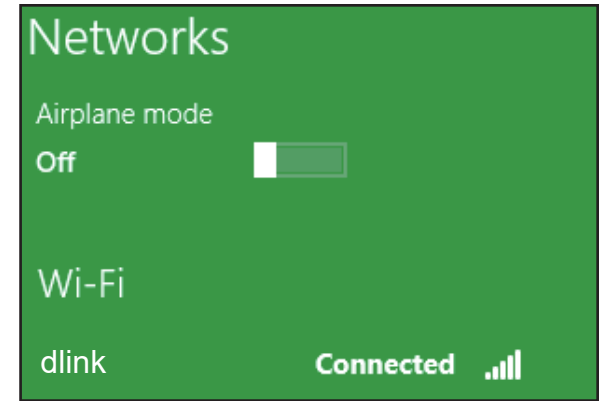


Windows® 7

WPA/WPA2

It is recommended that you enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

 Click on the wireless icon in your system tray (lower-right corner).

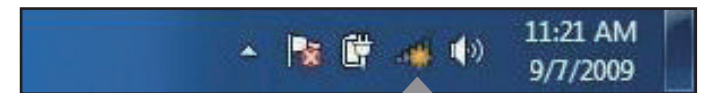

Wireless Icon


The utility will display any available wireless networks in your area.

Highlight the wireless connection with Wi-Fi name (SSID) you would like to connect to and click the **Connect** button.

If you get a good signal but cannot access the Internet, check your TCP/IP settings for your wireless adapter. Refer to **Networking Basics** on page 147 for more information.




The following window appears while your computer tries to connect to the router.

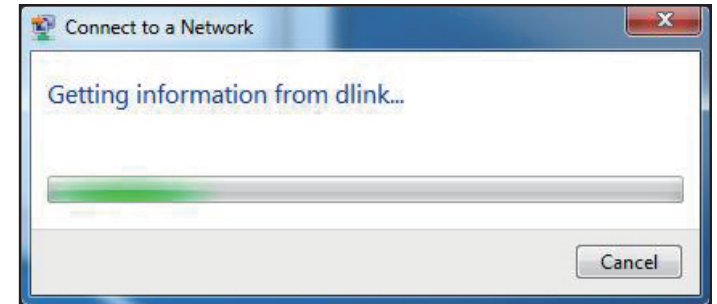

Enter the same security key or passphrase (Wi-Fi password) that is on your router and click **OK**. You can also connect by pushing the WPS button on the router.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as the one on the wireless router.

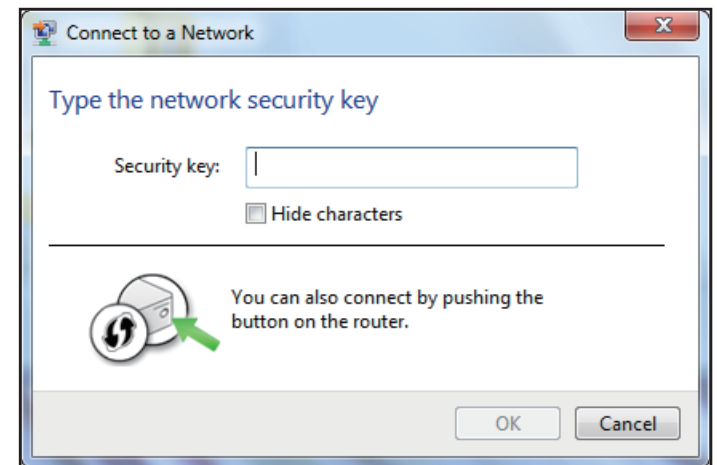

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the router. Read the following descriptions if you are having problems.

1. Why can't I access the web-based configuration utility?

When entering the IP address of the D-Link router (**192.168.0.1** for example), you are not connecting to a website, nor do you have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
 - Microsoft Internet Explorer® 10 or higher
 - Mozilla Firefox 28 or higher
 - Google™ Chrome 28 or higher
 - Apple Safari 6 or higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable, or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.
- Disable any Internet security software running on the computer. Software firewalls such as ZoneAlarm, BlackICE, Sygate and Norton Personal Firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Access the web management. Open your web browser and enter the IP address of your D-Link router in the address bar. This should open the login page for your web management.
- If you still cannot access the configuration, unplug the power to the router for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

2. What can I do if I forgot my password?

If you forgot your password, you must reset your router. This process will change all your settings back to the factory defaults.

To reset the router, locate the reset button (hole) on the rear panel of the unit. With the router powered on, use a paperclip to hold the recessed button down until the power LED turns orange. Release the button and the router will go through its reboot process. Wait about 30 seconds to access the router. The default IP address is **192.168.0.1**. When logging in, enter the default device password printed on the sticker.

Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business, or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link wireless family of products will allow you to securely access the data you want, when, and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A wireless router is a device used to provide this link.

What is Wireless?

Wireless or Wi-Fi technology is another way of connecting your computer to the network without using wires. Wi-Fi uses radio frequency to connect wirelessly so you have the freedom to connect computers anywhere in your home or office network.

How does wireless work?

Wireless works similarly to how cordless phones work, through radio signals that transmit data from one point A to point B. But wireless technology has restrictions as to how you can access the network. You must be within the wireless network range area to be able to connect your computer. There are two different types of wireless networks: Wireless Local Area Network (WLAN), and Wireless Personal Area Network (WPAN).

Wireless Local Area Network (WLAN)

In a wireless local area network, a device called an Access Point (AP) connects computers to the network. The access point has a small antenna attached to it, which allows it to transmit data back and forth over radio signals. With an indoor access point the signal can travel up to 300 feet. With an outdoor access point the signal can reach out up to 30 miles to serve places like manufacturing plants, industrial locations, university and high school campuses, airports, golf courses, and many other outdoor venues.

Wireless Personal Area Network (WPAN)

Bluetooth is the industry standard wireless technology used for WPAN. Bluetooth devices in WPAN operate in a range up to 30 feet away. Compared to WLAN the speed and wireless operation range are both less than WLAN, but in return it doesn't use nearly as much power. This makes it ideal for personal devices, such as mobile phones, PDAs, headphones, laptops, speakers, and other devices that operate on batteries.

Who uses wireless?

Wireless technology has become so popular in recent years that almost everyone is using it, whether it's for home, office, business, D-Link has a wireless solution for it.

Home Uses/Benefits

- Gives everyone at home broadband access
- Surf the web, check email, instant message, etc.
- Gets rid of the cables around the house
- Simple and easy to use

Small Office and Home Office Uses/Benefits

- Stay on top of everything at home as you would at office
- Remotely access your office network from home
- Share Internet connection and printer with multiple computers
- No need to dedicate office space

Where is wireless used?

Wireless technology is expanding everywhere, not just at home or office. People like the freedom of mobility and it's becoming so popular that more and more public facilities now provide wireless access to attract people. The wireless connection in public places is usually called "hotspots".

Using a D-Link USB adapter with your laptop, you can access the hotspot to connect to the Internet from remote locations like: airports, hotels, coffee shops, libraries, restaurants, and convention centers.

Wireless network is easy to setup, but if you're installing it for the first time it could be quite a task not knowing where to start. That's why we've put together a few setup steps and tips to help you through the process of setting up a wireless network.

Tips

Here are a few things to keep in mind, when you install a wireless network.

Centralize your router or access point

Make sure you place the router/access point in a centralized location within your network for the best performance. Try to place the router/access point as high as possible in the room, so the signal gets dispersed throughout your home. If you have a two-story home, you may need a repeater to boost the signal to extend the range.

Eliminate Interference

Place home appliances such as cordless telephones, microwaves, and televisions as far away as possible from the router/access point. This would significantly reduce any interference that the appliances might cause since they operate on same frequency.

Security

Don't let your next-door neighbors or intruders connect to your wireless network. Secure your wireless network with the latest WPA3 security. Refer to the product manual for detail information on how to set it up.

Networking Basics

Check your IP address


After you install your new D-Link adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.

Click on **Start** and type *cmd* in the **Search** box.

At the prompt, type *ipconfig* and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

If the IP address is 0.0.0.0 or empty, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

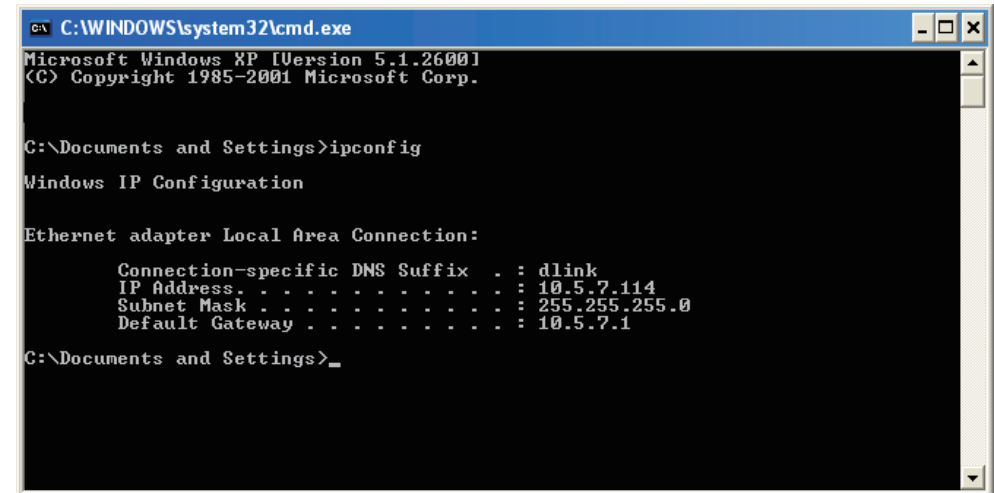

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address . . . . . : 10.5.7.114
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.5.7.1

C:\Documents and Settings>_
```

Statically Assign an IP address

1. If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

- Windows® 10** Start > Settings > Network & Internet.
- Windows® 7 /8** Start > Control Panel > Network and Internet > Network and Sharing Center
- Windows® XP** Start > Control Panel > Network Connections

2. Select **Wi-Fi > Manage known networks**. Choose the network you want to modify, right-click (Windows 7/8/XP) and then select **Properties**.


3. Under **IP assignment**, select **Edit**. For Windows 7/8/XP), select **Internet Protocol Version 4 (TCP/IPv4) Properties** or **Internet Protocol Version 6 Properties (TCP/IPv6)**. Then select **Use the Following IP Address**.

4. Under **Edit IP settings**, select **Manual**. If IPv4 is selected, type the IP address settings in **IP address**, **Subnet prefix length** (subnet mask), and **Gateway** fields. If IPv6 is selected, type the IP address settings in **IP address**, **Subnet prefix length**, and **Gateway** fields.

Example: Enter x.x.x.x for IPv4 addressing scheme (where x is between 0 and 255) and xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx for IPv6 addressing scheme (where x is a hexadecimal digit).

Set Preferred DNS the same as the LAN IP address of your router. The Alternate DNS is only optional or you may enter a DNS server from your ISP.

5. When you're done, click **Save**.

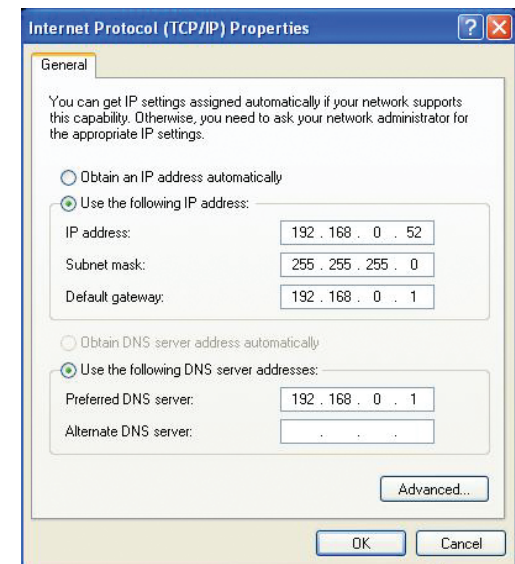

Wireless Security

This section will show you the different levels of security you can use to protect your data from intruders. The router offers the following types of security:

- WPA3 (Wi-Fi Protected Access 3)
- WPA2-PSK (Pre-Shared Key)
- WPA-PSK (Pre-Shared Key)
- WPA2 (Wi-Fi Protected Access 2)
- WPA (Wi-Fi Protected Access)

What is WPA?

WPA (Wi-Fi Protected Access), is a Wi-Fi standard that was designed to improve the security features of WEP (Wired Equivalent Privacy).

The 2 major improvements over WEP:

- Improved data encryption through the Temporal Key Integrity Protocol (TKIP). TKIP scrambles the keys using a hashing algorithm and by adding an integrity-checking feature, ensures that the keys haven't been tampered with. WPA2 is based on 802.11i and uses Advanced Encryption Standard (AES) instead of TKIP.
- User authentication, which is generally missing in WEP, through the extensible authentication protocol (EAP). WEP regulates access to a wireless network based on a computer's hardware-specific MAC address, which is relatively simple to be sniffed out and stolen. EAP is built on a more secure public-key encryption system to ensure that only authorized network users can access the network.

WPA-PSK/WPA2-PSK/WPA3-SAE uses a passphrase or key to authenticate your wireless connection. The key is an alphanumeric password between 8 and 63 characters long. The password can include symbols (!?*&_) and spaces. This key must be the exact same key entered on your wireless router or access point. Further, The Simultaneous Authentication of Equals (SAE) of WPA3 enhances the protection against dictionary attacks.

WPA/WPA2 incorporates user authentication through the Extensible Authentication Protocol (EAP). EAP is built on a more secure public key encryption system to ensure that only authorized network users can access the network.

WPA 3 has the strongest security among these with the increased cryptographic capability and the requirements of the Protected Management Frames (PMFs) to protect from snooping attack.

Technical Specifications

Device Interfaces

- Wireless Interface (2.4 GHz): IEEE 802.11ax/n/g/b
- Wireless Interface (5 GHz): IEEE 802.11ax/ac/n/a
- Three 10/100/1000 Mbps LAN port
- One 10/100/1000 Mbps WAN port
- LTE Modem

Band Information:

- Cat6
- LTE FDD: B1/B3/B5/B7/B8/B20/B28
- LTE TDD: B38/B40/B41
- 2CA Band combination:
 - B1 + B1/B3/B5/B7/B8/B20/B28
 - B3 + B3/B5/B7/B8/B20/B28
 - B7 + B5/B7/B8/B20/B28
 - B38 + B38; B40 + B40; B41 + B41
- WCDMA: B1/B3/B5/B8

Standards

- IEEE 802.11ax^{1,2,3}
- IEEE 802.11ac^{1,2,3}
- IEEE 802.3u
- IEEE 802.3ab
- IEEE 802.1p/q (WAN)
- IEEE802.3x
- IEEE 802.11h
- IEEE 802.11k/v
- IEEE 802.11n/g/b/a

Antenna Types

- Two Cellular external antennas with SMA connector
- Two Wi-Fi 2.4G internal antenna
- Two Wi-Fi 5G internal antenna

Security

- WPA3/WPA2/WPA-Personal
- Wi-Fi Protected Setup (WPS)

WAN Connection Type

- Static IP
- Dynamic IP
- PPPoE

Power

- Input: 100 to 240 V AC, 50 / 60 Hz
- Output: 12 V, 1.5 A

Temperature

- Operating: 0 to 40 °C (32 to 104 °F)
- Storage: -40 to 85 °C (-40 to 185 °F)

Humidity

- Operating: 10% to 95% maximum, non-condensing
- Storage: 0% to 95% maximum, non-condensing

Certifications

- CE

Dimensions

- L x W x H: 198 x 170.14 x 66.21 mm (7.79 x 6.69 x 2.60 in)

Weight

- 400 g

The marking information is located at the bottom of the apparatus.

¹ Maximum wireless signal rate derived from IEEE Standard 802.11a, 802.11g, 802.11n, 802.11ac and 802.11ax specifications. Actual data throughput will vary. Network conditions and environmental factors - including volume of network traffic, building materials and construction, and network overhead - lower actual data throughput rate. Environmental factors will adversely affect wireless signal range.

² Frequency Range varies depending on country's regulation.

³ The router does not include 5.25-5.35 GHz & 5.47-5.725 GHz in some regions.

Regulatory Statements

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Non-modifications Statement:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures. For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

Note

The country code selection is for non-USA models only and is not available to all USA models. Per FCC regulations, all WiFi product marketed in the USA must be fixed to USA operational channels only.

IMPORTANT NOTICE:

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

Innovation, Science and Economic Development Canada (ISED) Statement:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Innovation, Science and Economic Development Canada (ISED) Statement:

This device complies with ISED licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Caution :

- (i) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- (ii) the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate; and
- (iii) Users should also be advised that high-power radars are allocated as primary users (i.e. priority users) of the bands 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Avertissement:

- (i) les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
- (ii) le gain maximal d'antenne permis (pour les dispositifs utilisant la bande de 5725 à 5 850 MHz) doit être conforme à la limite de la p.i.r.e. spécifiée pour l'exploitation point à point et l'exploitation non point à point, selon le cas;
- (iii) De plus, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

Radiation Exposure Statement

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

Déclaration d'exposition aux radiations

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.



	Frequency Band(s) Frequenzband Fréquence bande(s) Bandas de Frecuencia Frequenza/e Frequentie(s)	Max. Output Power (EIRP) Max. Output Power Consommation d'énergie max. Potencia máxima de Salida Potenza max. Output Max. Output Power
5 G	5.15 – 5.25 GHz	200 mW
	5.25 – 5.35 GHz	200 mW
	5.47 – 5.725 GHz	1 W
2.4 G	2.4 – 2.4835 GHz	100 mW

European Community Declaration of Conformity:

Česky [Czech]	Tímto D-Link Corporation prohlašuje, že tento produkt, jeho příslušenství a software jsou v souladu se směrnicí 2014/53/EU. Celý text ES prohlášení o shodě vydaného EU a o firmwaru produktu lze stáhnout na stránkách k produktu www.dlink.com .
Dansk [Danish]	D-Link Corporation erklærer herved, at dette produkt, tilbehør og software er i overensstemmelse med direktiv 2014/53/EU. Den fulde tekst i EU-overensstemmelseserklæringen og produktfirmware kan wnloades fra produktsiden hos www.dlink.com .
Deutsch [German]	Hiermit erklärt die D-Link Corporation, dass dieses Produkt, das Zubehör und die Software der Richtlinie 2014/53/EU entsprechen. Der vollständige Text der Konformitätserklärung der Europäischen Gemeinschaft sowie die Firmware zum Produkt stehen Ihnen zum Herunterladen von der Produktseite im Internet auf www.dlink.com zur Verfügung.
Eesti [Estonian]	Käesolevaga kinnitab D-Link Corporation, et see toode, tarvikud ja tarkvara on kooskõlas direktiiviga 2014/53/EL. Euroopa Liidu vastavusdeklaratsiooni täistekst ja toote püsivara on allalaadimiseks saadaval tootelehel www.dlink.com .
English	Hereby, D-Link Corporation, declares that this product, accessories, and software are in compliance with directive 2014/53/EU. The full text of the EU Declaration of Conformity and product firmware are available for download from the product page at www.dlink.com
Español [Spanish]	Por la presente, D-Link Corporation declara que este producto, accesorios y software cumplen con las directivas 2014/53/UE. El texto completo de la declaración de conformidad de la UE y el firmware del producto están disponibles y se pueden descargar desde la página del producto en www.dlink.com .
Ελληνική [Greek]	Με την παρούσα, η D-Link Corporation δηλώνει ότι αυτό το προϊόν, τα αξεσουάρ και το λογισμικό συμμορφώνονται με την Οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης της ΕΕ και το υλικολογισμικό του προϊόντος είναι διαθέσιμα για λήψη από τη σελίδα του προϊόντος στην τοποθεσία www.dlink.com .
Français [French]	Par les présentes, D-Link Corporation déclare que ce produit, ces accessoires et ce logiciel sont conformes aux directives 2014/53/UE. Le texte complet de la déclaration de conformité de l'UE et le icroprogramme du produit sont disponibles au téléchargement sur la page des produits à www.dlink.com .
Italiano [Italian]	Con la presente, D-Link Corporation dichiara che questo prodotto, i relativi accessori e il software sono conformi alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE e il firmware del prodotto sono disponibili per il download dalla pagina del prodotto su www.dlink.com .

Latviski [Latvian]	Ar šo uzņēmums D-Link Corporation apliecina, ka šis produkts, piederumi un programmatūra atbilst direktīvai 2014/53/ES. ES atbilstības deklarācijas pilno tekstu un produkta aparātprogrammatūru var lejupielādēt attiecīgā produkta lapā vietnē www.dlink.com .
Lietuvių [Lithuanian]	Šiuo dokumentu „D-Link Corporation“ pareiškia, kad šis gaminys, priedai ir programinė įranga atitinka direktyvą 2014/53/ES. Visą ES atitikties deklaracijos tekstą ir gaminio programinę aparatinę įrangą galima atsisiųsti iš gaminio puslapio adresu www.dlink.com .
Nederlands [Dutch]	Hierbij verklaart D-Link Corporation dat dit product, accessoires en software voldoen aan de richtlijnen 2014/53/EU. De volledige tekst van de EU conformiteitsverklaring en productfirmware is beschikbaar voor download van de productpagina op www.dlink.com .
Malti [Maltese]	Bil-preżenti, D-Link Corporation tiddikjara li dan il-prodott, l-aċċessorji, u s-software huma konformi mad-Direttiva 2014/53/UE. Tista' tniżżel it-test sħiħ tad-dikjarazzjoni ta' konformità tal-UE u l-firmware tal-prodott mill-paġna tal-prodott fuq www.dlink.com .
Magyar [Hungarian]	Ezennel a D-Link Corporation kijelenti, hogy a jelen termék, annak tartozékai és szoftvere megfelelnek a 2014/53/EU sz. rendeletnek. Az EU Megfelelőségi nyilatkozat teljes szövege és a termék firmware a termék oldaláról tölthető le a www.dlink.com címen.
Polski [Polish]	D-Link Corporation niniejszym oświadcza, że ten produkt, akcesoria oraz oprogramowanie są zgodne z dyrektywami 2014/53/EU. Pełen tekst deklaracji zgodności UE oraz oprogramowanie sprzętowe do produktu można pobrać na stronie produktu w witrynie www.dlink.com .
Português [Portuguese]	Desta forma, a D-Link Corporation declara que este produto, os acessórios e o software estão em conformidade com a diretiva 2014/53/UE. O texto completo da declaração de conformidade da UE e do firmware
Slovensko[Slovenian]	Podjetje D-Link Corporation s tem izjavlja, da so ta izdelek, dodatna oprema in programnska oprema skladni z direktivami 2014/53/EU. Celotno besedilo izjave o skladnosti EU in vdelana programska oprema sta na voljo za prenos na strani izdelka na www.dlink.com .
Slovensky [Slovak]	Spoločnosť D-Link týmto vyhlasuje, že tento produkt, príslušenstvo a softvér sú v súlade so smernicou 214/53/EÚ. Úplné znenie vyhlásenia EÚ o zhode a firmvéri produktu sú k dispozícii na prevzatie zo stránky produktu www.dlink.com .
Suomi [Finnish]	D-Link Corporation täten vakuuttaa, että tämä tuote, lisävarusteet ja ohjelmisto ovat direktiivin 2014/53/EU vaatimusten mukaisia. Täydellinen EU-vaatimustenmukaisuusvakuutus samoin kuin tuotteen laiteohjelmisto ovat ladattavissa osoitteesta www.dlink.com .
Svenska[Swedish]	D-Link Corporation försäkrar härmed att denna produkt, tillbehör och programvara överensstämmer med direktiv 2014/53/EU. Hela texten med EU-försäkran om överensstämmelse och produkt-firmware kan hämtas från produktsidan på www.dlink.com .

Íslenska [Icelandic]	Hér með lýsir D-Link Corporation því yfir að þessi vara, fylgihlutir og hugbúnaður eru í samræmi við tilskipun 2014/53/EB. Sækja má ESB-samræmisýfirlýsinguna í heild sinni og fastbúnað vörunnar af vefsíðu vörunnar á www.dlink.com .
Norsk [Norwegian]	Herved erklærer D-Link Corporation at dette produktet, tilbehøret og programvaren er i samsvar med direktivet 2014/53/EU. Den fullstendige teksten i EU-erklæring om samsvar og produktets fastvare er tilgjengelig for nedlasting fra produktsiden på www.dlink.com .

Warning Statement:

The power outlet should be near the device and easily accessible.

NOTICE OF WIRELESS RADIO LAN USAGE IN THE EUROPEAN COMMUNITY (FOR WIRELESS PRODUCT ONLY):

- This device is restricted to indoor use when operated in the European Community using channels in the 5.15-5.35 GHz band to reduce the potential for interference.
- This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries. This equipment may be operated in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, and CY.

Usage Notes:

- To remain in conformance with European National spectrum usage regulations, frequency and channel limitations will be applied on the products according to the country where the equipment will be deployed.
- This device is restricted from functioning in Ad-hoc mode while operating in 5 GHz. Ad-hoc mode is direct peer-to-peer communication between two client devices without an Access Point.
- Access points will support DFS (Dynamic Frequency Selection) and TPC (Transmit Power Control) functionality as required when operating in 5 GHz band within the EU.
- Please refer to the product manual or datasheet to check whether your product uses 2.4 GHz and/or 5 GHz wireless.

HINWEIS ZUR VERWENDUNG VON DRAHTLOS-NETZWERK (WLAN) IN DER EUROPÄISCHEN GEMEINSCHAFT (NUR FÜR EIN DRAHTLOSES PRODUKT)

- Der Betrieb dieses Geräts in der Europäischen Gemeinschaft bei Nutzung von Kanälen im 5,15-5,35 GHz Frequenzband ist ausschließlich auf Innenräume beschränkt, um das Interferenzpotential zu reduzieren.
- Bei diesem Gerät handelt es sich um ein zum Einsatz in allen EU-Mitgliedsstaaten und in EFTA-Ländern - ausgenommen Frankreich. Der Betrieb dieses Geräts ist in den folgenden Ländern erlaubt: AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Gebrauchshinweise:

- Um den in Europa geltenden nationalen Vorschriften zum Nutzen des Funkspektrums weiterhin zu entsprechen, werden Frequenz und Kanalbeschränkungen, dem jeweiligen Land, in dem das Gerät zum Einsatz kommt, entsprechend, auf die Produkte angewandt.
- Die Funktionalität im Ad-hoc-Modus bei Betrieb auf 5 GHz ist für dieses Gerät eingeschränkt. Bei dem Ad-hoc-Modus handelt es sich um eine Peer-to-Peer-Kommunikation zwischen zwei Client-Geräten ohne einen Access Point.
- Access Points unterstützen die Funktionen DFS (Dynamic Frequency Selection) und TPC (Transmit Power Control) wie erforderlich bei Betrieb auf 5 GHz innerhalb der EU.
- Bitte schlagen Sie im Handbuch oder Datenblatt nach, ob Ihr Gerät eine 2,4 GHz und / oder 5 GHz Verbindung nutzt.

AVIS CONCERNANT L'UTILISATION DE LA RADIO SANS FIL LAN DANS LA COMMUNAUTÉ EUROPÉENNE (UNIQUEMENT POUR LES PRODUITS SANS FIL)

- Cet appareil est limité à un usage intérieur lorsqu'il est utilisé dans la Communauté européenne sur les canaux de la bande de 5,15 à 5,35 GHz afin de réduire les risques d'interférences.
- Cet appareil est un système de transmission à large bande (émetteur-récepteur) de 2,4 GHz, destiné à être utilisé dans tous les États-membres de l'UE et les pays de l'AELE. Cet équipement peut être utilisé dans les pays suivants : AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Notes d'utilisation:

- Pour rester en conformité avec la réglementation nationale européenne en matière d'utilisation du spectre, des limites de fréquence et de canal seront appliquées aux produits selon le pays où l'équipement sera déployé.
- Cet appareil ne peut pas utiliser le mode Ad-hoc lorsqu'il fonctionne dans la bande de 5 GHz. Le mode Adhoc fournit une communication directe pair à pair entre deux périphériques clients sans point d'accès.
- Les points d'accès prendront en charge les fonctionnalités DFS (Dynamic Frequency Selection) et TPC (Transmit Power Control) au besoin lors du fonctionnement dans la bande de 5 GHz au sein de l'UE.
- Merci de vous référer au guide d'utilisation ou de la fiche technique afin de vérifier si votre produit utilise 2.4 GHz et/ou 5 GHz sans fil.

AVISO DE USO DE LA LAN DE RADIO INALÁMBRICA EN LA COMUNIDAD EUROPEA (SOLO PARA EL PRODUCTO INALÁMBRICO)

- El uso de este dispositivo está restringido a interiores cuando funciona en la Comunidad Europea utilizando canales en la banda de 5,15-5,35 GHz, para reducir la posibilidad de interferencias.
- Este dispositivo es un sistema de transmisión (transceptor) de banda ancha de 2,4 GHz, pensado para su uso en todos los estados miembros de la UE y en los países de la AELC. Este equipo se puede utilizar en AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Notas de uso:

- Para seguir cumpliendo las normas europeas de uso del espectro nacional, se aplicarán limitaciones de frecuencia y canal en los productos en función del país en el que se pondrá en funcionamiento el equipo.
- Este dispositivo tiene restringido el funcionamiento en modo Ad-hoc mientras funcione a 5 Ghz. El modo Ad-hoc es la comunicación directa de igual a igual entre dos dispositivos cliente sin un punto de acceso.
- Los puntos de acceso admitirán la funcionalidad DFS (Selección de frecuencia dinámica) y TPC (Control de la potencia de transmisión) si es necesario cuando funcionan a 5 Ghz dentro de la UE.
- Por favor compruebe el manual o la ficha de producto para comprobar si el producto utiliza las bandas inalámbricas de 2.4 GHz y/o la de 5 GHz.

AVVISO PER L'USO DI LAN RADIO WIRELESS NELLA COMUNITÀ EUROPEA (SOLO PER PRODOTTI WIRELESS)

- Nella Comunità europea, l'uso di questo dispositivo è limitato esclusivamente agli ambienti interni sui canali compresi nella banda da 5,15 a 5,35 GHz al fine di ridurre potenziali interferenze. Questo dispositivo è un sistema di trasmissione a banda larga a 2,4 GHz (ricetrasmittente), destinato all'uso in tutti gli stati membri dell'Unione europea e nei paesi EFTA.
- Questo dispositivo può essere utilizzato in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Note per l'uso

- Al fine di mantenere la conformità alle normative nazionali europee per l'uso dello spettro di frequenze, saranno applicate limitazioni sulle frequenze e sui canali per il prodotto in conformità alle normative del paese in cui il dispositivo viene utilizzato.
- Questo dispositivo non può essere attivato in modalità Ad-hoc durante il funzionamento a 5 GHz. La modalità Ad-hoc è una comunicazione diretta peer-to-peer fra due dispositivi client senza un punto di accesso.
- I punti di accesso supportano le funzionalità DFS (Dynamic Frequency Selection) e TPC (Transmit Power Control) richieste per operare a 5 GHz nell'Unione europea.
- Ti invitiamo a fare riferimento al manuale del prodotto o alla scheda tecnica per verificare se il tuo prodotto utilizza le frequenze 2,4 GHz e/o 5 GHz.

KENNISGEVING VAN DRAADLOOS RADIO LAN-GEbruik IN DE EUROPESE GEMEENSCHAP (ALLEEN VOOR DRAADLOOS PRODUCT)

- Dit toestel is beperkt tot gebruik binnenshuis wanneer het wordt gebruikt in de Europese Gemeenschap gebruik makend van kanalen in de 5.15-5.35 GHz band om de kans op interferentie te beperken.
- Dit toestel is een 2.4 GHz breedband transmissiesysteem (transceiver) dat bedoeld is voor gebruik in alle EU lidstaten en EFTA landen. Deze uitrusting mag gebruikt worden in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Gebruiksaanwijzingen:

- Om de gebruiksvoorschriften van het Europese Nationale spectrum na te leven, zullen frequentie- en kanaalbeperkingen worden toegepast op de producten volgens het land waar de uitrusting gebruikt zal worden.
- Dit toestel kan niet functioneren in Ad-hoc mode wanneer het gebruikt wordt in 5 GHz. Ad-hoc mode is directe peer-to-peer communicatie tussen twee klantenapparaten zonder een toegangspunt.
- Toegangspunten ondersteunen DFS (Dynamic Frequency Selection) en TPC (Transmit Power Control) functionaliteit zoals vereist bij gebruik in 5 GHz binnen de EU.
- Raadpleeg de handleiding of de datasheet om te controleren of uw product gebruik maakt van 2.4 GHz en/of 5 GHz.

SAFETY INSTRUCTIONS

The following general safety guidelines are provided to help ensure your own personal safety and protect your product from potential damage. Remember to consult the product user instructions for more details.

- Static electricity can be harmful to electronic components. Discharge static electricity from your body (i.e. touching grounded bare metal) before touching the product.
- Do not attempt to service the product and never disassemble the product. For some products with a user replaceable battery, please read and follow the instructions in the user manual.
- Do not spill food or liquid on your product and never push any objects into the openings of your product.
- Do not use this product near water, areas with high humidity, or condensation unless the product is specifically rated for outdoor application.
- Keep the product away from radiators and other heat sources.
- Always unplug the product from mains power before cleaning and use a dry lint free cloth only.

SICHERHEITSVORSCHRIFTEN

Die folgenden allgemeinen Sicherheitsvorschriften dienen als Hilfe zur Gewährleistung Ihrer eigenen Sicherheit und zum Schutz Ihres Produkts. Weitere Details finden Sie in den Benutzeranleitungen zum Produkt.

- Statische Elektrizität kann elektronischen Komponenten schaden. Um Schäden durch statische Aufladung zu vermeiden, leiten Sie elektrostatische Ladungen von Ihrem Körper ab, (z. B. durch Berühren eines geerdeten blanken Metallteils), bevor Sie das Produkt berühren.
- Unterlassen Sie jeden Versuch, das Produkt zu warten, und versuchen Sie nicht, es in seine Bestandteile zu zerlegen. Für einige Produkte mit austauschbaren Akkus lesen Sie bitte das Benutzerhandbuch und befolgen Sie die dort beschriebenen Anleitungen.
- Vermeiden Sie, dass Speisen oder Flüssigkeiten auf Ihr Produkt gelangen, und stecken Sie keine Gegenstände in die Gehäuseschlitze oder -öffnungen Ihres Produkts.
- Verwenden Sie dieses Produkt nicht in unmittelbarer Nähe von Wasser und nicht in Bereichen mit hoher Luftfeuchtigkeit oder Kondensation, es sei denn, es ist speziell zur Nutzung in Außenbereichen vorgesehen und eingestuft.
- Halten Sie das Produkt von Heizkörpern und anderen Quellen fern, die Wärme erzeugen.
- Trennen Sie das Produkt immer von der Stromzufuhr, bevor Sie es reinigen und verwenden Sie dazu ausschließlich ein trockenes fusselfreies Tuch.

CONSIGNES DE SÉCURITÉ

Les consignes générales de sécurité ci-après sont fournies afin d'assurer votre sécurité personnelle et de protéger le produit d'éventuels dommages. Veuillez consulter les consignes d'utilisation du produit pour plus de détails.

- L'électricité statique peut endommager les composants électroniques. Déchargez l'électricité statique de votre corps (en touchant un objet en métal relié à la terre par exemple) avant de toucher le produit.
- N'essayez pas d'intervenir sur le produit et ne le démontez jamais. Pour certains produits contenant une batterie remplaçable par l'utilisateur, veuillez lire et suivre les consignes contenues dans le manuel d'utilisation.
- Ne renversez pas d'aliments ou de liquide sur le produit et n'insérez jamais d'objets dans les orifices.
- N'utilisez pas ce produit à proximité d'un point d'eau, de zones très humides ou de condensation sauf si le produit a été spécifiquement conçu pour une application extérieure.
- Éloignez le produit des radiateurs et autres sources de chaleur.
- Débranchez toujours le produit de l'alimentation avant de le nettoyer et utilisez uniquement un chiffon sec non pelucheux.

INSTRUCCIONES DE SEGURIDAD

Las siguientes directrices de seguridad general se facilitan para ayudarle a garantizar su propia seguridad personal y para proteger el producto frente a posibles daños. No olvide consultar las instrucciones del usuario del producto para obtener más información.

- La electricidad estática puede resultar nociva para los componentes electrónicos. Descargue la electricidad estática de su cuerpo (p. ej., tocando algún metal sin revestimiento conectado a tierra) antes de tocar el producto.
- No intente realizar el mantenimiento del producto ni lo desmonte nunca. Para algunos productos con batería reemplazable por el usuario, lea y siga las instrucciones del manual de usuario.
- No derrame comida o líquidos sobre el producto y nunca deje que caigan objetos en las aberturas del mismo.
- No utilice este producto cerca del agua, en zonas con humedad o condensación elevadas a menos que el producto esté clasificado específicamente para aplicación en exteriores.
- Mantenga el producto alejado de los radiadores y de otras fuentes de calor.
- Desenchufe siempre el producto de la alimentación de red antes de limpiarlo y utilice solo un paño seco sin pelusa.

ISTRUZIONI PER LA SICUREZZA

Le seguenti linee guida sulla sicurezza sono fornite per contribuire a garantire la sicurezza personale degli utenti e a proteggere il prodotto da potenziali danni. Per maggiori dettagli, consultare le istruzioni per l'utente del prodotto.

- L'elettricità statica può essere pericolosa per i componenti elettronici. Scaricare l'elettricità statica dal corpo (ad esempio toccando una parte metallica collegata a terra) prima di toccare il prodotto.
- Non cercare di riparare il prodotto e non smontarlo mai. Per alcuni prodotti dotati di batteria sostituibile dall'utente, leggere e seguire le istruzioni riportate nel manuale dell'utente.
- Non versare cibi o liquidi sul prodotto e non spingere mai alcun oggetto nelle aperture del prodotto.
- Non usare questo prodotto vicino all'acqua, in aree con elevato grado di umidità o soggette a condensa a meno che il prodotto non sia specificatamente approvato per uso in ambienti esterni.
- Tenere il prodotto lontano da caloriferi e altre fonti di calore.
- Scollegare sempre il prodotto dalla presa elettrica prima di pulirlo e usare solo un panno asciutto che non lasci filacce.

VEILIGHEIDSINFORMATIE

De volgende algemene veiligheidsinformatie werd verstrekt om uw eigen persoonlijke veiligheid te waarborgen en uw product te beschermen tegen mogelijke schade. Denk eraan om de gebruikersinstructies van het product te raadplegen voor meer informatie.

- Statische elektriciteit kan schadelijk zijn voor elektronische componenten. Ontlaad de statische elektriciteit van uw lichaam (d.w.z. het aanraken van geaard bloot metaal) voordat u het product aanraakt.
- U mag nooit proberen het product te onderhouden en u mag het product nooit demonteren. Voor sommige producten met door de gebruiker te vervangen batterij, dient u de instructies in de gebruikershandleiding te lezen en te volgen.
- Mors geen voedsel of vloeistof op uw product en u mag nooit voorwerpen in de openingen van uw product duwen.
- Gebruik dit product niet in de buurt van water, gebieden met hoge vochtigheid of condensatie, tenzij het product specifiek geclassificeerd is voor gebruik buitenshuis.
- Houd het product uit de buurt van radiators en andere warmtebronnen.
- U dient het product steeds los te koppelen van de stroom voordat u het reinigt en gebruik uitsluitend een droge pluisvrije doek.

Disposing and Recycling Your Product



EN

ENGLISH



This symbol on the product or packaging means that according to local laws and regulations this product should not be disposed of in household waste but sent for recycling. Please take it to a collection point designated by your local authorities once it has reached the end of its life, some will accept products for free. By recycling the product and its packaging in this manner you help to conserve the environment and protect human health.

D-Link and the Environment

At D-Link, we understand and are committed to reducing any impact our operations and products may have on the environment. To minimise this impact D-Link designs and builds its products to be as environmentally friendly as possible, by using recyclable, low toxic materials in both products and packaging.

D-Link recommends that you always switch off or unplug your D-Link products when they are not in use. By doing so you will help to save energy and reduce CO2 emissions.

To learn more about our environmentally responsible products and packaging please visit www.dlinkgreen.com.

DEUTSCH

DE



Dieses Symbol auf dem Produkt oder der Verpackung weist darauf hin, dass dieses Produkt gemäß bestehender örtlicher Gesetze und Vorschriften nicht über den normalen Hausmüll entsorgt werden sollte, sondern einer Wiederverwertung zuzuführen ist. Bringen Sie es bitte zu einer von Ihrer Kommunalbehörde entsprechend amtlich ausgewiesenen Sammelstelle, sobald das Produkt das Ende seiner Nutzungsdauer erreicht hat. Für die Annahme solcher Produkte erheben einige dieser Stellen keine Gebühren. Durch ein auf diese Weise durchgeführtes Recycling des Produkts und seiner Verpackung helfen Sie, die Umwelt zu schonen und die menschliche Gesundheit zu schützen.

D-Link und die Umwelt

D-Link ist sich den möglichen Auswirkungen seiner Geschäftstätigkeiten und seiner Produkte auf die Umwelt bewusst und fühlt sich verpflichtet, diese entsprechend zu mindern. Zu diesem Zweck entwickelt und stellt D-Link seine Produkte mit dem Ziel größtmöglicher Umweltfreundlichkeit her und verwendet wiederverwertbare, schadstoffarme Materialien bei Produktherstellung und Verpackung.

D-Link empfiehlt, Ihre Produkte von D-Link, wenn nicht in Gebrauch, immer auszuschalten oder vom Netz zu nehmen. Auf diese Weise helfen Sie, Energie zu sparen und CO2-Emissionen zu reduzieren.

Wenn Sie mehr über unsere umweltgerechten Produkte und Verpackungen wissen möchten, finden Sie entsprechende Informationen im Internet unter www.dlinkgreen.com.

FRANÇAIS**FR**

Ce symbole apposé sur le produit ou son emballage signifie que, conformément aux lois et réglementations locales, ce produit ne doit pas être éliminé avec les déchets domestiques mais recyclé. Veuillez le rapporter à un point de collecte prévu à cet effet par les autorités locales; certains accepteront vos produits gratuitement. En recyclant le produit et son emballage de cette manière, vous aidez à préserver l'environnement et à protéger la santé de l'homme.

D-Link et l'environnement

Chez D-Link, nous sommes conscients de l'impact de nos opérations et produits sur l'environnement et nous engageons à le réduire. Pour limiter cet impact, D-Link conçoit et fabrique ses produits de manière aussi écologique que possible, en utilisant des matériaux recyclables et faiblement toxiques, tant dans ses produits que ses emballages.

D-Link recommande de toujours éteindre ou débrancher vos produits D-Link lorsque vous ne les utilisez pas. Vous réaliserez ainsi des économies d'énergie et réduirez vos émissions de CO₂.

Pour en savoir plus sur les produits et emballages respectueux de l'environnement, veuillez consulter le www.dlinkgreen.com.

ESPAÑOL**ES**

Este símbolo en el producto o el embalaje significa que, de acuerdo con la legislación y la normativa local, este producto no se debe desechar en la basura doméstica sino que se debe reciclar. Llévelo a un punto de recogida designado por las autoridades locales una vez que ha llegado al fin de su vida útil; algunos de ellos aceptan recogerlos de forma gratuita. Al reciclar el producto y su embalaje de esta forma, contribuye a preservar el medio ambiente y a proteger la salud de los seres humanos.

D-Link y el medio ambiente

En D-Link, comprendemos y estamos comprometidos con la reducción del impacto que puedan tener nuestras actividades y nuestros productos en el medio ambiente. Para reducir este impacto, D-Link diseña y fabrica sus productos para que sean lo más ecológicos posible, utilizando materiales reciclables y de baja toxicidad tanto en los productos como en el embalaje.

D-Link recomienda apagar o desenchufar los productos D-Link cuando no se estén utilizando. Al hacerlo, contribuirá a ahorrar energía y a reducir las emisiones de CO₂.

Para obtener más información acerca de nuestros productos y embalajes ecológicos, visite el sitio www.dlinkgreen.com.

ITALIANO**IT**

La presenza di questo simbolo sul prodotto o sulla confezione del prodotto indica che, in conformità alle leggi e alle normative locali, questo prodotto non deve essere smaltito nei rifiuti domestici, ma avviato al riciclo. Una volta terminato il ciclo di vita utile, portare il prodotto presso un punto di raccolta indicato dalle autorità locali. Alcuni questi punti di raccolta accettano gratuitamente i prodotti da riciclare. Scegliendo di riciclare il prodotto e il relativo imballaggio, si contribuirà a preservare l'ambiente e a salvaguardare la salute umana.

D-Link e l'ambiente

D-Link cerca da sempre di ridurre l'impatto ambientale dei propri stabilimenti e dei propri prodotti. Allo scopo di ridurre al minimo tale impatto, D-Link progetta e realizza i propri prodotti in modo che rispettino il più possibile l'ambiente, utilizzando materiali riciclabili a basso tasso di tossicità sia per i prodotti che per gli imballaggi.

D-Link raccomanda di spegnere sempre i prodotti D-Link o di scollegarne la spina quando non vengono utilizzati. In questo modo si contribuirà a risparmiare energia e a ridurre le emissioni di anidride carbonica.

Per ulteriori informazioni sui prodotti e sugli imballaggi D-Link a ridotto impatto ambientale, visitate il sito all'indirizzo www.dlinkgreen.com.

NEDERLANDS**NL**

Dit symbool op het product of de verpakking betekent dat dit product volgens de plaatselijke wetgeving niet mag worden weggegooid met het huishoudelijk afval, maar voor recyclage moeten worden ingeleverd. Zodra het product het einde van de levensduur heeft bereikt, dient u het naar een inzamelpunt te brengen dat hiertoe werd aangeduid door uw plaatselijke autoriteiten, sommige autoriteiten accepteren producten zonder dat u hiervoor dient te betalen. Door het product en de verpakking op deze manier te recyclen helpt u het milieu en de gezondheid van de mens te beschermen.

D-Link en het milieu

Bij D-Link spannen we ons in om de impact van onze handelingen en producten op het milieu te beperken. Om deze impact te beperken, ontwerpt en bouwt D-Link zijn producten zo milieuvriendelijk mogelijk, door het gebruik van recycleerbare producten met lage toxiciteit in product en verpakking.

D-Link raadt aan om steeds uw D-Link producten uit te schakelen of uit de stekker te halen wanneer u ze niet gebruikt. Door dit te doen bespaart u energie en beperkt u de CO₂-emissies.

Breng een bezoek aan www.dlinkgreen.com voor meer informatie over onze milieuverantwoorde producten en verpakkingen.

POLSKI**PL**

Ten symbol umieszczony na produkcie lub opakowaniu oznacza, że zgodnie z miejscowym prawem i lokalnymi przepisami niniejszego produktu nie wolno wyrzucać jak odpady czy śmieci z gospodarstwa domowego, lecz należy go poddać procesowi recyklingu. Po zakończeniu użytkowania produktu, niektóre odpowiednie do tego celu podmioty przyjmą takie produkty nieodpłatnie, dlatego prosimy dostarczyć go do punktu zbiórki wskazanego przez lokalne władze. Poprzez proces recyklingu i dzięki takiemu postępowaniu z produktem oraz jego opakowaniem, pomogą Państwo chronić środowisko naturalne i dbać o ludzkie zdrowie.

D-Link i środowisko

D-Link podchodzimy w sposób świadomy do ochrony otoczenia oraz jesteśmy zaangażowani w zmniejszanie wpływu naszych działań i produktów na środowisko naturalne. W celu zminimalizowania takiego wpływu firma D-Link konstruuje i wytwarza swoje produkty w taki sposób, aby były one jak najbardziej przyjazne środowisku, stosując do tych celów materiały nadające się do powtórnego wykorzystania, charakteryzujące się małą toksycznością zarówno w przypadku samych produktów jak i opakowań.

Firma D-Link zaleca, aby Państwo zawsze prawidłowo wyłączali z użytku swoje produkty D-Link, gdy nie są one wykorzystywane. Postępując w ten sposób pozwalają Państwo oszczędzać energię i zmniejszać emisje CO₂.

Aby dowiedzieć się więcej na temat produktów i opakowań mających wpływ na środowisko prosimy zapoznać się ze stroną Internetową www.dlinkgreen.com.

ČESKY**CZ**

Tento symbol na výrobku nebo jeho obalu znamená, že podle místně platných předpisů se výrobek nesmí vyhazovat do komunálního odpadu, ale odeslat k recyklaci. Až výrobek doslouží, odnešte jej prosím na sběrné místo určené místními úřady k tomuto účelu. Někteřá sběrná místa přijímají výrobky zdarma. Recyklací výrobku i obalu pomáháte chránit životní prostředí i lidské zdraví.

D-Link a životní prostředí

Ve společnosti D-Link jsme si vědomi vlivu našich provozů a výrobků na životní prostředí a snažíme se o minimalizaci těchto vlivů. Proto své výrobky navrhujeme a vyrábíme tak, aby byly co nejekologičtější, a ve výrobcích i obalech používáme recyklovatelné a nízkotoxické materiály.

Společnost D-Link doporučuje, abyste své výrobky značky D-Link vypnuli nebo vytáhli ze zásuvky vždy, když je nepoužíváte. Pomůžete tak šetřit energii a snížit emise CO₂.

Více informací o našich ekologických výrobcích a obalech najdete na adrese www.dlinkgreen.com.

MAGYAR**HU**

Ez a szimbólum a terméken vagy a csomagoláson azt jelenti, hogy a helyi törvényeknek és szabályoknak megfelelően ez a termék nem semmisíthető meg a háztartási hulladékkal együtt, hanem újrahasznosításra kell küldeni. Kérjük, hogy a termék élettartamának elteltét követően vigye azt a helyi hatóság által kijelölt gyűjtőhelyre. A termékek egyes helyeken ingyen elhelyezhetők. A termék és a csomagolás újrahasznosításával segíti védeni a környezetet és az emberek egészségét.

A D-Link és a környezet

A D-Linknél megértjük és elköteleztük magunkat a műveleteink és termékeink környezetre gyakorolt hatásainak csökkentésére. Az ezen hatás csökkentése érdekében a D-Link a lehető leginkább környezetbarát termékeket tervez és gyárt azáltal, hogy újrahasznosítható, alacsony károsanyag-tartalmú termékeket gyárt és csomagolásokat alkalmaz.

A D-Link azt javasolja, hogy mindig kapcsolja ki vagy húzza ki a D-Link termékeket a tápforrásból, ha nem használja azokat. Ezzel segít az energia megtakarításában és a széndioxid kibocsátásának csökkentésében.

Környezetbarát termékeinkről és csomagolásainkról további információkat a www.dlinkgreen.com weboldalon tudhat meg.

NORSK**NO**

Dette symbolet på produktet eller forpakningen betyr at dette produktet ifølge lokale lover og forskrifter ikke skal kastes sammen med husholdningsavfall, men leveres inn til gjenvinning. Vennligst ta det til et innsamlingssted anvist av lokale myndigheter når det er kommet til slutten av levetiden. Noen steder aksepteres produkter uten avgift. Ved på denne måten å gjenvinne produktet og forpakningen hjelper du å verne miljøet og beskytte folks helse.

D-Link og miljøet

Hos D-Link forstår vi oss på og er forpliktet til å minske innvirkningen som vår drift og våre produkter kan ha på miljøet. For å minimalisere denne innvirkningen designer og lager D-Link produkter som er så miljøvennlig som mulig, ved å bruke resirkulerbare, lav-toksiske materialer både i produktene og forpakningen.

D-Link anbefaler at du alltid slår av eller frakobler D-Link-produkter når de ikke er i bruk. Ved å gjøre dette hjelper du å spare energi og å redusere CO2-utslipp.

For mer informasjon angående våre miljøansvarlige produkter og forpakninger kan du gå til www.dlinkgreen.com.

DANSK**DK**

Dette symbol på produktet eller emballagen betyder, at dette produkt i henhold til lokale love og regler ikke må bortskaffes som husholdningsaffald, mens skal sendes til genbrug. Indlever produktet til et indsamlingssted som angivet af de lokale myndigheder, når det er nået til slutningen af dets levetid. I nogle tilfælde vil produktet blive modtaget gratis. Ved at indlevere produktet og dets emballage til genbrug på denne måde bidrager du til at beskytte miljøet og den menneskelige sundhed.

D-Link og miljøet

Hos D-Link forstår vi og bestræber os på at reducere enhver indvirkning, som vores aktiviteter og produkter kan have på miljøet. For at minimere denne indvirkning designer og producerer D-Link sine produkter, så de er så miljøvenlige som muligt, ved at bruge genanvendelige materialer med lavt giftighedsniveau i både produkter og emballage.

D-Link anbefaler, at du altid slukker eller frakobler dine D-Link-produkter, når de ikke er i brug. Ved at gøre det bidrager du til at spare energi og reducere CO₂-udledningerne.

Du kan finde flere oplysninger om vores miljømæssigt ansvarlige produkter og emballage på www.dlinkgreen.com.

SUOMI**FI**


Tämä symboli tuotteen pakkauksessa tarkoittaa, että paikallisten lakien ja säännösten mukaisesti tätä tuotetta ei pidä hävittää yleisen kotitalousjätteen seassa vaan se tulee toimittaa kierrätettäväksi. Kun tuote on elinkaarensa päässä, toimita se lähimpään viranomaisten hyväksymään kierrätyspisteeseen. Kierrättämällä käytetyn tuotteen ja sen pakkauksen autat tukemaan sekä ympäristön että ihmisten terveyttä ja hyvinvointia.

D-Link ja ympäristö

D-Link ymmärtää ympäristönsuojelun tärkeyden ja on sitoutunut vähentämään tuotteistaan ja niiden valmistuksesta ympäristölle mahdollisesti aiheutuvia haittavaikutuksia. Nämä negatiiviset vaikutukset minimoidakseen D-Link suunnittelee ja valmistaa tuotteensa mahdollisimman ympäristöystävällisiksi käyttämällä kierrätettäviä, alhaisia pitoisuuksia haitallisia aineita sisältäviä materiaaleja sekä tuotteissaan että niiden pakkauksissa.

Suosittellemme, että irrotat D-Link-tuotteesi virtalähteestä tai sammutat ne aina, kun ne eivät ole käytössä. Toimimalla näin autat säästämään energiaa ja vähentämään hiilidioksiidipäästöjä.

Lue lisää ympäristöystävällisistä D-Link-tuotteista ja pakkauksistamme osoitteesta www.dlinkgreen.com.

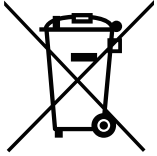SVENSKA**SE**

Den här symbolen på produkten eller förpackningen betyder att produkten enligt lokala lagar och föreskrifter inte skall kastas i hushållssoporna utan i stället återvinnas. Ta den vid slutet av dess livslängd till en av din lokala myndighet utsedd uppsamlingsplats, vissa accepterar produkter utan kostnad. Genom att på detta sätt återvinna produkten och förpackningen hjälper du till att bevara miljön och skydda människors hälsa.

D-Link och miljön

På D-Link förstår vi och är fast beslutna att minska den påverkan våra verksamheter och produkter kan ha på miljön. För att minska denna påverkan utformar och bygger D-Link sina produkter för att de ska vara så miljövänliga som möjligt, genom att använda återvinningsbara material med låg gifthalt i både produkter och förpackningar.

D-Link rekommenderar att du alltid stänger av eller kopplar ur dina D-Link produkter när du inte använder dem. Genom att göra detta hjälper du till att spara energi och minska utsläpp av koldioxid.

För mer information om våra miljöansvariga produkter och förpackningar www.dlinkgreen.com.

PORTUGUÊS**PT**

Este símbolo no produto ou embalagem significa que, de acordo com as leis e regulamentações locais, este produto não deverá ser eliminado juntamente com o lixo doméstico mas enviado para a reciclagem. Transporte-o para um ponto de recolha designado pelas suas autoridades locais quando este tiver atingido o fim da sua vida útil, alguns destes pontos aceitam produtos gratuitamente. Ao reciclar o produto e respectiva embalagem desta forma, ajuda a preservar o ambiente e protege a saúde humana.

A D-Link e o ambiente

Na D-Link compreendemos e comprometemo-nos com a redução do impacto que as nossas operações e produtos possam ter no ambiente. Para minimizar este impacto a D-Link concebe e constrói os seus produtos para que estes sejam o mais inofensivos para o ambiente possível, utilizando materiais recicláveis e não tóxicos tanto nos produtos como nas embalagens.

A D-Link recomenda que desligue os seus produtos D-Link quando estes não se encontrarem em utilização. Com esta acção ajudará a poupar energia e reduzir as emissões de CO₂.

Para saber mais sobre os nossos produtos e embalagens responsáveis a nível ambiental visite www.dlinkgreen.com.