


# How to use SNMP to get OSPF Link-State Database Area ID

Created at 2011/05/31

## Introduction

Simple Network Management Protocol (SNMP) is a widely used protocol for monitoring the health and welfare of network equipment.

## Topology

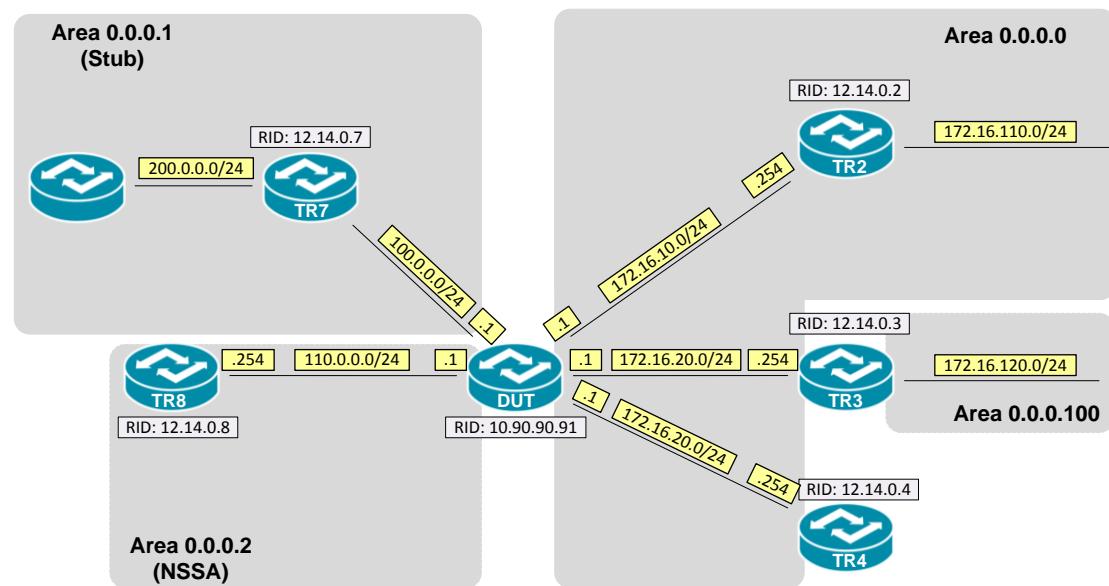

# OID

## ospfLsdbAreaId

Name: ospfLsdbAreaId  
Type: OBJECT-TYPE  
OID: 1.3.6.1.2.1.14.4.1.1  
Full path: iso(1).org(3).dod(6).internet(1).mib-2(1).ospf(14).ospfLsdbTable(4).ospfLsdbEntry(1).ospfLsdbAreaId(1)  
Module: OSPF-MIB  
  
Parent: ospfLsdbEntry  
Next sibling: ospfLsdbType  
  
Numerical syntax: IP Address  
Base syntax: IpAddress  
Composed syntax: AreaID  
Status: current  
Max access: read-only  
  
Reference: OSPF Version 2, Appendix C.2 Area parameters  
  
Description: The 32 bit identifier of the Area from which the ISA was received.

## Step-by-Step

### I. SNMP Command

```
snmpwalk -v 2c -c private <DUT IP> 1.3.6.1.2.1.14.4.1.1.<Area ID>
```

### II. Result

```
C:>snmpwalk -v 2c -c private -m ALL 192.168.1.91 1.3.6.1.2.1.14.4.1.1.0.0.0.0
OSPF-MIB::ospfLsdbAreaId.0.0.0.0.routerLink.10.90.90.91.10.90.90.91 = IpAddress: 0.0.0.0
OSPF-MIB::ospfLsdbAreaId.0.0.0.0.routerLink.12.14.0.2.12.14.0.2 = IpAddress: 0.0.0.0
OSPF-MIB::ospfLsdbAreaId.0.0.0.0.routerLink.12.14.0.3.12.14.0.3 = IpAddress: 0.0.0.0
OSPF-MIB::ospfLsdbAreaId.0.0.0.0.routerLink.12.14.0.4.12.14.0.4 = IpAddress: 0.0.0.0
OSPF-MIB::ospfLsdbAreaId.0.0.0.0.networkLink.172.16.10.1.10.90.90.91 = IpAddress: 0.0.0.0
OSPF-MIB::ospfLsdbAreaId.0.0.0.0.networkLink.172.16.20.1.10.90.90.91 = IpAddress: 0.0.0.0
OSPF-MIB::ospfLsdbAreaId.0.0.0.0.networkLink.172.16.30.1.10.90.90.91 = IpAddress: 0.0.0.0
OSPF-MIB::ospfLsdbAreaId.0.0.0.0.summaryLink.100.0.0.0.10.90.90.91 = IpAddress: 0.0.0.0
OSPF-MIB::ospfLsdbAreaId.0.0.0.0.summaryLink.110.0.0.0.10.90.90.91 = IpAddress: 0.0.0.0
OSPF-MIB::ospfLsdbAreaId.0.0.0.0.summaryLink.172.16.120.0.12.14.0.3 = IpAddress: 0.0.0.0
OSPF-MIB::ospfLsdbAreaId.0.0.0.0.summaryLink.200.0.0.0.10.90.90.91 = IpAddress: 0.0.0.0
```

- OSPF Link-State database of Backbone area

Area ID	LSDB Type	Advertising Router ID	Link State ID	Cost	Sequence Number
0.0.0.0	RTRLink	10.90.90.91	10.90.90.91/0	*	0x8000002A
0.0.0.0	RTRLink	12.14.0.2	12.14.0.2/0	*	0x80000024
0.0.0.0	RTRLink	12.14.0.3	12.14.0.3/0	*	0x80000025
0.0.0.0	RTRLink	12.14.0.4	12.14.0.4/0	*	0x80000026
0.0.0.0	NETLink	10.90.90.91	172.16.10.1/24	*	0x80000004
0.0.0.0	NETLink	10.90.90.91	172.16.20.1/24	*	0x80000004
0.0.0.0	NETLink	10.90.90.91	172.16.30.1/24	*	0x80000004
0.0.0.0	Summary	10.90.90.91	100.0.0.0/24	1	0x80000004
0.0.0.0	Summary	10.90.90.91	110.0.0.0/24	1	0x80000004
0.0.0.0	Summary	12.14.0.3	172.16.120.0/24	50	0x80000023
0.0.0.0	Summary	10.90.90.91	200.0.0.0/24	251	0x80000005

## Reference

- This example is made by DGS-3600 series in firmware R 2.80.B61.
- SNMP Tools is Net-SNMP.